

**SIEMENS**



***icons***<sup>TM</sup>

**USER'S MANUAL**

***Version 3.7.1***



# SIEMENS

Advanced Traffic Management System

*icons*<sup>TM</sup>

## USER'S MANUAL

*Version 3.7.1*

Copyright © 2002

*Prepared by:*



Siemens Energy & Automation  
Gardner Transportation Systems Business Unit



## Advanced Traffic Management System Version 3.7.1

# USER'S MANUAL

*icons* is a trademark of Econolite Control Products, Inc.

All information contained herein is the exclusive proprietary property of Siemens Energy & Automation, Inc., Gardner Transportation Systems Business Unit (Siemens GTS). This publication is protected by Federal Copyright Law, with all rights reserved. No part of this publication may be reproduced, stored in a retrieval system, transcribed, or transmitted in any form, by any means, without express written permission from Siemens GTS.

*Siemens GTS reserves the right to make changes to this manual without further notification. The information presented herein is thought to be fully consistent with the product it describes. However, Siemens GTS does not assume liability for the contents of this publication and shall not be responsible for any damages, direct or consequential, caused by reliance on the materials presented. If you have comments concerning this manual, or for technical support, please contact Siemens GTS.*

Copyright© 2002

**Siemens Energy & Automation, Inc.**  
**Gardner Transportation Systems Business Unit**

All Rights Reserved

***icons*<sup>TM</sup>**  
**ADVANCED TRAFFIC MANAGEMENT SYSTEM**  
**USER'S MANUAL**

**Table of Contents**

---

<b>SECTION 1 - INTRODUCTION.....</b>	<b>1-1</b>
<b>Overview .....</b>	<b>1-1</b>
<b>System Description.....</b>	<b>1-1</b>
Communications .....	1-2
Common User Interface .....	1-2
<b>SECTION 2 - GENERAL OPERATION .....</b>	<b>2-1</b>
<b>System Startup.....</b>	<b>2-1</b>
<b>Sign-On/Off .....</b>	<b>2-2</b>
<b>The <i>icons</i><sup>TM</sup> Workspace .....</b>	<b>2-2</b>
Menu Bar .....	2-3
Selection Bar .....	2-3
Status Bar .....	2-3
Button Bar.....	2-4
Logo Panel.....	2-4
Map Display .....	2-4
Aspect Ratio .....	2-4
Layers.....	2-5
Auto Layers .....	2-5
Map Zoom .....	2-5
<b>Customizing The Icons Workspace.....</b>	<b>2-6</b>
<b>Saving The Icons Workspace .....</b>	<b>2-6</b>
<b>System Maps .....</b>	<b>2-7</b>
<b>System Objects .....</b>	<b>2-8</b>
Object Selection.....	2-9
<b><i>icons</i><sup>TM</sup> Help .....</b>	<b>2-11</b>
About <i>icons</i> <sup>TM</sup> .....	2-14
<b>SECTION 3 - SECURITY .....</b>	<b>3-1</b>
<b>Multijurisdictional Access.....</b>	<b>3-4</b>
Managing Jurisdictions .....	3-4
Managing User Groups .....	3-5
User Group Association.....	3-6
Associating Signals with Jurisdictions .....	3-7

**icons™**  
**ADVANCED TRAFFIC MANAGEMENT SYSTEM**  
**USER'S MANUAL**  
**Table of Contents (Continued)**

---

<b>SECTION 4 - SYSTEM CONFIGURATION .....</b>	<b>4-1</b>
<b>Define a System .....</b>	<b>4-2</b>
Mandatory Parameters .....	4-2
Optional Parameters.....	4-3
<b>Define a Zone.....</b>	<b>4-3</b>
Mandatory Parameters .....	4-3
Optional Parameters.....	4-4
<b>Define a Section .....</b>	<b>4-4</b>
Mandatory Parameters .....	4-4
Optional Parameters.....	4-5
<b>Define a Signal .....</b>	<b>4-5</b>
Mandatory Parameters .....	4-5
Optional Parameters.....	4-7
<b>Define a Detector.....</b>	<b>4-7</b>
Mandatory Parameters .....	4-7
Optional Parameters.....	4-8
<b>Define a Link.....</b>	<b>4-8</b>
Mandatory Parameters .....	4-8
Optional Parameters.....	4-9
<b>Define a Master.....</b>	<b>4-9</b>
Mandatory Parameters .....	4-9
Optional Parameters.....	4-10
<b>Define an Aries Node .....</b>	<b>4-10</b>
Mandatory Parameters .....	4-10
Optional Parameters.....	4-11
<b>Define a CCTV .....</b>	<b>4-11</b>
Mandatory Parameters .....	4-11
Optional Parameters.....	4-12
<b>Event Mapping Configuration .....</b>	<b>4-12</b>
Event Mapping Priority Sequence .....	4-15
<b>Stuck Preempt Configuration.....</b>	<b>4-16</b>
<b>Time Drift Configuration (ASC/2 – NTCIP Only) .....</b>	<b>4-17</b>
<b>Event Log Monitor Configuration .....</b>	<b>4-18</b>
<b>SECTION 5 - TRAFFIC SIGNAL OPERATION .....</b>	<b>5-1</b>
<b>System setup and configuration.....</b>	<b>5-1</b>
Add Controller to Communications Server .....	5-1
Add Intersection using System Configuration Editor .....	5-2
Add Intersection to Graphics Display .....	5-2
<b>Monitoring.....</b>	<b>5-2</b>

**icons™**  
**ADVANCED TRAFFIC MANAGEMENT SYSTEM**  
**USER'S MANUAL**  
**Table of Contents (Continued)**

---

Left Panel - Graphics .....	5-2
Right Panel – Information .....	5-3
Right Panel – Timing .....	5-3
Right Panel – Alarms Detail.....	5-6
Bottom Panel – Phase Data .....	5-7
<b>Control .....</b>	<b>5-9</b>
Control Hierarchy and Logic .....	5-9
Manual Override .....	5-11
TOD Schedule .....	5-14
Holiday Assignment.....	5-17
Traffic Responsive .....	5-19
Action Set Editor .....	5-23
Active Configuration .....	5-25
<b>Clock Synchronization.....</b>	<b>5-26</b>
<b>SECTION 6 - SYSTEM REPORTS .....</b>	<b>6-1</b>
System Status .....	6-1
Communication Status .....	6-3
Event Log .....	6-5
Alarm Report .....	6-9
Stuck Preempt Events Report.....	6-10
<b>SECTION 7 - SYSTEM DETECTOR DATA.....</b>	<b>7-1</b>
Setup and Configuration .....	7-1
VOS Data Display .....	7-2
<b>SECTION 8 - LINKS .....</b>	<b>8-1</b>
Setup and Configuration .....	8-1
System Link Configuration.....	8-2
Individual Link Configuration .....	8-4
Link Data Display .....	8-6
Left Panel - Volume .....	8-7
Left Panel – V+KO .....	8-7
Left Panel - Occupancy .....	8-8
Left Panel - Speed .....	8-8
Left Panel - All .....	8-9
Right Panel – Information .....	8-9
Right Panel – Status .....	8-10
<b>SECTION 9 - SPLIT MONITOR.....</b>	<b>9-1</b>

**icons™**  
**ADVANCED TRAFFIC MANAGEMENT SYSTEM**  
**USER'S MANUAL**  
**Table of Contents (Continued)**

---

<b>Setup and Configuration .....</b>	<b>9-1</b>
<b>Monitoring/Analysis .....</b>	<b>9-1</b>
The File Menu.....	9-2
The View Menu.....	9-2
The Settings Menu.....	9-4
The Help Menu .....	9-6
 <b>SECTION 10 - TIME SPACE DIAGRAM .....</b>	 <b>10-1</b>
<b>Setup and Configuration .....</b>	<b>10-1</b>
<b>Monitoring/Analysis .....</b>	<b>10-1</b>
The Route Menu .....	10-2
The View Menu .....	10-5
The Diagram Menu.....	10-6
The Mode Menu.....	10-6
The Bands Menu .....	10-6
The Help Menu .....	10-7
 <b>SECTION 11 - ALARMS AND PAGING .....</b>	 <b>11-1</b>
<b>Setup and Configuration .....</b>	<b>11-1</b>
Individual Information .....	11-1
Group Information.....	11-3
Alarmable Events.....	11-4
Alarm Triggers .....	11-5
<b>Manual Group Page .....</b>	<b>11-7</b>
<b>Manual Page Individual .....</b>	<b>11-8</b>
<b>Triggered Events .....</b>	<b>11-9</b>
Heads-Up Alarm Notification .....	11-9
Alarm Log .....	11-10
 <b>SECTION 12 - CONTROLLER DATA MANAGEMENT .....</b>	 <b>12-1</b>
<b>Remote Upload (ASC2 – NTCIP Only) .....</b>	<b>12-1</b>
<b>Auto Upload (ASC2 – NTCIP Only) .....</b>	<b>12-1</b>
<b>Unattended Data Comparison (ASC2 Only).....</b>	<b>12-1</b>
<b>Controller Database Editor.....</b>	<b>12-2</b>
The Database Editor Workspace .....	12-3
Menu Bar .....	12-4
The File Menu .....	12-4
The Utilities Menu.....	12-7
The Communications Menu .....	12-8
The Help Menu.....	12-10
The Button Bar.....	12-11
The Status Bar.....	12-11

***icons*<sup>TM</sup>**  
**ADVANCED TRAFFIC MANAGEMENT SYSTEM**  
**USER'S MANUAL**  
**Table of Contents (Continued)**

---

The Controller Display .....	12-11
The Parameter Display .....	12-11
<b>New Controller Data Management .....</b>	<b>12-11</b>
<b>Existing Controller Data Management .....</b>	<b>12-12</b>
<b>APPENDIX A .....</b>	<b>A-1</b>
<b>APPENDIX B .....</b>	<b>B-1</b>
<b>REFERENCE .....</b>	<b>REF-1</b>
The File Menu .....	REF-1
The View Menu .....	REF-1
The Objects Menu .....	REF-2
The Monitor Menu .....	REF-2
The Params Menu .....	REF-2
The Control Menu .....	REF-3
The Alert Menu .....	REF-3
The Setup Menu .....	REF-3
The Analysis Menu .....	REF-3
The Administration Menu .....	REF-3
The Window Menu .....	REF-3
The Reports Menu .....	REF-4
The Help Menu .....	REF-4



# *icons*<sup>TM</sup>

## ADVANCED TRAFFIC MANAGEMENT SYSTEM

### USER'S MANUAL

#### Table of Figures

---

Figure 2-1: <i>icons</i> <sup>TM</sup> Startup Screen .....	2-1
Figure 2-2: <i>icons</i> <sup>TM</sup> Sign-On Screen .....	2-2
Figure 2-3: Base <i>icons</i> <sup>TM</sup> Workspace .....	2-3
Figure 2-4: Saving Preference Set Screen .....	2-7
Figure 2-5: Open Preference Set Screen .....	2-7
Figure 2-6: Select Map Screen .....	2-8
Figure 2-7: System Object .....	2-9
Figure 2-8: Object Selection Tree Screen .....	2-10
Figure 2-9: Index Tab .....	2-11
Figure 2-10: Setup Wizard .....	2-12
Figure 2-11: Setup Wizard .....	2-12
Figure 2-12: Find Topic Tab .....	2-13
Figure 2-13: Configuring the Find Options .....	2-14
Figure 2-14: Program Version Information .....	2-14
Figure 2-15: .dll Version Information .....	2-15
Figure 3-1: User Profiles Screen with Permissions Tab Selected .....	3-1
Figure 3-2: Adding A User .....	3-2
Figure 3-3: Changing A Password .....	3-2
Figure 3-4: Jurisdiction Configuration Editor Screen .....	3-4
Figure 3-5: Adding A Jurisdiction .....	3-4
Figure 3-6: User Group Configuration Editor Screen .....	3-5
Figure 3-7: Adding A User Group .....	3-6
Figure 3-8: User Profiles Screen with Group Assignment Tab Selected .....	3-7
Figure 4-1: System Configuration Editor Screen .....	4-1
Figure 4-2: Defining a System .....	4-3
Figure 4-3: Defining a Zone .....	4-4
Figure 4-4: Defining a Section .....	4-5
Figure 4-5: Defining a Signal .....	4-6
Figure 4-6: Defining a Detector .....	4-7
Figure 4-7: Defining a Link .....	4-9
Figure 4-8: Defining a Master .....	4-10
Figure 4-9: Defining an Aries Node .....	4-10
Figure 4-10: Defining a CCTV .....	4-11
Figure 4-11: EventMap Configuration .....	4-12
Figure 4-12: Adding an EventMap .....	4-13
Figure 4-13: Preempt Event Configuration .....	4-16
Figure 4-14: Stuck Preempt Events .....	4-17
Figure 4-15: Time Drift Monitor Configuration .....	4-18
Figure 4-16: EventLogMonitor Configuration .....	4-18
Figure 5-1: Information Display Screen .....	5-3
Figure 5-2: Timing Display Screen .....	5-4
Figure 5-3: Alarms Detail Screen .....	5-6

***icons*<sup>TM</sup>**  
**ADVANCED TRAFFIC MANAGEMENT SYSTEM**  
**USER'S MANUAL**  
**Table of Figures (Continued)**

---

Figure 5-4: Intersection Graphic with All Panels Shown.....	5-7
Figure 5-5: Overlapping Assignment Entries.....	5-10
Figure 5-6: Non-Overlapping Assignment Entries.....	5-11
Figure 5-7: Manual Assignment Screen .....	5-12
Figure 5-8: Manual Assignment Settings Screen .....	5-13
Figure 5-9: TOD Schedule Screen .....	5-15
Figure 5-10: TOD Table Entry .....	5-16
Figure 5-11: Holiday Assignment Screen .....	5-18
Figure 5-12: Holiday Table Entry .....	5-19
Figure 5-13: Traffic Responsive Screen.....	5-20
Figure 5-14: Traffic Responsive Plan Entry.....	5-21
Figure 5-15: Action Set Editor Screen .....	5-23
Figure 5-16: Action Set Table Entry .....	5-24
Figure 5-17: Active Configuration Screen .....	5-26
Figure 6-1: System Status Screen.....	6-2
Figure 6-2: System Status Report.....	6-3
Figure 6-3: Communication Status Screen.....	6-4
Figure 6-4: Communication Status Report.....	6-5
Figure 6-5: Event Log Data Screen.....	6-6
Figure 6-6: Device Types Tab.....	6-7
Figure 6-7: Signal Phase Data Screen .....	6-8
Figure 6-8: Event Log Report .....	6-9
Figure 6-9: Alarm Report.....	6-10
Figure 6-10: Currently Stuck Preempt Events Report.....	6-11
Figure 6-11: Stuck Preempt Event History Report.....	6-12
Figure 7-1: VOS Display.....	7-2
Figure 7-2: Tabular Report.....	7-3
Figure 7-3: Volume Graph .....	7-4
Figure 7-4: Occupancy Graph .....	7-5
Figure 7-5: Speed Graph .....	7-5
Figure 7-6: Export VOS Data.....	7-6
Figure 7-7: VOS Text File.....	7-6
Figure 8-1: Main System Map with Links Defined.....	8-1
Figure 8-2: System Link Configuration .....	8-2
Figure 8-3: Link Color Selection.....	8-4
Figure 8-4: Link Configuration.....	8-5
Figure 8-5: Detector Location Configuration.....	8-6
Figure 8-6: Link Volume Plot .....	8-7
Figure 8-7: Link V+KO Plot .....	8-8
Figure 8-8: Link Occupancy Plot .....	8-8
Figure 8-9: Link Speed Plot .....	8-9
Figure 8-10: Link Information Display Screen .....	8-9
Figure 8-11: Link Status Display Screen.....	8-10
Figure 9-1: Split Monitor .....	9-2
Figure 9-2: Changing Default Settings.....	9-3
Figure 9-3: Sample Time Settings.....	9-4
Figure 9-4: Refresh Rate Settings.....	9-5

**icons™**  
**ADVANCED TRAFFIC MANAGEMENT SYSTEM**  
**USER'S MANUAL**  
**Table of Figures (Continued)**

---

Figure 9-5: Filter Settings.....	9-6
Figure 9-6: Split Monitor Legend .....	9-6
Figure 10-1: Time/Space Diagram .....	10-2
Figure 10-2: Creating a New Route.....	10-3
Figure 10-3: Location Properties Editor.....	10-3
Figure 10-4: Open Route.....	10-4
Figure 11-1: Individual Configuration .....	11-1
Figure 11-2: Adding or Editing Individual Information.....	11-2
Figure 11-3: Alarm Groups .....	11-3
Figure 11-4: Newly Created Alarm Group.....	11-3
Figure 11-5: Define Group .....	11-4
Figure 11-6: Alarmable Events .....	11-4
Figure 11-6: Alarms Configuration .....	11-5
Figure 11-7: Add or Edit an Alarm Event .....	11-6
Figure 11-8: Page Group .....	11-7
Figure 11-9: Page Group Properties .....	11-8
Figure 11-10: Page Individual.....	11-9
Figure 11-11: Page Individual.....	11-9
Figure 11-12: Heads Up Message .....	11-9
Figure 11-13: Alarm Log .....	11-10
Figure 12-1: Controller Database Comparison Results .....	12-2
Figure 12-2: Controller Database Workspace .....	12-3
Figure 12-3: Select Controller Screen .....	12-5
Figure 12-4: DB Load .....	12-5
Figure 12-5: DB Store .....	12-6
Figure 12-6: Print Screen .....	12-7
Figure 12-7: DB Compare .....	12-8
Figure 12-8: DB Restore .....	12-8
Figure 12-9: <i>NextPhase</i> Upload Table Selection Screen.....	12-9
Figure 12-10: <i>NextPhase</i> Download Table Selection Screen.....	12-10
Figure A-1: Active Control Parameters Screen.....	2
Figure A-2: Schedule Settings Screen.....	2
Figure A-3: Fixed Holidays Screen.....	3
Figure A-4: Floating Holidays Screen.....	3
Figure A-5: Mode/Cycle Plan Settings Screen.....	4
Figure A-6: Splits/Offsets Plan Settings Screen.....	4
Figure A-7: Phase Sequence Settings Screen.....	5
Figure A-8: Overlap Flags Settings Screen .....	5
Figure A-9: Overlap Parameters Settings Screen .....	6
Figure A-10: Phase Flags Screen .....	6
Figure A-11: Phase Timing Screen .....	7
Figure A-12: External Plan Screen.....	7
Figure A-13: Active Controller Configuration Screen.....	8
Figure A-14: Offsets, Rings, Miscellaneous Phase Configuration Screen.....	8
Figure A-15: Phase Mode/ID's Phase Configuration Screen.....	9
Figure A-16: Vehicle Detector Flags Configuration Screen .....	9
Figure A-17: Vehicle Detector Parameters Configuration Screen .....	10

**icons™**  
**ADVANCED TRAFFIC MANAGEMENT SYSTEM**  
**USER'S MANUAL**  
**Table of Figures (Continued)**

---

Figure A-18: Pedestrian Detector Flags/Parameters Configuration Screen .....	10
Figure A-19: System Detector Flags/Parameters Configuration Screen .....	11
Figure A-20: Cabinet Input Channel Assignment (Function Type) Screen .....	11
Figure A-21: Cabinet Input Channel Assignment (Connector/BIU) Screen .....	12
Figure A-22: Cabinet Output Channel Assignment Screen.....	12
Figure A-23: Cabinet Type Configuration Screen .....	13
Figure A-24: Preempt Flags Settings Screen.....	13
Figure A-25: Preempt Phase Flags Settings Screen .....	14
Figure A-26: Preempt Timings Setting Screen.....	14
Figure A-27: Overlap Primary Parent Phases Screen.....	15
Figure A-28: Overlap Secondary Parent Phases Screen.....	15
Figure A-29: Overlap Modifier Phases Screen.....	16
Figure A-30: Overlap Parameters/Flags Screen .....	16
Figure A-31: Overlap Outputs Screen.....	17
Figure A-32: Coordination Parameters Settings Screen.....	17
Figure B-1: Sequence Data, MMU Data and Options Screen .....	2
Figure B-2: Phase Timing Screen.....	2
Figure B-3: Overlap Setting Screen .....	3
Figure B-4: Start, Flash, and Dim Setting Screen .....	3
Figure B-5: Controller Options Screen.....	4
Figure B-6: Clock/Calendar Setup and Phase Info Screen.....	4
Figure B-7: Coordination Options Screen .....	5
Figure B-8: Coordination Patterns Screen.....	5
Figure B-9: Bus Preemptors Screen .....	6
Figure B-10: Weekly and Yearly Programs Screen .....	6
Figure B-11: Holiday Program Steps Screen .....	7
Figure B-12: NIC Program Steps Screen .....	7
Figure B-13: TOD Program Steps Screen .....	8
Figure B-14: Detectors Parameters Screen.....	8
Figure B-15: Detectors Assignment Screen .....	9
Figure B-16: Other Detectors Setup Screen .....	9

# SECTION 1 - INTRODUCTION

## OVERVIEW

The **icons™** User Manual contains information necessary to operate the system and generally refers to functions and features available through the operator workstation – iGUI and Database Editor. This manual only covers standard **icons™** features. Custom or optional features provided and installed as part of the system are covered in other manuals. This manual assumes that the software has been properly installed and configured on a workstation computer. The following manuals should be used together with this User Manual to gain a complete understanding of the system operation, maintenance, and administration.

- **icons™** Release Notes - Latest version specific information.
- **icons™** System Administration Manual – System requirements, installation, configuration, and maintenance.
- **icons™** Graphics Editor Manual – Operation manual for the graphics editor.

## SYSTEM DESCRIPTION

The **icons™** (Integrated Control Of Traffic Networks) Advanced Traffic Management System is a jointly developed product of the Gardner Transportation Systems business unit of Siemens Energy & Automation, Inc. (Siemens GTS) and Econolite Control Products, Inc. **icons™** comprises a single integrated platform for information management, graphical data display, and system control. **icons™** provides a full-featured, object-oriented Graphical User Interface (GUI) with intersection specific objects designed to support centralized management and control of signalized intersections. This integrated display environment can be extended to optionally manage other ATMS/ATIS-related components, such as closed circuit television (CCTV) and dynamic message signs (DMS).

The overall architecture of **icons™** can be described as a distributed client/server design. Processing in the system is distributed such that it can be done effectively with consideration of cost, communication implications, security/redundancy, and user interface performance. The system architecture provides for modular, cost-effective expansion from 10 to 10,000 signals or other devices. National and international standards and protocols are used to the fullest extent practical such that the system can adapt to changes in technology and increased functionality over time with a minimum impact on individual system components. Intelligent change-driven interface protocols are used for distribution of real-time data among workstations facilitating increased system performance and multi-user responsiveness.

The system employs both object-oriented and relational DBMS database technologies and includes industry standard SQL interfacing. The **icons™** user-interface is based on an intuitive point and click model using state-of-the-art windowing features and desktop interoperability standards. A fully capable Graphical User Interface (GUI) is provided at all local and remotely connected user workstations.

A variety of microprocessor-based traffic controllers are compatible with **icons™**. Traffic controllers are supported through communication processor(s), which can be located at the central site or in the field. These processors support once-per-second polling of individual local intersection controllers. **icons™** is designed to interface to any manufacturers' field devices through open system protocols such as NTCIP or other user agency specified interfaces. **icons™** currently communicates

to Advanced Transportation Controllers (ATC) such as the California Model 2070 as well as NEMA TS-1/TS-2 type traffic signal controllers with full upload/download functionality.

The system supports various system hardware configurations, including distributed Transportation Management Center (TMC) facilities, workstations/server configurations, and various optional peripheral devices such as high-speed printers, displays, large screen video projection systems, CCTV monitoring screens, and integrated console stations.

Local and Wide area network (LAN / WAN) technologies are used to support the distributed client/server architecture. Client workstations access networked computers that perform traffic management, database management, and real-time traffic control functions. Field communications processing is distributed between central communications processors, optional communication hub processors, and local controllers. Multiple communications media can be supported including twisted pair, coaxial cable, fiber optics, and wireless technologies.

## Communications

The system is capable of controlling, receiving status and detector data from, and uploading and downloading local controller parameters to and from each intersection.

Communication from *icons*<sup>TM</sup> to local intersection - the *icons*<sup>TM</sup> central system establishes timing for local intersections including offsets, phase, intervals, and special functions to be performed. Timing plan data is stored locally at the intersection and selected in the traffic-responsive and manual modes based on central system command. The TOD mode is operated from a local schedule downloaded to and maintained by the controller. *icons*<sup>TM</sup> continuously monitors all modes for proper operation.

Communications from the local intersection to *icons*<sup>TM</sup> - the local intersections transmit once-per-second status information to the *icons*<sup>TM</sup> central system. This includes phase monitoring, controller mode status, and failure status flags. Local intersections transmit detector information on a cycle-by-cycle basis (or optionally on a 30 or 60 second basis). Upon operator request, local parameter data can also be uploaded from individual controllers for review or editing.

## Common User Interface

As previously discussed the *icons*<sup>TM</sup> base software utilizes a collection of workstations, which serve as the primary user interface to the system. These workstations provide access to traffic management functions, traffic control data, and real-time intersection and detector data. The workstation hardware consists of Intel Pentium-based workstations running the Windows NT 4.0 / 2000 operating system.

All traffic system reports, graphic displays, and dialogs are functions of the user interface software running on individual workstations. Each workstation accesses data as needed from the traffic control and database servers. The operator assesses system functions using map-based graphical displays.

Graphical icons are used on the graphical displays to represent system devices. The icons provide easy access to traffic control data (signal timing, geometry, etc.), real-time data (intersection timing, phase status, etc.), the database, and graphical image files.

A major component of the user interface is the display of real-time graphics to maximize the effectiveness of system operators. Workstations with high-resolution graphics capabilities and color monitors are used for this purpose. Available graphics displays include:

- System Level Map - Provides a dynamic display of the entire surveillance area including expressways, major arterial roads, jurisdiction boundaries, and bodies of water. Intersections change color dynamically to indicate main-street green and intersection alarm status.
- Section Level Maps - Provide more detailed display of selected zones or areas of the system. Intersection phase status is displayed in real-time using green arrow icons. These change color dynamically to indicate main-street green and intersection alarm status.
- Intersection Status Screens - Provide an exploded dynamic display of local intersection geometries showing vehicle and pedestrian phase interval timing, alarm conditions, and field hardware status (controllers, detectors, CMS messages, on-line controller status, etc.). The Intersection Status display also displays text fields providing current status data.

In addition to being displayed on workstation monitors, the real-time graphics may be displayed on graphic projection screens and wall maps, and may be transmitted to remote workstations for display.

All workstation user interface functions are implemented using Windows-based graphical user interface (GUI) concepts. A GUI is an operator interface technology which uses pictures, line graphs, and multiple fonts in conjunction with a pointing device (e.g. a mouse or track ball) to interact with and allow an operator to enter decisions, draw graphics, issue commands, and receive information from the system. The primary benefit of GUI technology over traditional text-based user interfaces are improved ease of use, increased operator control over the system, and reduced confusion in multi-lingual environments. Graphical symbols (icons) are employed to activate common functions. Graphics provide added capabilities for portraying system status and soliciting input from operators providing obvious advantages in system operations.

A GUI offers greater operator control and flexibility over the integration of graphic, system status display, and data entry. As an example, a map may be displayed showing current main-street green signal phase data in real-time. The same graphic map could also play a role as a system selection palette enabling the operator to make a selection by pointing to a particular system object (i.e. controller, changeable message sign, etc.). When that system object is selected, a more detailed status window can be displayed.

The GUI provides the operator access to all monitoring and control options from a single point. As a result, all operator actions are immediately visible as graphical status changes and on screen display windows. Operator efficiency is improved and operator errors are reduced.

In addition to control and surveillance screens, formatted data entry screens are provided for storing and editing parameter data for various system elements. For example, traffic controller screens are provided to present and allow easy editing of all timing parameters and to provide a mechanism for facilitating the uploading and downloading of these parameters to local controllers in the field.



## SECTION 2 - GENERAL OPERATION

This section describes the basic operation of the *icons*<sup>TM</sup> operator user interface, including startup procedures, user interface configuration and navigation, and security. Detailed descriptions of operational tasks are provided in subsequent sections.

### SYSTEM STARTUP

The *icons*<sup>TM</sup> server components need to be running and available before the *icons*<sup>TM</sup> workstation can be started. Check the *icons*<sup>TM</sup> System Administration Manual on how to configure and start the server components. The workstation may be connected over a local area network (LAN), wide area network (WAN) or dial-up connection.

To start *icons*<sup>TM</sup> in a LAN/WAN environment:

1. Start Windows
2. Start the *icons*<sup>TM</sup> application from the Windows Program Group, Start | Programs | ICONS | ICONS.

To start *icons*<sup>TM</sup> over a dial-up connection:

1. Start Windows
2. Establish a dial-up networking session with the central server.
3. Start the *icons*<sup>TM</sup> application from the Windows Program Group, Start | Programs | ICONS | ICONS.

When the *icons*<sup>TM</sup> application is launched from a system workstation, the operator is presented with a splash screen as shown in Figure 2-1.



Figure 2-1: *icons*<sup>TM</sup> Startup Screen



A progress bar at the bottom of the screen displays the loading sequence and progress. System loading time varies depending upon the size and complexity of the system map and the number of area maps.

## SIGN-ON/OFF

Once the *icons*<sup>TM</sup> application has completed loading, the operator will be presented with an initial workspace screen. Use the **File** menu in the Menu Bar and click on the **Sign On** command. The operator will be presented with a sign-on screen as shown in Figure 2-2:



Figure 2-2: *icons*<sup>TM</sup> Sign-On Screen

After a valid user name and password have been entered, the user gains access to the system and a range of the system's functionality based on access levels. The administration of user names, passwords and levels of access/functionality are covered in Section 3. User names and passwords are case sensitive. The user name must be between 2 and 20 characters in length. The password must be between 4 and 20 characters in length.

The **Sign Off** command is used to log an operator off of the system. The **Exit** command is used to shut down the *icons*<sup>TM</sup> system.

## THE *icons*<sup>TM</sup> WORKSPACE

This screen, as shown in Figure 2-3, has several specific regions that provide the operator with a number of different tools.

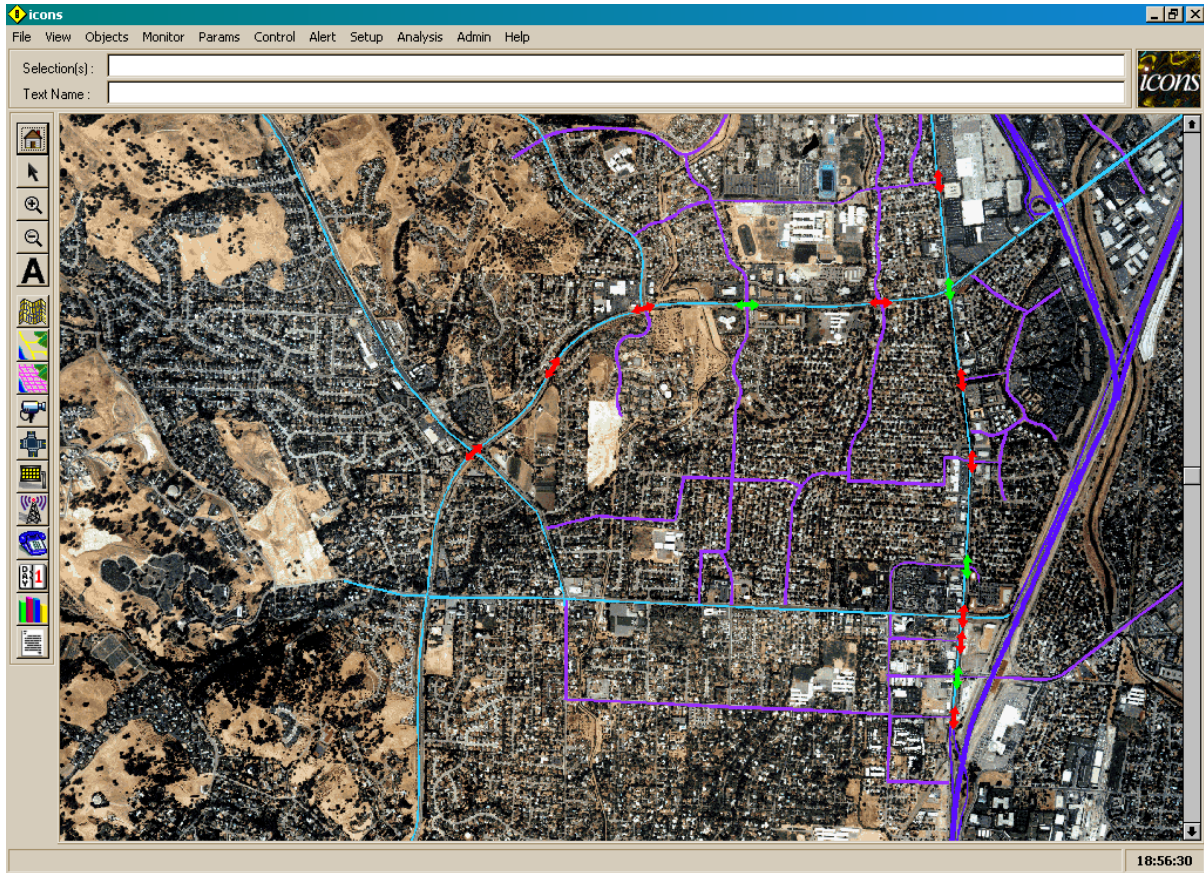


Figure 2-3: Base *icons*™ Workspace

The *icons*™ workspace is divided into the following regions:

### Menu Bar

The Menu Bar permits the operator to access various menu options. A drop down menu for any of these menu items can be selected by left clicking its menu title. The function of each of these menu items is discussed throughout this manual and a complete listing is provided in the Reference Section at the end of this manual. Depending upon the system configuration and level of security access granted the current user, some of these menu items may not be selectable.

### Selection Bar

The Selection Bar just below the menu bar at the top of the workspace displays the object name and text description of selected system objects.

### Status Bar

The status bar at the bottom of the workspace is used to display informational messages to the operator. For example, at system startup, the status bar directs the operator to use the File Menu to sign onto the system.

## Button Bar



The button bar located on the left side of the *icons*<sup>TM</sup> workspace is used to provide “one-click” shortcuts to commonly performed system tasks. This bar is entirely user configurable. By right clicking on a button the user is presented with a number of different options that can be applied to that button. These include changing the icon, and assigning a sequence of commands to that button or assigning tool tips for the button. The position of the button bar can be changed to the right side of the *icons*<sup>TM</sup> workspace by right clicking on the blank area of the bar and selecting the Right Button Bar Position option.

Use the **File | Recorder** menu item to customize actions assigned to buttons. The **Recorder** command allows access to three choices: **Start Recording**, **Stop Recording**, and **Test Macro**.

Selecting the **Start Recording** command allows the user to record a macro and assign it to a button on the button bar. The user can record up to ten macro commands to perform a sequence of actions. During the recording process, the status bar indicates how many commands are recorded in the recorder buffer. When recording is completed, the user can then select **Stop Recording**. The user can also test the recorded macros by selecting the **Test Macro** command.

To assign the recorded macro to a button on the button bar, right-click on the intended button and select **Assign Macro**. The user can also customize graphics and tool tips for each button by selecting the **Graphic** and **Tool Tips** commands, respectively. To save new macro commands, graphics and tool tips, select the **Save Preference Set** command in the **File** menu.

## Logo Panel



The Logo Panel displays a graphic showing the *icons*<sup>TM</sup> logo. The background pattern and dot over the ‘i’ are animated to indicate that the system is functional.

## Map Display

The Map Display shows a map graphic of the system under control and includes various layers and objects (both static and dynamic) that can be turned on and off by menu or button bar (if so configured) selections.

## Aspect Ratio

The **View | Fixed Aspect** command is used to determine whether the map being used in the *icons*<sup>TM</sup> workspace is displayed with its actual proportions, or if its aspect ratio is scaled to fit the *icons*<sup>TM</sup> map workspace region. A check mark to the left of the menu items indicates that the map is being displayed using a fixed aspect in the *icons*<sup>TM</sup> workspace. When this check mark is not visible the map is displayed with its actual proportions in the *icons*<sup>TM</sup> workspace.

## Layers

The **View | Layers** menu item invokes a drop down box listing all available layers on the *icons*<sup>TM</sup> workspace map. Visible layers are indicated by a check mark to the left of the layer name. Left clicking on a layer name will toggle that layer between visible and hidden status. The available layers hide and display map features as follows:

- ☐ Map Background
- ☐ Secondary Roads
- ☐ Primary Roads
- ☐ Freeways
- ☐ MSG (main street green) of Intersections
- ☐ Phase Diagram of Intersections
- ☐ Link
- ☐ CCTV
- ☐ DMS

## Auto Layers

The **View | Auto Layers** command controls what layers are visible on the map at different zoom levels. With **Auto Layers** active (as indicated by a check mark to the left of the menu item), different layers are displayed on the map as the map is zoomed in or out. *icons*<sup>TM</sup> chooses the best choice of visible layers to provide the operator with the greatest amount of information without loss of image quality.

## Map Zoom

The **View | Zoom** menu command presents the operator with a drop down menu listing zoom magnification levels of 100%, 150%, 200%, 400%, and 800%. Selecting any of these menu items will result in the *icons*<sup>TM</sup> workspace map displaying at that zoom level. Zoom levels are expressed as a percentage of the home view map size.

The mouse can also be used to zoom the map display in or out. This is accomplished by clicking on the zoom controls located in the upper part of the button bar. The zoom controls region contains four buttons:



### Home View

The Home View command returns the *icons*<sup>TM</sup> workspace map to the home view regardless of where the map may have been scrolled or zoomed. The home view is established at system startup and is not operator configurable. The Home View is also selectable from the **View | Home View** menu.



### Box Zoom Mode

Toggle the Box Zoom Mode by clicking this button or by selecting the **View | Box Zoom Mode** command from the menu. When active this command adds the ability to zoom into a rectangular area defined by clicking and dragging the mouse. Click the “Toggle Zoom Mode” button, then the “Zoom In” button, then click and drag the mouse over a desired area on the map display.



**Zoom In**

Zooms in the map in increments of 5% with each click of the button.

**Zoom Out**

Zooms out the map in increments of 5% with each click of the button.

## CUSTOMIZING THE ICONS WORKSPACE

The **icons™** workspace can be customized to show/hide various tools, organize windows displays, and to save these settings so they can be recalled upon sign on.

The **View | Button Bar**, **View | Selection Bar**, and **View | Logo Icon** commands are used to toggle on and off these regions of the **icons™** workspace. This is accomplished by left clicking on the desired menu item. A check mark to the left of a menu item indicates that menu item is visible in the **icons™** workspace. When this check mark is not visible the menu item is not present in the **icons™** workspace. Disabling the Selection Bar will automatically disable the Logo Icon.

The **View | Map Scrolling** command is used to turn on and off the scrolling buttons for the map. With Map Scrolling disabled, it is not possible to scroll the map. A check mark to the left of the menu item indicates that map scrolling is available. When this check mark is not visible, map scrolling is disabled.

The **Window** menu selection allows the user to show or hide pop-up windows. It includes convenient commands such as **Show All**, **Tile All**, and **Hide All** and allows the user to redisplay individual maps. This menu is only visible on the menu bar when one or more pop-up windows are active.

## SAVING THE ICONS WORKSPACE

Operators can customize their **icons™** workspace and then save this configuration so that it is available the next time they log on to the system. The windows workspace can be saved either under the current user profile using the **View | Windows Layout** command or it can be saved as a preference set that can be recalled at any time using the **File | Save Preference Set** command.

The **View | Window Layout** menu items add the ability to store the current window layout including zoom levels, signal map positions, dialog boxes, etc. The **Windows Layout** menu item invokes a drop down box listing all available command options. The **Save Layout on Sign Off** if checked will automatically save the desktop settings under the current user profile at sign off. The **Save** command will immediately save the desktop settings for the current user. The **Load** command will automatically load the last saved desktop settings for the current user.

The **File | Save Preference Set** and **File | Save Preference Set As** commands allow the operator to save the layout of the button bar, map views, layers on the map, and visible workspace regions (i.e., button bars, logo panel, and scroll bars) under a preference set name that can be recalled at any time. The **Save Preference Set As** command will display a dialog box that allows the operator to specify a file name for the preference set as shown in Figure 2-4. The **File | Save Preference Set** will save the workspace under the current preference set. If a preference set has not yet been defined then the command will display the dialog box as shown in Figure 2-4.

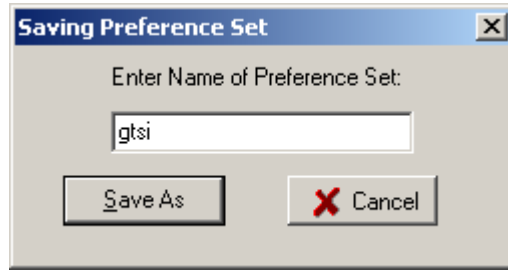


Figure 2-4: Saving Preference Set Screen

The user preference set is automatically loaded at sign on if it exists; otherwise a default workspace layout is displayed. The **File | Open Preference Set** menu item allows the operator to load an existing preference set. This command displays a dialog box that lets the operator select from the available *icons*<sup>TM</sup> preference sets as shown in Figure 2-5.


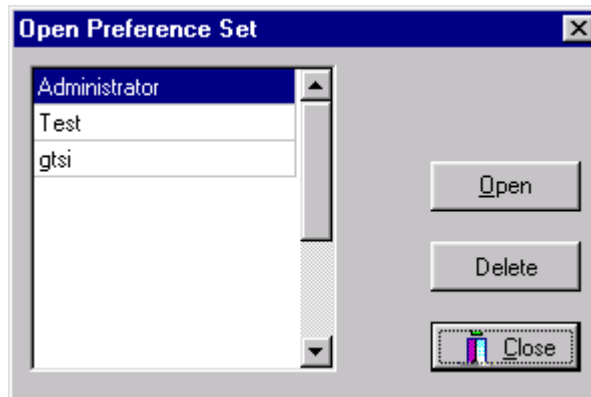


Figure 2-5: Open Preference Set Screen

## SYSTEM MAPS

The *icons*<sup>TM</sup> system can display either a main map or more detailed area maps. Area maps are typically used to show a more detailed region of the main map or to display multi-jurisdictional regions on the system. If area maps have been defined, the operator can use the **Monitor | System Maps** to select the main map or an area map to be displayed on the screen. This menu item is only displayed when area maps have been defined for the system. Selecting the System Maps menu item will display a Select Map Screen as shown in Figure 2-6.

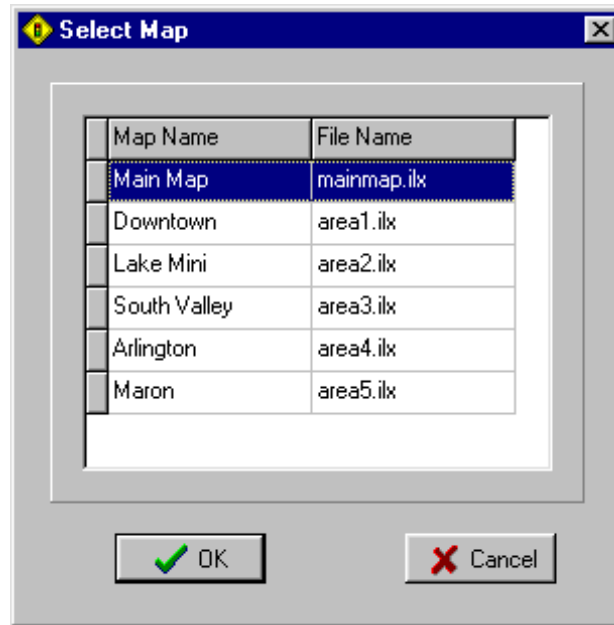

*Figure 2-6: Select Map Screen*

Area maps are defined in the icons.ini file – See Administrators Manual for more details.

Main and Area maps may also be selected using the button bar. If area maps have been defined and the main map is being displayed then the Area Selection Mode button will be visible in the button bar. Likewise, if an area map is currently being displayed then the Main Selection Mode button will be visible in the button bar.



#### **Area Selection Mode**

Toggle the Area Selection Mode button and then click the mouse on the desired area map location on the main map to activate the area map.




#### **Main Selection Mode**

Toggle the Main Selection Mode button to return to the main map.

## **SYSTEM OBJECTS**

The **icons™** system identifies all devices as a hierarchy of related objects as shown in Figure 2-7 below. The hierarchy relationship allows the operator to setup control, monitoring, analysis or reporting by individual devices or groups of devices via System, Zone or Section. The root node identifies the entire system. Under the root node a user may configure any number of Zone, Section or Device objects as shown. A Zone can only be a child node of the system. A Section may only be a child node of either the System or Zone. A Device (i.e. Signal, CCTV, DMS, Link) may be a child node of the System, Zone, or Section. Each device can only have a single parent node. For example, a Signal cannot be configured to be part of two Sections at the same time. Each object is identified by the system using a unique combination of object type, and object number. This is further described in Section 4 – System Configuration.

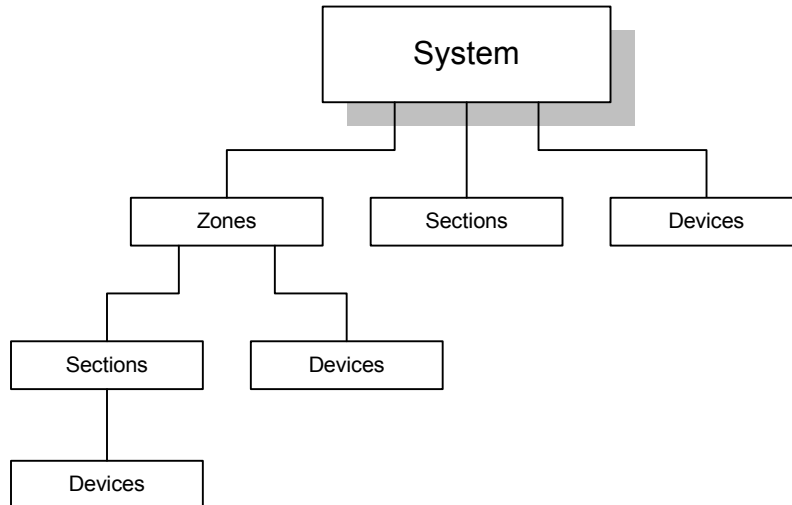

*Figure 2-7: System Object*

## Object Selection

The quickest and easiest method to select objects is through the point-and-click use of the mouse in conjunction with the map display. This is accomplished by placing the mouse pointer over the object icon and left clicking on it once. Objects that have been selected are identified by a surrounding black box. Additionally, the object ID and text name associated with that object is displayed in the selection bar. Multiple objects can be selected in a similar manner to single objects, simply by clicking on subsequent objects in the same manner as the first object while holding the Control key down. Deselecting an object is accomplished by clicking on that object while holding the Control key down. Deselecting all objects is accomplished by clicking any region of the map display that does not contain a system object icon.

In addition, *icons™* has a Type-Ahead object selection feature which allows the user to select objects on the system map display by typing information in the Selection(s) or Text Name window of the selection bar. As the user enters information, the nearest-matching SYS#, ZON#, SEC#, SIG#, etc. or text name will be displayed ahead inside the selection bar window being edited. The nearest-matching portion of the object description will also be highlighted for reference.

If the match is correct, the user can use the arrow key, end key, or “,” (comma) key to position the cursor at the end of the highlighted portion. Pressing the comma key will update the other window of the selection bar (i.e., Selection(s) or Text Name) to correspond to the matching description. Only those entries, which are followed by a comma, will be selected on the map. Blank spaces can be placed between entries and commas. Press the Tab key to select the object icon(s).

Finally, when the mouse is placed over an object icon (selected or non-selected), a “tool tip” is provided that displays the device identification.

An alternative method of viewing, selecting, and deselecting objects is through the **Objects** menu item. The objects menu contains the following choices:


- ☐ System
- ☐ Zone
- ☐ Section



- ☐ Master
- ☐ Link
- ☐ Signal
- ☐ Detector
- ☐ CCTV
- ☐ DMS
- ☐ Deselect All

These menu items can be selected by left clicking on the menu item title. These commands enable the user to view objects at various hierarchical levels such as the system, zone, section or signal entity as shown in Figure 2-8. The operator can easily select groups of objects by clicking the check box next to the desired entities. The object selection tree will include the selected object menu item and all of its member objects in a collapsed form. For example, selecting the Zone object will show all zones defined in the system. Clicking the check box next to each zone object will also show all member objects associated with that zone. These member objects may also be expanded to reveal their member objects, etc.

The **Deselect All** command is used to remove the focus from all selected objects on the map.

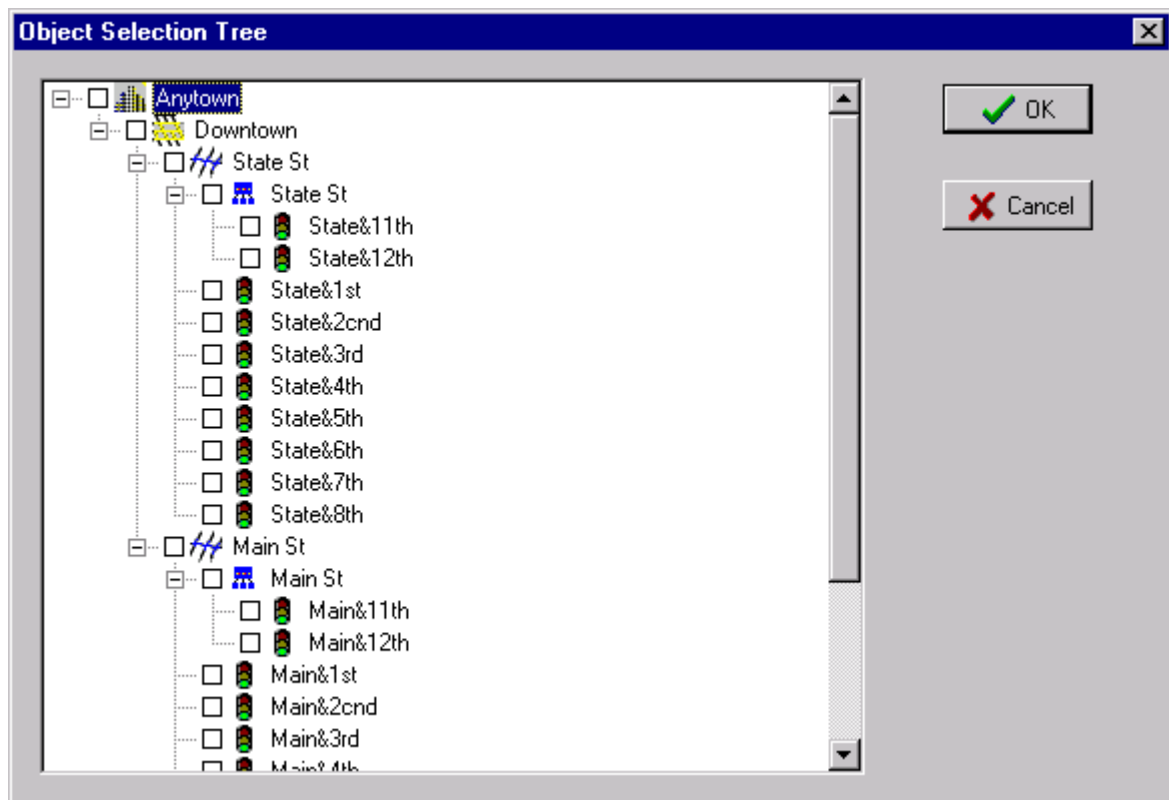

*Figure 2-8: Object Selection Tree Screen*

Selecting the **Monitor | Devices** menu item will display the dialog boxes for all currently selected devices. The dialog boxes will be tiled in groups of four. Devices may be selected using the objects menu, by highlighting map icons, or by entering devices numbers directly onto the selection bar.

## *icons*<sup>TM</sup> HELP

The **Help | Contents** menu allows the user to search by keyword (Index) or topic (Find). The *Index* tab is shown in Figure 2-9.

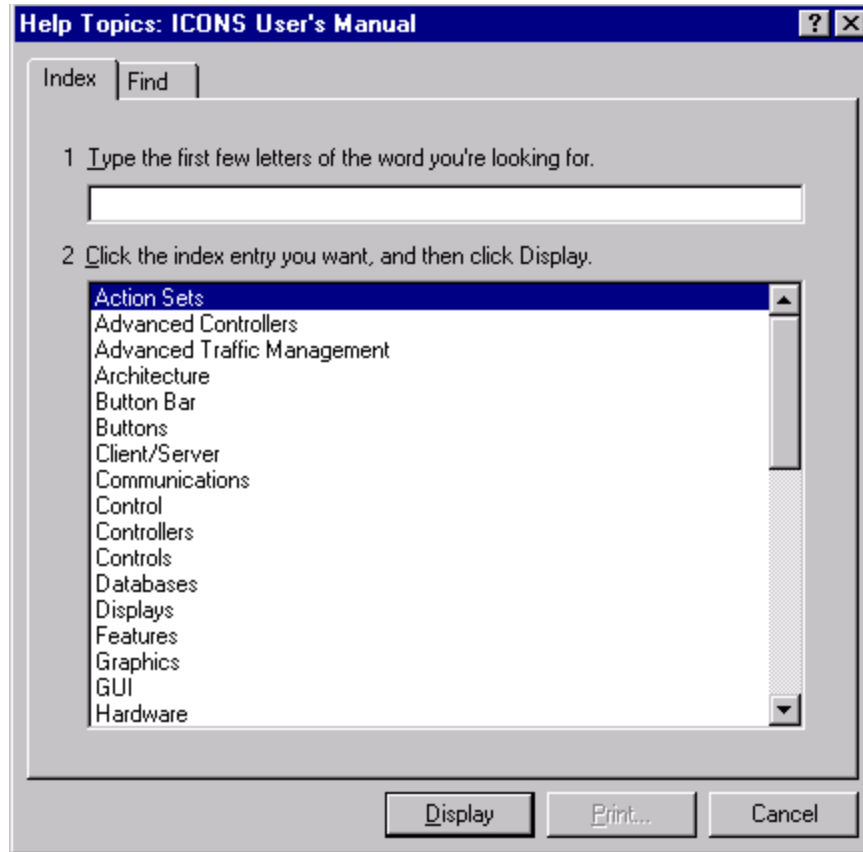


Figure 2-9: Index Tab

By typing in a keyword (or selecting it from the list) and pressing the **Display** button, a help window on that subject will appear.

To search by topic, the *Find* tab must be selected. The first time this is done, the user will be presented with the Setup Wizard shown in Figure 2-10.

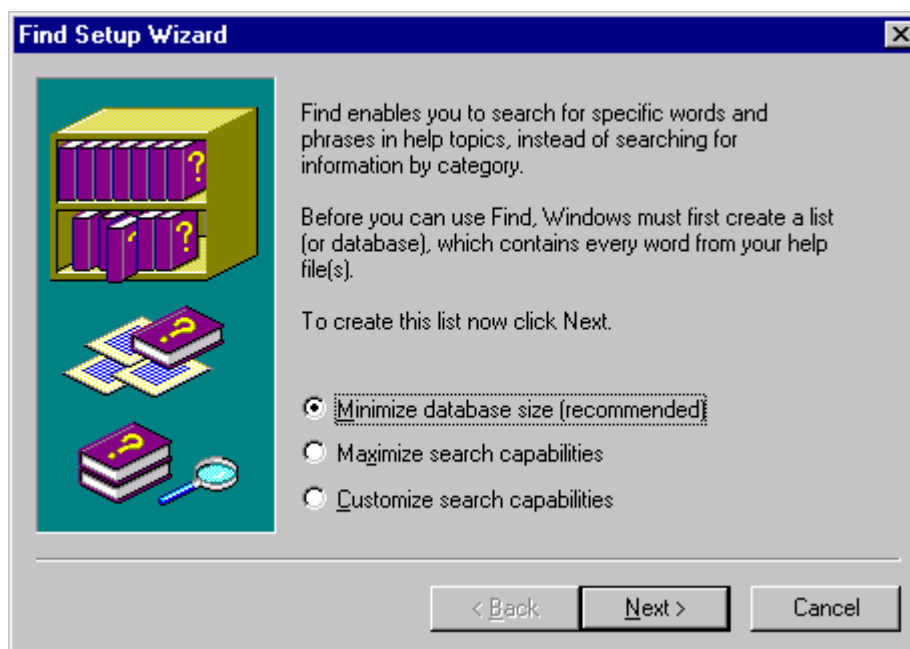


Figure 2-10: Setup Wizard

After selecting one of the three choices from the list, the window in Figure 2-11 appears.



Figure 2-11: Setup Wizard

Pressing the **Finish** button will complete the setup procedure. The screen shown in Figure 2-12 will then appear.

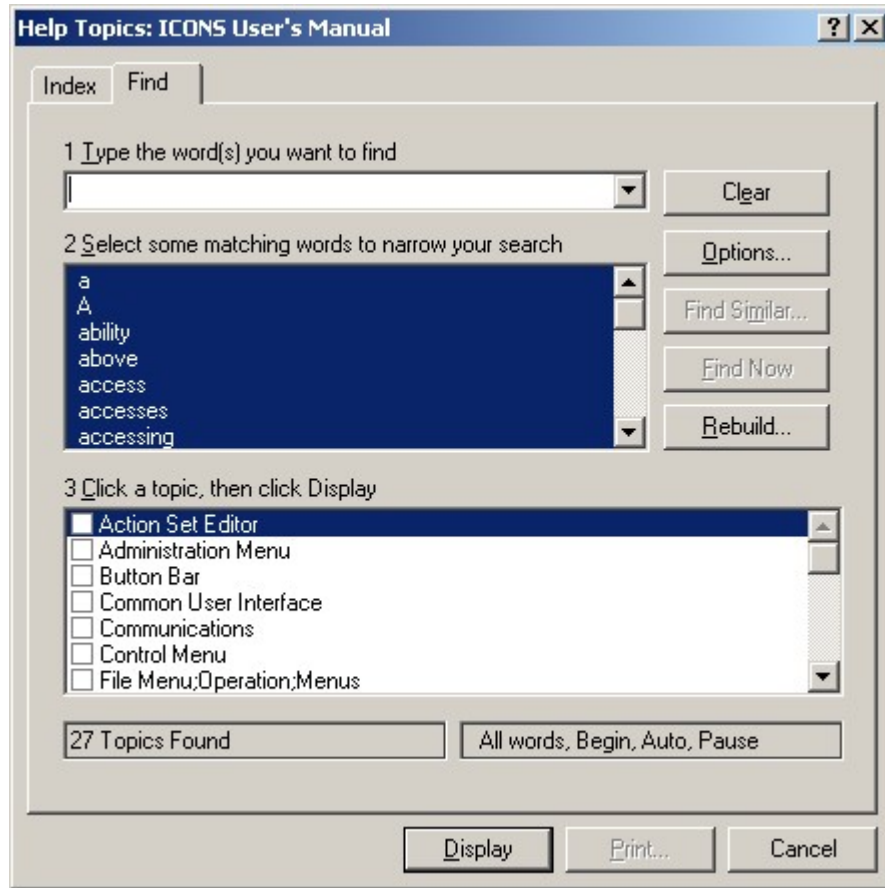


Figure 2-12: Find Topic Tab

By typing in a keyword (or selecting it from the list), highlighting the desired topic, and pressing the **Display** button, a help window on that subject will appear. Pressing the **Rebuild** button will launch the Setup Wizard (Figure 2-10) and allow the search capabilities to be adjusted. Pressing the **Options** button allows configuring of the search options, as displayed in Figure 2-13.

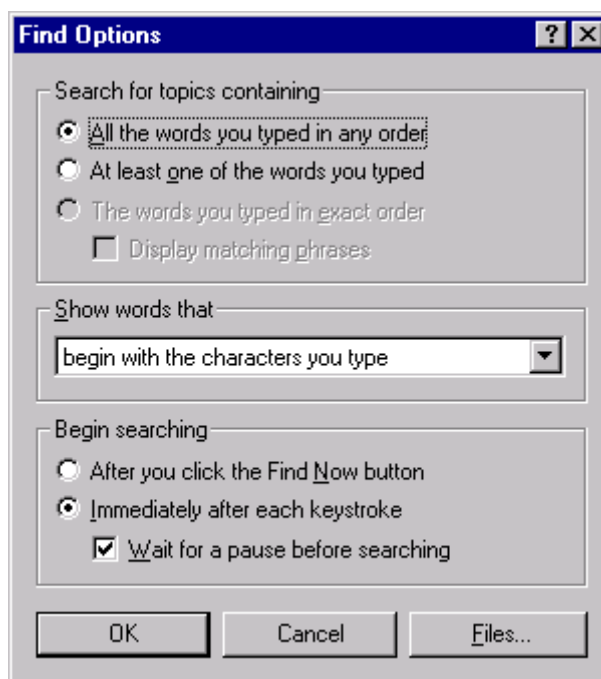


Figure 2-13: Configuring the Find Options

### About *icons*<sup>TM</sup>

The **Help | About** menu item displays the *icons*<sup>TM</sup> program and .dll version information, as shown in Figures 2-14 and 2-15.

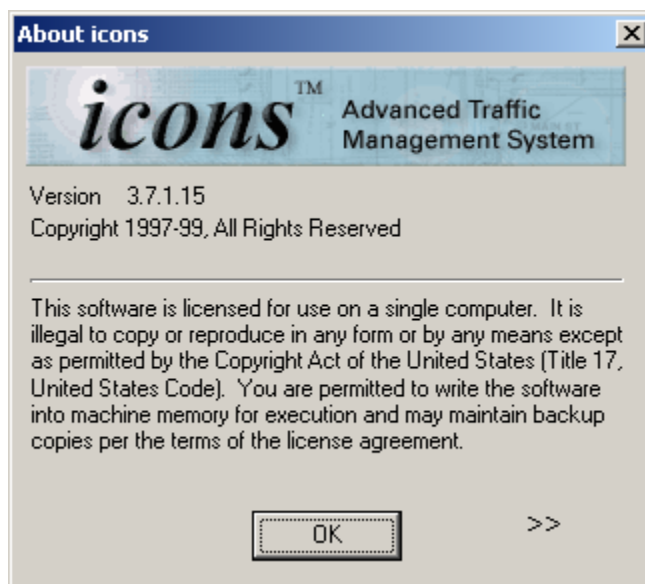


Figure 2-14: Program Version Information

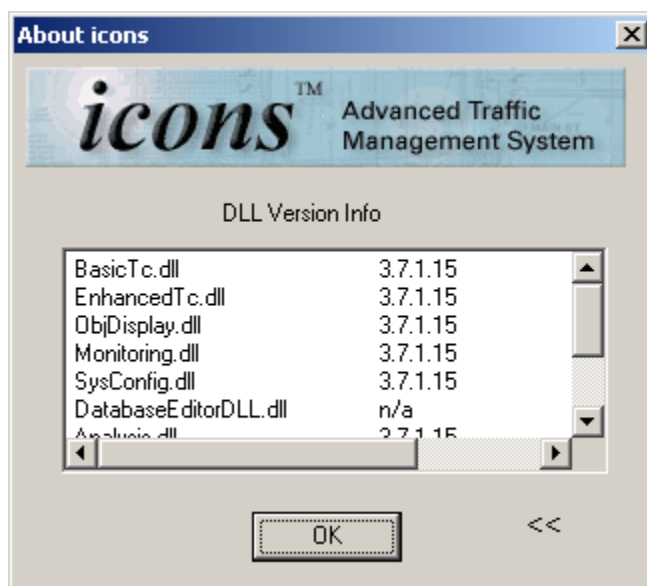


Figure 2-15: .dll Version Information

## SECTION 3 - SECURITY

The **icons™** system uses a menu-based security model whereby users are either granted or denied access to system functions by controlling access of menu items. Users are configured with individual profiles that define which menu items will be selectable. If a user is granted access to a certain function or operation then that user has that privilege for all devices in the entire system.

Use the **Admin | Security | Users** menu item to assign access levels to system users. The **Users** command produces a dialog box as shown in Figure 3-1.

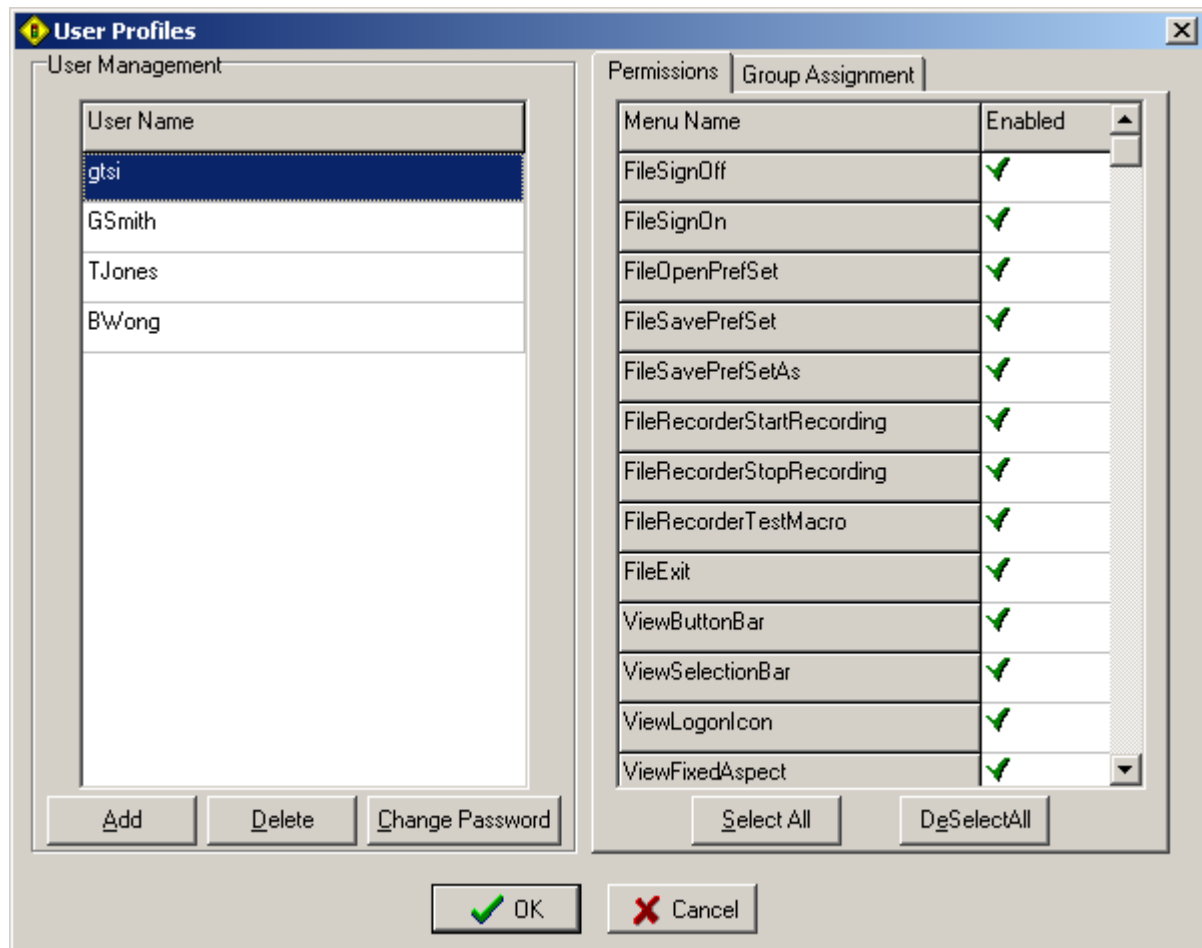


Figure 3-1: User Profiles Screen with Permissions Tab Selected

The User Profiles window is divided into two sections. The section on the left, or User Management section, lists all defined users. The section on the right contains two tabs – Permissions and Group Assignment which display the security profile and group association for the currently highlighted user name, respectively.

*Note: Only users with administrative permissions will have full access to the User Profile area. Those without these permissions may only change their password.*

To add a new user, press the **Add** button. Figure 3-2 will then appear.



Figure 3-2: Adding A User

After entering a user name and password, pressing **OK** will return the user to the User Profiles screen.

---

*Note: User Name and Password are case sensitive. User Names must be between 2 and 20 characters long and Passwords must be between 4 and 40 characters long.*

---

To change the password of a user, highlight the user name and press the **Change Password** button. Figure 3-3 will then appear.



Figure 3-3: Changing A Password

After entering a password, pressing **OK** will return the user to the User Profiles screen.

To delete a user, highlight the user name and press the **Delete** button.

To change the security profile of a user, highlight the user name, click on the Permissions tab, and click in the **Enabled** box next to each permission to be toggled. The **Select All** and **DeSelectAll** buttons may be used to quickly set the security profile to a state of maximum-rights or minimum-rights, respectively.

---

*Note: The security profile is loaded when the user logs on. Therefore if changes are made to the profile of the currently logged on user, the user will have to log off and then log back on before these changes will take effect.*

---

The following is a list and description of each security menu item:



File*:	[*= SignOn, SignOff, OpenPrefSet, SavePrefSet, SavePrefSetAs, RecorderStartRecording, RecorderStopRecording, FileRecorderTestMacro, Exit]: Enables access to each of these menu items under the File main menu.
View*:	[*= ButtonBar, SelectionBar, LogonIcon, FixedAspect, AutoLayers, MapScrolling, HomeView, BoxZoomMode]: Enables access to each of these menu items under the View main menu.
ViewWindowLayout*:	[*= SaveLayout, Save, Load]: Enables access to each of these items under the View   Window Layout sub menu.
ViewLayers*:	[*= MapBackground, SecondaryRoads, PrimaryRoads, Freeways, MSG, Phase, Link, CCTV, VMS]. Enables access to each of these items under the View   Layers sub menu.
ViewZoom*:	[*= 100, 150, 200, 400, 800]. Enables access to different zoom levels under the View   Zoom sub menu.
Link*:	[*= Volume, VKO, Occupancy, Speed]. Enables access to different zoom levels under the View   Link sub menu.
Objects*:	[*= System, Zone, Section, Master, Link, Signal, Detector, CCTV, DMS, Deselect]: Enables users to select these object types from the corresponding object selection window under the Object main menu.
Monitor*:	[*= SystemMap, SignalMap, SystemStatus, CommStatus, EventLog, VOS, AlarmLog, ControllerDBCompare]: Enables access to each of these items under the Monitor main menu.
MonitorOperationMode*:	[*= RealTime, Historical]: Not currently used.
Params*:	[*= DBEditor]: Enables access to Params   DBEditor.
Control*:	[*= ManualAssignment, SelectActiveConfig]: Enables access to each of these items under the Control main menu.
Page*:	[*=Group, Individual]: Enables access to each of these items under the Alert main menu.
Setup*:	[*= TrafficResponsive, TODSchedule, HolidayAssignment, ActionSetEditor]: Enables access to each of these items under the Setup main menu.
SetupAlarm*:	[*= Group, Individuals, Triggers]: Enables access to each of these items under the Setup   Alarms and Paging sub menu.
Analysis*:	[*=Split, TimeSpaceDiagram]: Enables access to each of these items under the Analysis main menu.
Admin*:	[*= Configuration]: Enables access to Admin   Configuration.
AdminSecurity*:	[*= Users, Groups, Jurisdictions]: Enables access to each of these items under the Admin   Security sub menu.
Incident*:	[*= PlaceIncidentIcon, SaveCurrentStatus, RefreshIncidentStatus]: Not currently used.
Reports*:	[*=Alarm, StuckPrtEvents]: Enables access to each of these items under the Reports main menu.
Help*:	[Contents, About]: Enables access to each of these items under the Admin main menu.
Aries1:	Enables access to the Aries feature.
Primary Operator:	Enables override of CCTV control (option module).

## MULTIJURISDICTIONAL ACCESS

In addition to the restriction of menu items, *icons*<sup>TM</sup> also has the ability to grant or deny access to specific menu items within the database editor feature. Users are associated with user groups, which are granted or denied access to each item based on the jurisdiction defined for the given controller.

---

*Note: The multijurisdictional access feature manages a group's rights only within database editor. It does not prevent a user from issuing commands to a controller defined in another jurisdiction (via Manual Assignment, Time of Day, etc.) or monitoring its status.*

---

## Managing Jurisdictions

Use the **Admin | Security | Jurisdictions** menu item to create each jurisdiction. The **Jurisdictions** command produces a dialog box as shown in Figure 3-4.

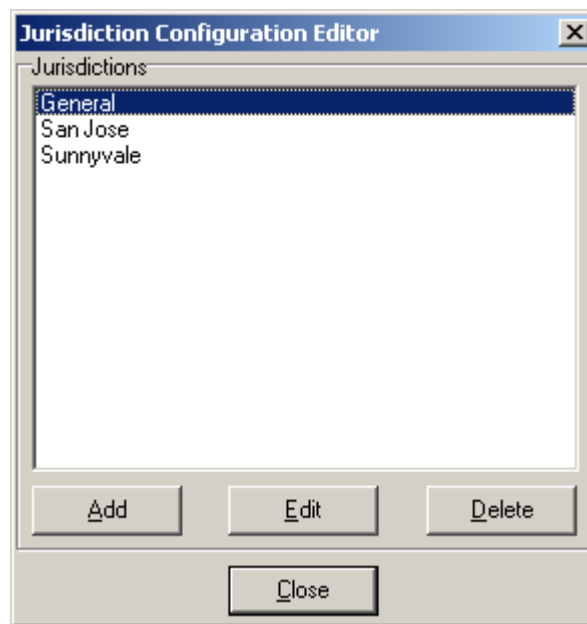


Figure 3-4: Jurisdiction Configuration Editor Screen

The Jurisdiction Configuration Editor window displays all defined jurisdictions.

To add a new jurisdiction, press the **Add** button. Figure 3-5 will then appear.

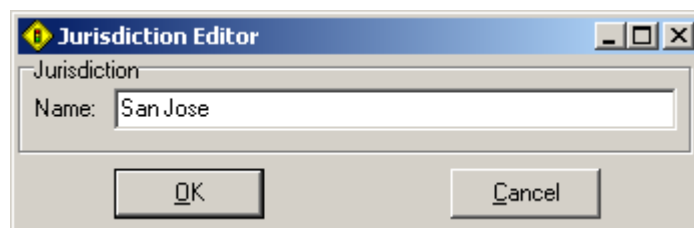


Figure 3-5: Adding A Jurisdiction


After entering a jurisdiction name, pressing **OK** will return the user to the Jurisdiction Configuration Editor screen.

To edit a jurisdiction, highlight the jurisdiction name and press the **Edit** button. Figure 3-5 will then appear, allowing the change to be made.

To delete a jurisdiction, highlight the jurisdiction name and press the **Delete** button.

## Managing User Groups


Use the **Admin | Security | Groups** menu item to create each user group. The **Groups** command produces a dialog box as shown in Figure 3-6.

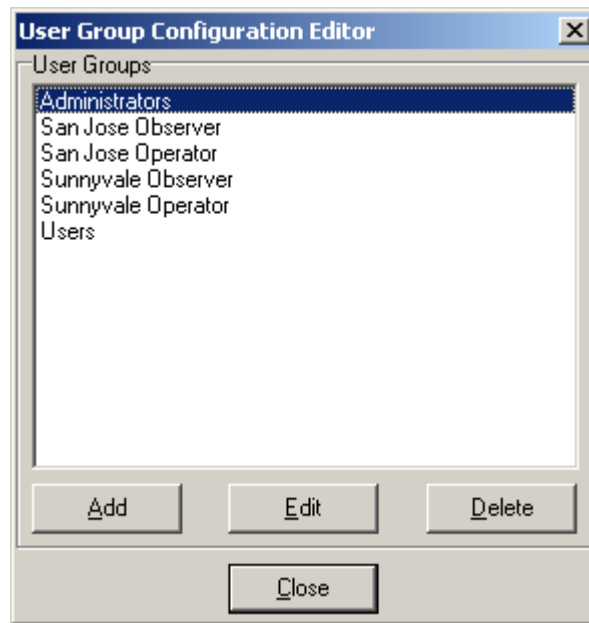

*Figure 3-6: User Group Configuration Editor Screen*

The User Group Configuration Editor window displays all defined user groups.

To add a new user group, press the **Add** button. Figure 3-7 will then appear.

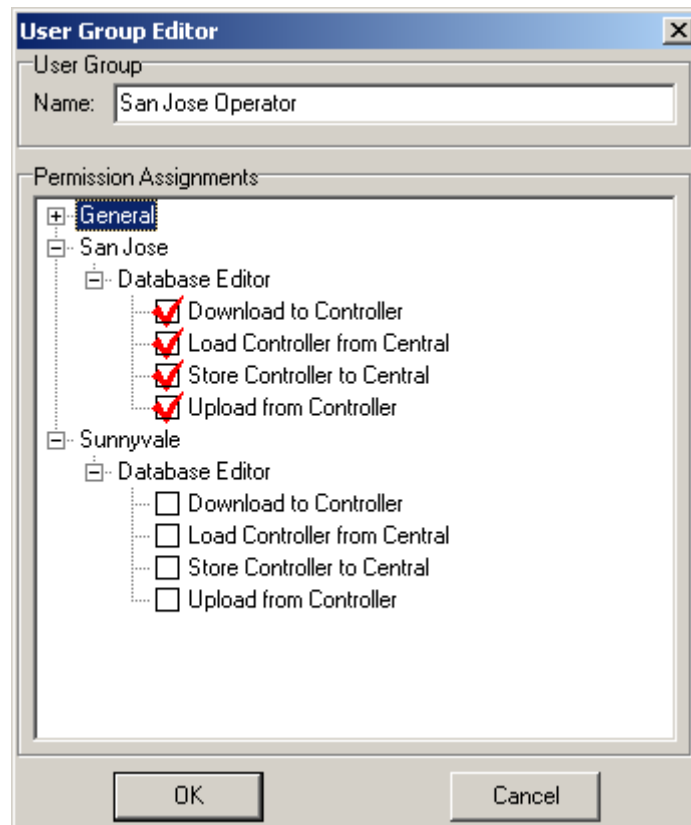

*Figure 3-7: Adding A User Group*

After entering a user group name, specify the appropriate rights for each jurisdiction. These are the menu items that will (or will not) be available within the database editor feature to users in the group being added. Pressing **OK** will return the user to the User Group Configuration Editor screen.

To edit a user group, highlight the user group name and press the **Edit** button. Figure 3-7 will then appear, allowing the change to be made.

To delete a user group, highlight the user group name and press the **Delete** button.

## User Group Association

Use the **Admin | Security | Users** menu item to assign a user to a user group. By selecting the **Users** command and clicking on the Group Assignment tab, the dialog box shown in Figure 3-8 will appear.

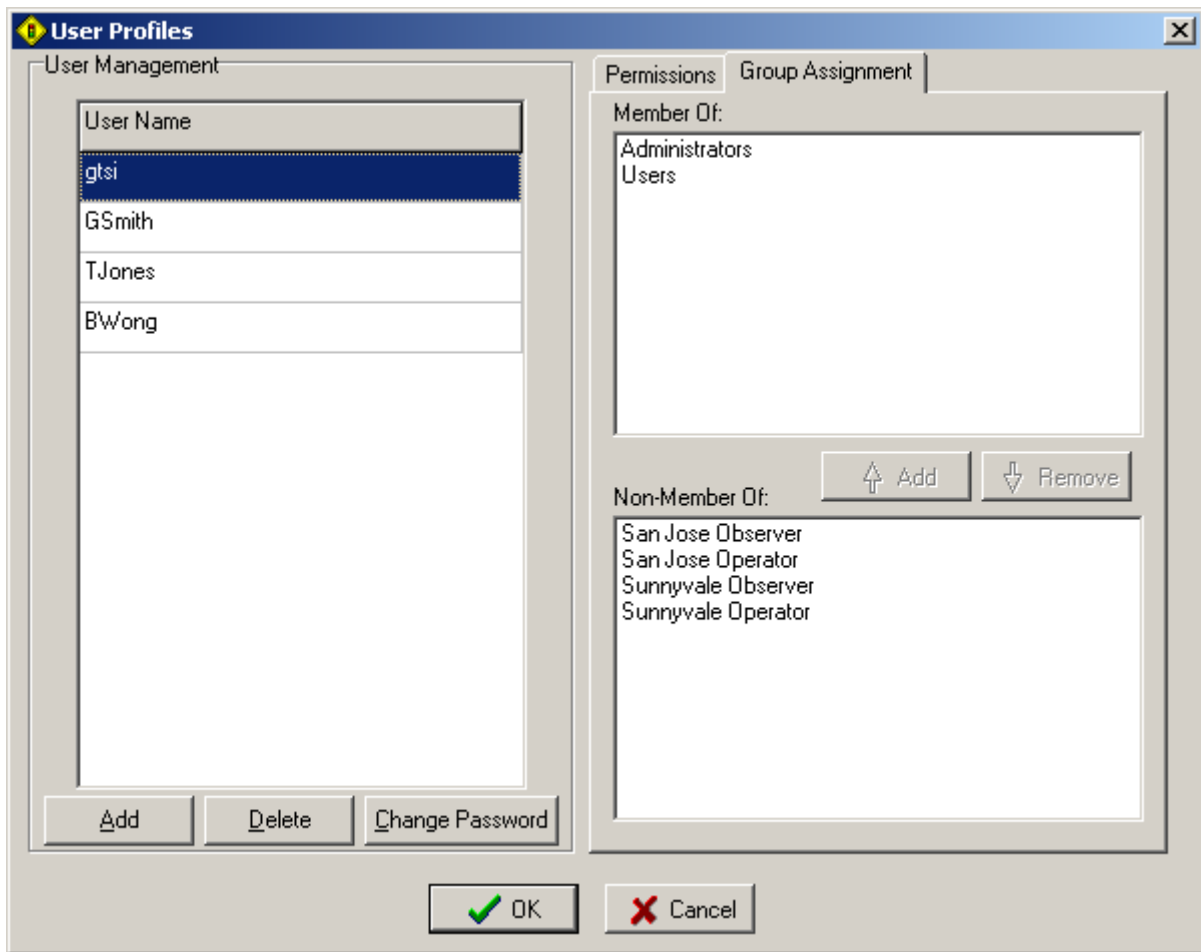


Figure 3-8: User Profiles Screen with Group Assignment Tab Selected

The Group Assignment tab of the User Profiles window displays all defined user groups and allows the assignment of users to them. The upper section, titled Member Of:, displays all groups which the highlighted user is a member of. In contrast, the lower section, titled Non-Member Of:, shows all groups which the highlighted user is not a member of.

To add the highlight user to a group, highlight the desired group in the Non-Member Of: section and press the **↑Add** button. To remove the highlight user from a group, highlight the desired group in the Member Of: section and press the **↓Remove** button.

*Note: The security profile is loaded when the user logs on. Therefore if changes are made to the profile of the currently logged on user, the user will have to log off and then log back on before these changes will take effect.*

## Associating Signals with Jurisdictions

The association of a signal with a jurisdiction is the final step in establishing a multijurisdictional system. In order to accomplish this, merely select the appropriate jurisdiction when defining a signal in the system configuration editor. See section 4 – System Configuration for details on defining a system.

## SECTION 4 - SYSTEM CONFIGURATION

The **icons™** system must first be configured using the System Configuration Editor prior to use. Use the **Admin | Configuration** menu item to activate the System Configuration Editor. The Editor generates a tree view and a list view of all system objects. The tree view control box allows the user to configure entities within the system as shown in Figure 4-1. The user can edit the attributes of an existing entity, add a new entity, or delete an entity from the system. The user can also drag and drop an entity object to change its position within the hierarchy structure of the system. If the **Close** button is pressed, all modified information is stored in the corresponding database.

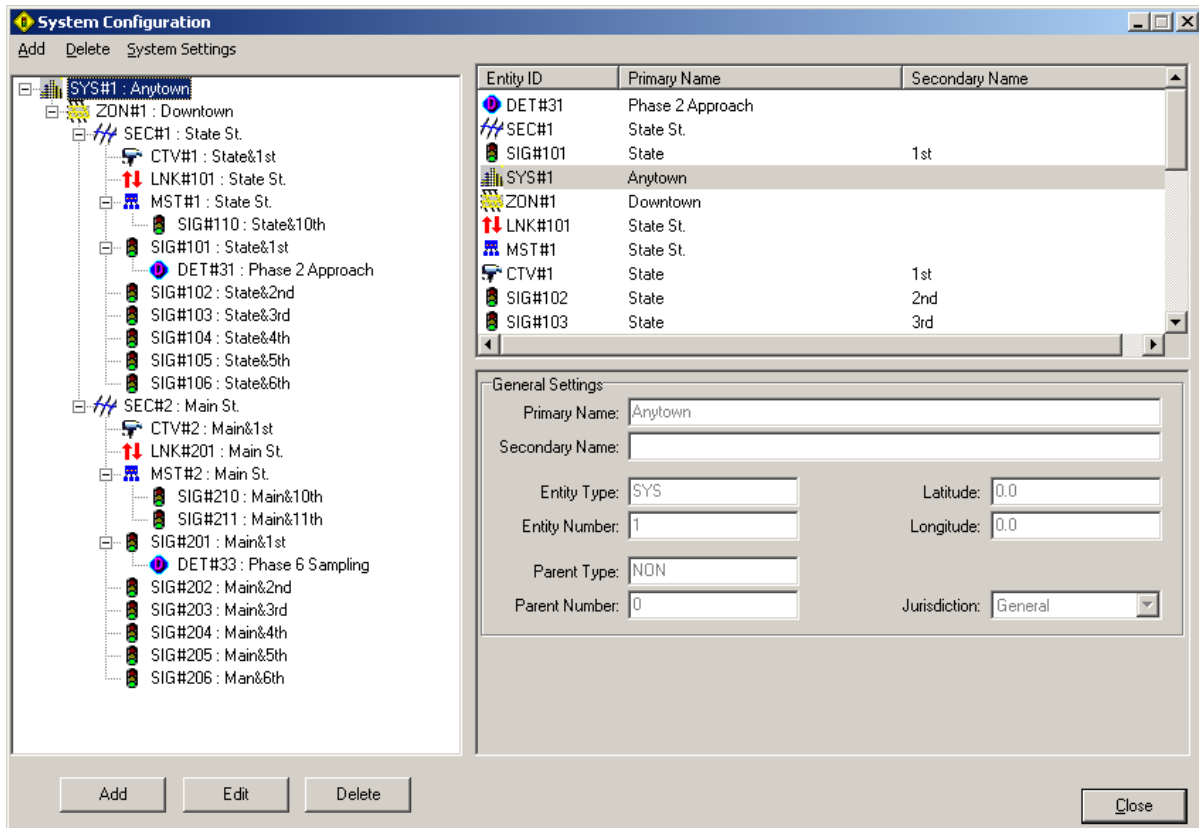


Figure 4-1: System Configuration Editor Screen












A system must first be configured as the root node using the **Add | New Root Node** menu item before any other entity can be defined. If more than one system is configured, the system number will be included in the entity identification number of the member entity. For example, Zone 2 in System 3 will be designated as ZON#2-3, while Section 1 in System 2 will be SEC#1-2, and Signal 101 in System 1 will be SIG#101 (-1 is implied). This allows the system of any given entity to be recognized easily in situations where the hierarchy is not displayed. Entities of the same type may not share the same entity number, even if located in different systems (i.e. ZON#3-2 and ZON#3-3).

 The entity numbers need only to be unique for a particular entity type and may be repeated among different entity types. For example, SEC#1, SIG#1, and DET#1 are all valid. The system that the device belongs to is still determined by the hierarchical tree structure. The entity number range is 1-9999. Each entity can only be a child to one parent entity. For example, if SIG#1 is a child of SEC#1 it cannot also be a child of SEC#2.

Entities may be added to the system using the **Add | New Child Node** or **Add | New Sibling Node** menu items. New child nodes may also be added using the **Add** button or by right click selecting with the mouse the parent entity to which you want to add a child entity. To edit an existing entity, highlight it and press the **Edit** button. If an entity needs to be deleted, highlight it and use the **Delete | Selected Node** menu item or the **Delete** button.

Although each entity is associated with a jurisdiction, only the associations pertaining to signals (SIG) are utilized at the moment. The sole purpose of these are for the configuration of the multijurisdictional access feature. See section 3 – Security for multijurisdictional access setup.

The following rules must be observed when developing the system hierarchy:

	<u>Entity</u>	<u>Name</u>	<u>Parent</u>
	SYS	System	
	ZON	Zone	SYS
	SEC	Section	SYS, ZON
	SIG	Traffic Signal	SYS, ZON, SEC, MST
	DET	Detector	SYS, ZON, SEC, MST, SIG, LNK
	LNK	Link	SYS, ZON, SEC
	MST	Master	SYS, ZON, SEC
	ARS	Aries	SYS, ZON, SEC
	CTV	Closed Circuit Television (CCTV)	SYS, ZON, SEC
	DMS	Dynamic Message Signs (not currently used)	


*Note: For ease of explanation, the following examples describe entity creation using root and child nodes. Creation using sibling nodes is equally effective, as long as the hierarchical rules are observed. Systems can only have other systems as siblings.*

## DEFINE A SYSTEM

### Mandatory Parameters

The following are mandatory steps required to define a System:

1. Select **Add | New Root Node** from the Configuration Editor menu. Figure 4-2 will then appear.

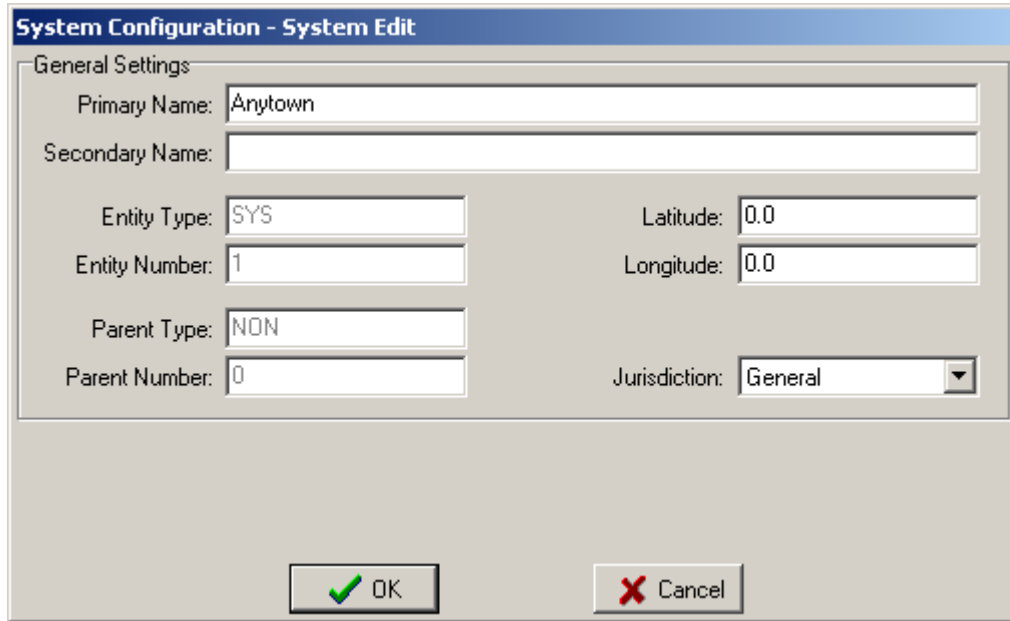

The image shows a 'System Configuration - System Edit' dialog box. It has a 'General Settings' section with the following fields: 'Primary Name' (text box with 'Anytown'), 'Secondary Name' (text box), 'Entity Type' (text box with 'SYS'), 'Entity Number' (text box with '1'), 'Parent Type' (text box with 'NON'), 'Parent Number' (text box with '0'), 'Latitude' (text box with '0.0'), 'Longitude' (text box with '0.0'), and 'Jurisdiction' (pull-down menu with 'General' selected). At the bottom are 'OK' and 'Cancel' buttons.

*Figure 4-2: Defining a System*

2. For the first system being created, an Entity Number of 1 is mandatory. For all subsequent systems, enter an unused 'SYS' Entity Number (Range 2 – 9999). The default is '1'.

---

*Note: It is highly recommended that only SYS#1 be used, as functional issues may result otherwise.*

---

3. Select A Jurisdiction from the pull down list. The default is 'General'.

### Optional Parameters

The following are optional steps to complete definition of a System:

1. Add Primary and Secondary Names (30 characters maximum each). These may be used to identify the system or jurisdiction in the case of multiple systems.
2. Add Latitude and Longitude information as necessary.
3. The Entity Type, Parent type, and Parent Number are non-editable fields and should be 'SYS', 'NON', and '0', respectively, since the SYS type is at the root level.

Select the **OK** button to accept the data, or the **Cancel** button to reject it.

## DEFINE A ZONE

### Mandatory Parameters

The following are mandatory steps required to define a Zone:

1. Highlight the System in the tree view under which the Zone will be defined. Select **Add | New Child Node** from the Configuration Editor menu or click the **Add** button.
2. Select 'ZON' from the Object Types pull down list. Figure 4-3 will then appear.



**System Configuration - Zone Edit**

General Settings

Primary Name:

Secondary Name:

Entity Type:

Entity Number:

Parent Type:

Parent Number:

Latitude:

Longitude:

Jurisdiction:

*Figure 4-3: Defining a Zone*

3. Enter a unique 'ZON' Entity Number (Range 1 – 9999). The default is '1'.
4. Select A Jurisdiction from the pull down list. The default is 'General'.

### Optional Parameters

The following are optional steps to complete definition of a Zone:

1. Add Primary and Secondary Names (30 characters maximum each). These would typically be used to describe a zone or area of control within a jurisdiction.
2. Add Latitude and Longitude information as necessary.
3. The Entity Type, Parent Type, and Parent Number are non-editable fields. They should indicate 'ZON', 'SYS', and the SYS entity number, respectively.

Select the **OK** button to accept the data, or the **Cancel** button to reject it.

## DEFINE A SECTION

### Mandatory Parameters

The following are mandatory steps required to define a Section:

1. Highlight the parent entity (System or Zone) in the tree view under which the Section will be defined. Select **Add | New Child Node** from the Configuration Editor menu or click the **Add** button.
2. Select 'SEC' from the Object Types pull down list. Figure 4-4 will then appear.

**System Configuration - Section Edit**

General Settings

Primary Name: State St.

Secondary Name:

Entity Type: SEC

Entity Number: 1

Parent Type: ZON

Parent Number: 1

Latitude: 0.0

Longitude: 0.0

Jurisdiction: General

OK Cancel

*Figure 4-4: Defining a Section*

3. Enter a unique 'SEC' Entity Number (Range 1 – 9999). The default is '1'.
4. Select A Jurisdiction from the pull down list. The default is 'General'.

### Optional Parameters

The following are optional steps to complete definition of a Section:

1. Add Primary and Secondary Names (30 characters maximum each). These would typically indicate the name of the street and some other descriptor for an arterial with multiple intersections.
2. Add Latitude and Longitude information as necessary.
3. The Entity Type, Parent Type, and Parent Number are non-editable fields. These should indicate 'SEC', the parent ('SYS' or 'ZON'), and the corresponding entity number of that parent, respectively.

Select the **OK** button to accept the data, or the **Cancel** button to reject it.

## DEFINE A SIGNAL

### Mandatory Parameters

The following are mandatory steps required to define a Signal:

1. Highlight the parent entity (System, Zone, Section, or Master) in the tree view under which the Signal will be defined. Select **Add | New Child Node** from the Configuration Editor menu or click the **Add** button.
2. Select 'SIG' from the Object Types pull down list. Figure 4-5 will then appear.

**System Configuration - Traffic Signal Edit**

**General Settings**

Primary Name:

Secondary Name:

Entity Type:  Latitude:

Entity Number:  Longitude:

Parent Type:

Parent Number:  Jurisdiction:

**Signal Settings**

Firmware Version:

Controller Type:

**Main Street Green Phase**

☐ 1 ☒ 2 ☐ 3 ☐ 4 ☐ 5 ☒ 6 ☐ 7 ☐ 8

*Figure 4-5: Defining a Signal*

3. Enter a unique 'SIG' Entity Number (Range 1 – 9999). The default is '1'.
4. Select the controller type from the pull down list. The following options are available:
  - ☐ Simulator: generic controller that generates simulated data to drive the workstation graphics.
  - ☐ NextPhase 1.3: Gardner Systems NextPhase software version 1.3 for Model 2070 controllers.
  - ☐ NextPhase 1.4: Gardner Systems NextPhase software version 1.4 for Model 2070 controllers.
  - ☐ NextPhase 1.4 NTCIP: Gardner Systems NextPhase software version 1.4 for Model 2070 controllers with support for NTCIP.
  - ☐ NextPhase 1.5: Gardner Systems NextPhase software version 1.5 for Model 2070 controllers.
  - ☐ ASC/2: Econolite Control Products, Inc. ASC/2 controller.
  - ☐ ASC/2M: Econolite Control Products, Inc. ASC/2 field master controller.
  - ☐ ASC/2 NTCIP: Econolite Control Products, Inc. NTCIP compliant ASC/2 controller.
  - ☐ TMP390: Traconex TMP390 controller.
  - ☐ Eagle: Eagle EPAC controller.
  - ☐ RCU Editor
  - ☐ Vector GS: McCain Traffic Supply Vector controller.
5. Select the Firmware Version from the pull down list (ASC2 only). The Small Database is typically used with AB3418 controllers and the Large Database is used with NTCIP controllers.
6. Select the phases for main street green (MSG) by checking the boxes next to the appropriate numbers. This definition is used to generate the MSG graphics.
7. Select the Comm Settings button for further communications setup (NextPhase 1.5 using IP communications only) - See the IP Communications User Manual for further setup and configuration information.
8. Select A Jurisdiction from the pull down list. The default is 'General'.

## Optional Parameters

The following are optional steps to complete definition of a Signal:

1. Add Primary and Secondary Names (30 characters maximum each). These are typically used to identify the main street and side street for the intersection.
2. Add Latitude and Longitude information as necessary.
3. The Entity Type, Parent Type, and Parent Number are non-editable fields. These should indicate 'SIG', the parent ('SYS', 'ZON', 'SEC', or 'MST'), and the corresponding entity number of that parent, respectively.

Select the **OK** button to accept the data, or the **Cancel** button to reject it.

The **Comm Settings** button is only selectable for Nextphase 1.5 controller types. This button allows the user to configure controller communications over an IP data network (See the IPSupport User Manual for further setup and configuration information).

## DEFINE A DETECTOR

### Mandatory Parameters

The following are mandatory steps required to define a Detector:

1. Highlight the parent entity (System, Zone, Section, Master, Signal, or Link) in the tree view under which the Detector will be defined. Select **Add | New Child Node** from the Configuration Editor menu or click the **Add** button.
2. Select 'DET' from the Object Types pull down list. Figure 4-6 will then appear.

Figure 4-6: Defining a Detector

3. Enter a unique 'DET' Entity Number (Range 1 – 9999). The default is '1'.
4. Select the signal number that the detector is a part of from the pull down list.

5. Enter a local detector number. This is the local detector number as configured on the parent controller (must be greater than zero). The signal number and local detector number pair is used to associate system detector data with the DET Entity Number.
6. Select A Jurisdiction from the pull down list. The default is 'General'.

Each detector must have a unique entity number, in addition to a unique combination of signal and local detector number.

### Optional Parameters

The following are optional steps to complete definition of a Detector:

1. Add Primary and Secondary Names (30 characters maximum each). These are typically used to identify the intersection and the location/direction of the system detector.
2. Add Latitude and Longitude information as necessary.
3. The Entity Type, Parent Type and Parent Number are non-editable fields. These should indicate 'DET', the parent ('SYS', 'ZON', 'SEC', 'MST', 'SIG', or 'LNK'), and the corresponding entity number of that parent, respectively.

Select the **OK** button to accept the data, or the **Cancel** button to reject it.

## DEFINE A LINK

### Mandatory Parameters

The following are mandatory steps required to define a Link:

1. Highlight the parent entity (System, Zone, or Section) in the tree view under which the Link will be defined. Select **Add | New Child Node** from the Configuration Editor menu or click the **Add** button.
2. Select 'LNK' from the Object Types pull down list. Figure 4-7 will then appear.

**System Configuration - Link Edit**

**General Settings:**

Primary Name: State St.

Secondary Name:

Entity Type: LNK

Entity Number: 101

Parent Type: SEC

Parent Number: 1

Latitude: 0.0

Longitude: 0.0

Jurisdiction: General

**Link Settings:**

Configure

OK Cancel

*Figure 4-7: Defining a Link*

3. Enter a unique 'LNK' Entity Number (Range 1 – 9999). The default is '1'.
4. Select A Jurisdiction from the pull down list. The default is 'General'.

### Optional Parameters

The following are optional steps to complete definition of a Link:

1. Add Primary and Secondary Names (30 characters maximum each). These would typically indicate the name of the street or arterial and some additional descriptive information about the link such as location and direction.
2. Add Latitude and Longitude information as necessary.
3. The Entity Type, Parent Type, and Parent Number are non-editable fields. These should indicate 'LNK', the parent ('SYS', 'ZON', or 'SEC'), and the corresponding entity number of that parent, respectively.

Select the **OK** button to accept the data, or the **Cancel** button to reject it.

See Section 8 for setup and configuration of the Link.

## DEFINE A MASTER

### Mandatory Parameters

The following are mandatory steps required to define a signal Master:

1. Highlight the parent entity (System, Zone, or Section) in the tree view under which the Master will be defined. Select **Add | New Child Node** from the Configuration Editor menu or click the **Add** button.
2. Select 'MST' from the Object Types pull down list. Figure 4-8 will then appear.

**System Configuration - Master Edit**

General Settings:

Primary Name: State St.

Secondary Name:

Entity Type: MST

Entity Number: 1

Parent Type: SEC

Parent Number: 1

Latitude: 0.0

Longitude: 0.0

Jurisdiction: General

OK Cancel

*Figure 4-8: Defining a Master*

3. Enter a unique 'MST' Entity Number (Range 1 – 9999). The default is '1'.
4. Select A Jurisdiction from the pull down list. The default is 'General'.

### Optional Parameters

The following are optional steps to complete definition of a signal Master:

1. Add Primary and Secondary Names (30 characters maximum each). These would typically indicate the name of the street and some other descriptor for an arterial with multiple intersections.
2. Add Latitude and Longitude information as necessary.
3. The Entity Type, Parent Type, and Parent Number are non-editable fields. They should indicate 'MST', the parent ('SYS', 'ZON', or 'SEC'), and the corresponding entity number of that parent, respectively.

Select the **OK** button to accept the data, or the **Cancel** button to reject it.

## DEFINE AN ARIES NODE

### Mandatory Parameters

The following are mandatory steps required to define an Aries Node:

1. Highlight the parent entity (System, Zone, or Section) in the tree view under which the Aries Node will be defined. Select **Add | New Child Node** from the Configuration Editor menu or click the **Add** button.
2. Select 'ARS' from the Object Types pull down list. Figure 4-9 will then appear.

**System Configuration - ARS Edit**

General Settings

Primary Name: State St.

Secondary Name: Main St.

Entity Type: ARS

Entity Number: 101

Parent Type: SYS

Parent Number: 1

Latitude: 0.0

Longitude: 0.0

Jurisdiction: General

OK Cancel

*Figure 4-9: Defining an Aries Node*

3. Enter a unique 'ARS' Entity Number (Range 1 – 9999). The default is '1'.
4. Select A Jurisdiction from the pull down list. The default is 'General'.

### Optional Parameters

The following are optional steps to complete definition of an Aries Node:

1. Add Primary and Secondary Names (30 characters maximum each). These would typically indicate the name of the street and some other descriptor for an arterial with multiple intersections.
2. Add Latitude and Longitude information as necessary.
3. The Entity Type, Parent Type, and Parent Number are non-editable fields. They should indicate 'ARS', the parent ('SYS', 'ZON', or 'SEC'), and the corresponding entity number of that parent, respectively.

Select the **OK** button to accept the data, or the **Cancel** button to reject it.

See the Aries Users Manual for further setup and configuration information.

## DEFINE A CCTV

### Mandatory Parameters

The following are mandatory steps required to define a Closed Circuit Television (CCTV) camera:

1. Highlight the parent entity (System, Zone, or Section) in the tree view under which the Camera will be defined. Select **Add | New Child Node** from the Configuration Editor menu or click the **Add** button.
2. Select 'CTV' from the Object Types pull down list. Figure 4-10 will then appear.

**System Configuration - CCTV Edit**

General Settings

Primary Name: State

Secondary Name: 1st

Entity Type: CTV

Entity Number: 1

Parent Type: SEC

Parent Number: 1

Latitude: 0.0

Longitude: 0.0

Jurisdiction: General

OK Cancel

Figure 4-10: Defining a CCTV



3. Enter a unique 'CTV' Entity Number (Range 1 – 9999). The default is '1'.
4. Select A Jurisdiction from the pull down list. The default is 'General'.

### Optional Parameters

The following are optional steps to complete definition of a CCTV camera:

1. Add Primary and Secondary Names (30 characters maximum each). These are typically used to identify the main street and side street for the camera location.
2. Add Latitude and Longitude information as necessary.
3. The Entity Type, Parent Type, and Parent Number are non-editable fields. They should indicate 'CTV', the parent ('SYS', 'ZON', or 'SEC'), and the corresponding entity number of that parent, respectively.


Select the **OK** button to accept the data, or the **Cancel** button to reject it.

See the CCTV Users Manual for further setup and configuration information.

### EVENT MAPPING CONFIGURATION

The Event Mapper allows for generic events, such as NTCIP events or special function ON events, to be remapped to other specific system events. These specific system events can then be logged and used to generate alarms or pages. The Event Mapper operation requires that the ITMS EventMapper service is running on the *icons*<sup>TM</sup> server (See the *icons*<sup>TM</sup> System Administration Manual).

To utilize this feature, select the **System Settings | EventMapping Configuration** system configuration menu item. The EventMap Configuration screen will then appear, as shown in Figure 4-11.

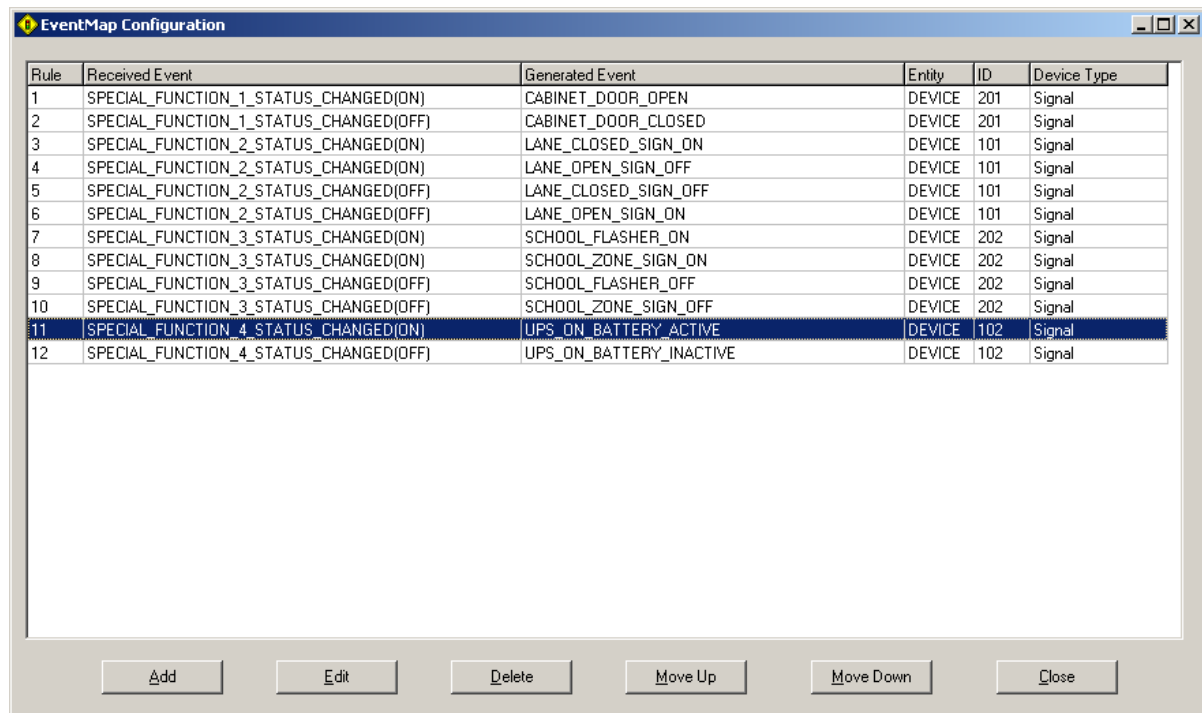

Rule	Received Event	Generated Event	Entity	ID	Device Type
1	SPECIAL_FUNCTION_1_STATUS_CHANGED(ON)	CABINET_DOOR_OPEN	DEVICE	201	Signal
2	SPECIAL_FUNCTION_1_STATUS_CHANGED(OFF)	CABINET_DOOR_CLOSED	DEVICE	201	Signal
3	SPECIAL_FUNCTION_2_STATUS_CHANGED(ON)	LANE_CLOSED_SIGN_ON	DEVICE	101	Signal
4	SPECIAL_FUNCTION_2_STATUS_CHANGED(ON)	LANE_OPEN_SIGN_OFF	DEVICE	101	Signal
5	SPECIAL_FUNCTION_2_STATUS_CHANGED(OFF)	LANE_CLOSED_SIGN_OFF	DEVICE	101	Signal
6	SPECIAL_FUNCTION_2_STATUS_CHANGED(OFF)	LANE_OPEN_SIGN_ON	DEVICE	101	Signal
7	SPECIAL_FUNCTION_3_STATUS_CHANGED(ON)	SCHOOL_FLASHER_ON	DEVICE	202	Signal
8	SPECIAL_FUNCTION_3_STATUS_CHANGED(ON)	SCHOOL_ZONE_SIGN_ON	DEVICE	202	Signal
9	SPECIAL_FUNCTION_3_STATUS_CHANGED(OFF)	SCHOOL_FLASHER_OFF	DEVICE	202	Signal
10	SPECIAL_FUNCTION_3_STATUS_CHANGED(OFF)	SCHOOL_ZONE_SIGN_OFF	DEVICE	202	Signal
11	SPECIAL_FUNCTION_4_STATUS_CHANGED(ON)	UPS_ON_BATTERY_ACTIVE	DEVICE	102	Signal
12	SPECIAL_FUNCTION_4_STATUS_CHANGED(OFF)	UPS_ON_BATTERY_INACTIVE	DEVICE	102	Signal

Buttons: Add, Edit, Delete, Move Up, Move Down, Close

Figure 4-11: EventMap Configuration

All defined event mappings, also known as rules, are displayed on this screen. They may be edited or deleted by highlighting the desired mapping and pressing the **Edit** or **Delete** buttons, respectively. If more than one rule exists, priority may be increased or decreased through the use of the **Move Up** and **Move Down** buttons, respectively. Pressing the **Add** button will launch the Add EventMap window, which is shown in Figure 4-12.

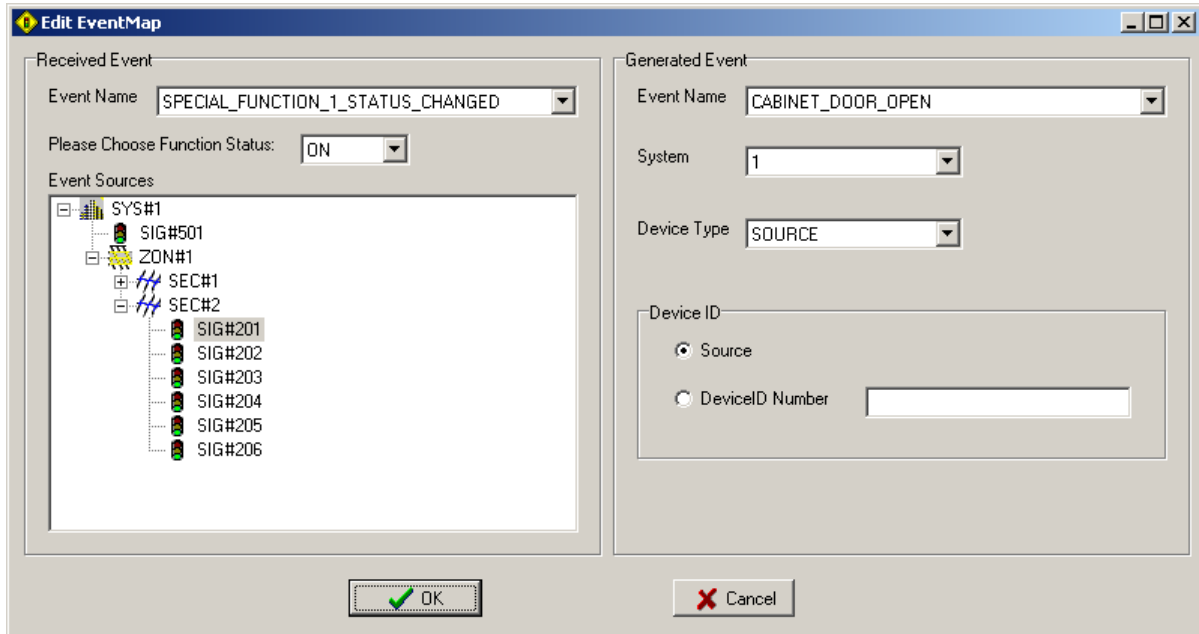


Figure 4-12: Adding an EventMap

Within the Add EventMap window, there are two main sections: Received Event and Generated Event. The Received Event section is used to identify the source events and source devices that will be mapped into a generated event. The Generated Event section, in contrast, is used for selecting the event name and other information needed to map the received event into its generated event.

### Received Event Group

The *Event Name* list box contains a list of the events that may be used (mapped) to generate some other event within the system. Two special cases exist:

If GENERAL\_ALARM\_ACTIVE or GENERAL\_ALARM\_INACTIVE are selected, a field will appear below *Event Name* requesting the alarm number. The valid range is between 1 and 255.

If any of the SPECIAL\_FUNCTION\_x\_STATUS\_UPDATE events are selected, a field will appear below *Event Name* requesting the function status. Choices are ON or OFF.

Received event choices include:

AUTOMATIC\_FLASH  
 FAULT\_MONITOR\_FLASH  
 GENERAL\_ALARM\_ACTIVE  
 GENERAL\_ALARM\_INACTIVE  
 LOCAL\_MANUAL\_FLASH  
 MMU\_FLASH

OTHER\_FLASH  
PREEMPT\_FLASH  
PREEMPT\_NOTACTIVE  
PREEMPT\_OTHER  
REPORTING\_CABINET\_FLASH  
REPORTING\_COORDINATION\_ALARM  
REPORTING\_CRITICAL\_ALARM  
REPORTING\_NONCRITICAL\_ALARM  
SPECIAL\_FUNCTION\_1\_STATUS\_CHANGED  
SPECIAL\_FUNCTION\_1\_STATUS\_UPDATE  
SPECIAL\_FUNCTION\_2\_STATUS\_CHANGED  
SPECIAL\_FUNCTION\_2\_STATUS\_UPDATE  
SPECIAL\_FUNCTION\_3\_STATUS\_CHANGED  
SPECIAL\_FUNCTION\_3\_STATUS\_UPDATE  
SPECIAL\_FUNCTION\_4\_STATUS\_CHANGED  
SPECIAL\_FUNCTION\_4\_STATUS\_UPDATE  
SPECIAL\_FUNCTION\_5\_STATUS\_CHANGED  
SPECIAL\_FUNCTION\_5\_STATUS\_UPDATE  
SPECIAL\_FUNCTION\_6\_STATUS\_CHANGED  
SPECIAL\_FUNCTION\_6\_STATUS\_UPDATE  
SPECIAL\_FUNCTION\_7\_STATUS\_CHANGED  
SPECIAL\_FUNCTION\_7\_STATUS\_UPDATE  
SPECIAL\_FUNCTION\_8\_STATUS\_CHANGED  
SPECIAL\_FUNCTION\_8\_STATUS\_UPDATE  
STARTUP\_FLASH

Located below the *Event Name* list box is the *Event Sources* tree. This feature allows the user to choose which entity is associated with the mapped event.

### **Generated Event Group**

The *Event Name* list box contains a list of all possible system events that may be generated as a result of the Event Mapping operation.

Generated event choices include:

CABINET\_DOOR\_CLOSED  
CABINET\_DOOR\_OPEN  
CONTROLLER\_REPORTING\_DB\_CHANGED  
CONTROLLER\_STOPPED\_REPORTING\_DB\_CHANGED  
DOWNLOAD\_REQUEST\_FROM\_CONTROLLER  
EV\_PREEMPT\_ACTIVE  
EV\_PREEMPT\_NOTACTIVE  
LANE\_CLOSED\_AHEAD\_SIGN\_OFF  
LANE\_CLOSED\_AHEAD\_SIGN\_ON  
LANE\_CLOSED\_SIGN\_OFF  
LANE\_CLOSED\_SIGN\_ON  
LANE\_OPEN\_SIGN\_OFF  
LANE\_OPEN\_SIGN\_ON  
MANUAL\_CONTROL\_ACTIVE  
MANUAL\_CONTROL\_INACTIVE  
NO\_LEFT\_TURN\_SIGN\_OFF  
NO\_LEFT\_TURN\_SIGN\_ON

NO\_RIGHT\_TURN\_SIGN\_OFF  
NO\_RIGHT\_TURN\_SIGN\_ON  
POLICE\_DOOR\_CLOSED  
POLICE\_DOOR\_OPEN  
POLICE\_FLASH\_ACTIVE  
POLICE\_FLASH\_INACTIVE  
RR\_PREEMPT\_ACTIVE  
RR\_PREEMPT\_NOTACTIVE  
SCHOOL\_FLASHER\_OFF  
SCHOOL\_FLASHER\_ON  
SCHOOL\_ZONE\_SIGN\_OFF  
SCHOOL\_ZONE\_SIGN\_ON  
SIGNAL\_AHEAD\_SIGN\_OFF  
SIGNAL\_AHEAD\_SIGN\_ON  
STREET\_LIGHTING\_OFF  
STREET\_LIGHTING\_ON  
SURGE\_ARRESTOR\_FAULT\_OFF  
SURGE\_ARRESTOR\_FAULT\_ON  
TECHNICIAN\_FLASH\_ACTIVE  
TECHNICIAN\_FLASH\_INACTIVE  
THIRD\_CAR\_DETECTION\_DISABLED  
THIRD\_CAR\_DETECTION\_ENABLED  
UPS\_ALARM\_ACTIVE  
UPS\_ALARM\_INACTIVE  
UPS\_ON\_BATTERY\_ACTIVE  
UPS\_ON\_BATTERY\_INACTIVE

From the *System* list box, the user must select from one of the available systems configured in *icons*<sup>TM</sup>, or a special selection called “Source”. The selection of “Source” is a global selection to indicate all systems.

The *Device Type* list box allows the user to further define (link) the generated event to a specific device type such as a Signal or Detector. The selection of “Source” indicates that the source (received event) event device type will be used.

There are two options for selecting *Device ID* values. The selection of “Source” indicates the source device ID number will be used. Alternately, a specific Device ID number can be entered (in the range of 1 to 9999) for the generated event.

### Event Mapping Priority Sequence

As various system events are received from the ITMS Event Channel, the list of rules is scanned starting from the top of the list. The system will select the first rule match found for an event. Therefore, more restrictive (device specific) rules should be placed before general rules to assure their detection.

The **Move Up** and **Move Down** buttons in Figure 4-11 may be used to reorder the rules without deleting or re-adding them. For instance, if the user wants to change the rule 111 event mapping to rule 110, rule 111 is selected, and the **Move Up** button pressed.

## STUCK PREEMPT CONFIGURATION

The Stuck Preempt Configuration allows the user to configure the Stuck Preempt Detection service. This service continuously checks the duration of railroad and emergency vehicle preempt conditions against user-defined maximum duration limits. If these limitations are exceeded the service will log these events. This operation requires that the ITMS StuckPreemptDetection service is running on the *icons*<sup>TM</sup> server (See the *icons*<sup>TM</sup> System Administration Manual). The service determines if the time duration limits have exceeded a predetermined value, and if so generates an event message that is logged to the database.

To utilize this feature, select the **System Settings | Stuck Preempt Configuration** menu item. The Preempt Event Configuration screen will then appear, as shown in Figure 4-13.

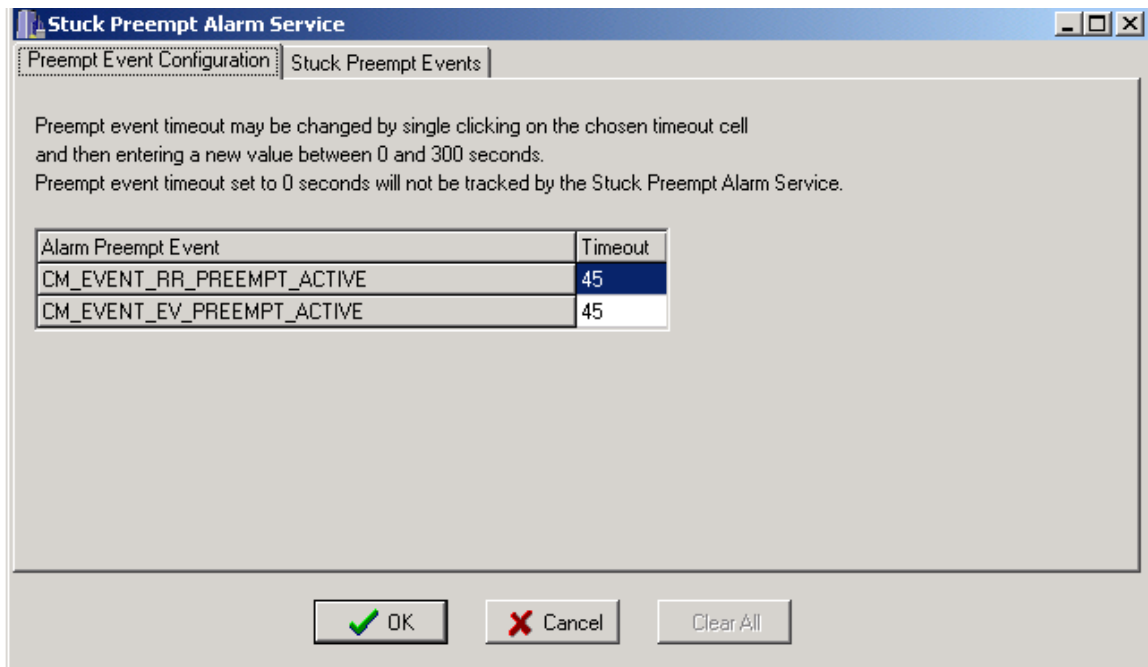


Figure 4-13: Preempt Event Configuration

The Stuck Preempt Detection Configuration tab page is used to change timeouts for individual preempt events. The service supports railroad preempt events (CM\_EVENT\_RR\_PREEMPT\_ACTIVE) and emergency vehicle preempt events (CM\_EVENT\_EV\_PREEMPT\_ACTIVE). The initial setting for these two events is 45 seconds. Single click on the *timeout* cell for a preempt event and enter desired number of seconds to change the timeout value. The value can range between 0 and 300 seconds (5 minutes). If a value is set to zero, the service will ignore that alert. These values apply globally to all devices.

Select the **OK** button to accept the data, or the **Cancel** button to revert to the previous settings.

*Note: Prior to any changes of the timeout value taking effect, the ITMS Communication, ITMS Relay, and ITMS StuckPreemptDetection services must be restarted.*

The Stuck Preempt Events tab page is used to clear any of the already stuck preempt alarms. The Stuck Preempt Events screen is shown in Figure 4-14. The **Clear All** button is disabled when Preempt Event Configuration tabbed page is visible, as it only supports the Stuck Preempt Events

tabbed page. Initially when the page opens it shows only the preempt events that are currently stuck. They are marked with YES status in the *Currently Stuck* column.

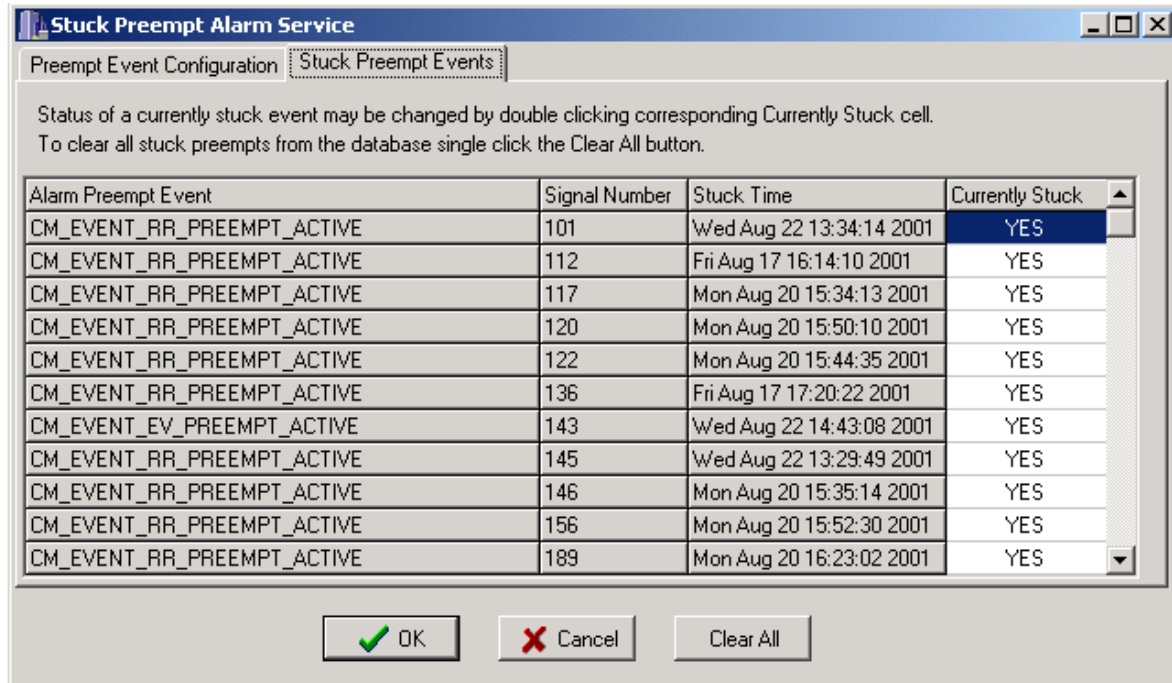


Figure 4-14: Stuck Preempt Events

There are two ways to clear current stuck preempt events. The first method is to clear individual stuck preempt events by double clicking the *Currently Stuck* cell. The status of that event changes from YES to NO. In case of making a mistake, the user may double click the same cell again to revert to the previous setting. The second method is to clear all the stuck preempt events by clicking on the **Clear All** button. A warning message will prompt for confirmation of the action. The **OK** button saves changes made on this screen. The **Cancel** button will disregard all changes made on this screen.

## TIME DRIFT CONFIGURATION (ASC/2 – NTCIP ONLY)

The purpose of the Time Drift Monitor is to periodically check the time on all controllers in the system. The Time Drift Monitor operation requires that the ITMS TimeDrift service is running on the *icons™* server (See the *icons™* System Administration Manual). The service determines if the time difference between the reported controller time and the *icons™* system time has exceeded a predetermined value. If a controller reports a time outside the allowed drift it will generate a message on the Event Channel. This message will be logged and if alarms are set will cause an alarm to be sent.

To utilize this feature, select the **System Settings | Time Drift Configuration** system configuration menu item. The Time Drift Monitor Configuration screen will then appear, as shown in Figure 4-15.

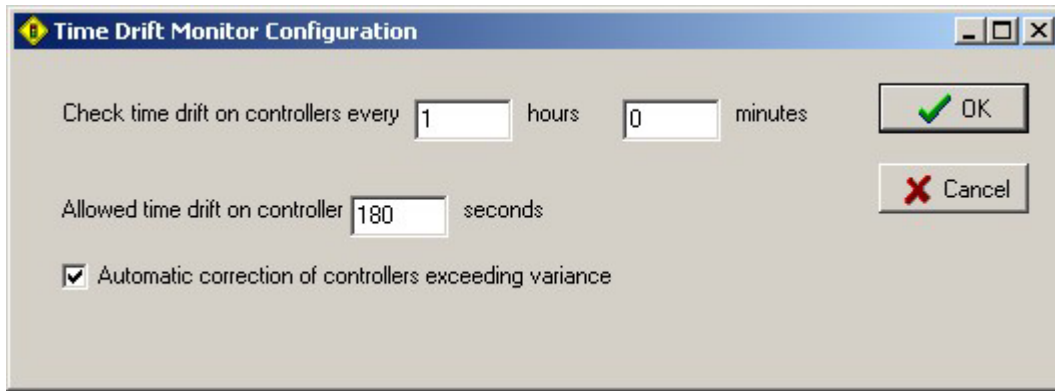


Figure 4-15: Time Drift Monitor Configuration

The frequency of the time checks is set in the *Check time drift on controllers every* boxes. The valid *hours* range is between 1 and 47, while the valid *minutes* range is between 0 and 59.

The allowable time difference between the controller and system clock is specified in the *Allowed time drift on controller* box. The valid range is between 1 and 180 seconds. When this time is exceeded, a message is issued over the Event Channel.

If the *Automatic correction of controllers exceeding variance* check box is selected, the system will automatically update the controller time whenever the allowable time drift is exceeded.

## EVENT LOG MONITOR CONFIGURATION

The Event Log Monitor service manages the size of the SignalPhaseData, EventLoggerData, DetectorData (VOS), and LinkVOSLog tables in the *icons™* database. The oldest records are removed to maintain table sizes to a predefined record count. The Event Log Monitor operation requires that the ITMS EventLogMonitor service is running on the *icons™* server (See the *icons™* System Administration Manual).

To automatically manage the size and archival of each of these tables, select the **System Settings | EventLogMonitor Configuration** system configuration menu item. The EventLogMonitor Configuration screen will then appear, as shown in Figure 4-16.

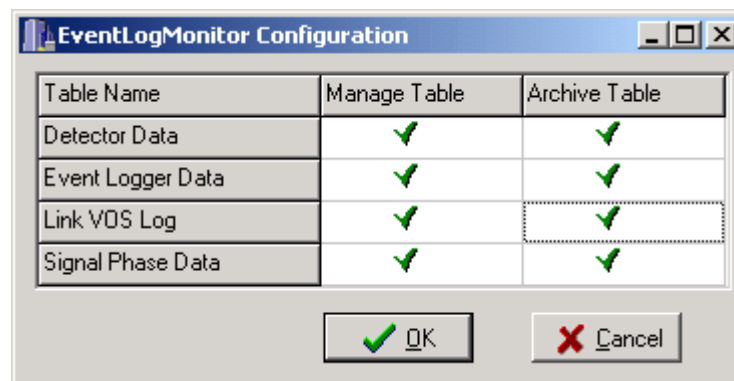


Figure 4-16: EventLogMonitor Configuration

Each of the four tables can be individually managed and archived. If both the *Manage Table* and *Archive Table* checkboxes are selected then the service will archive data that has been kept in the Source Table for more than one day and delete it from the source table. The *Archive Table* checkbox can only be selected if the *Manage Table* is also selected.

If only the *Manage Table* checkbox is selected then the service will delete data that has been kept in the source table for more than one day and not archive it.

If the *Manage Table* checkbox is not selected then the source table will continue to grow without limitation and the user will be prompted with a warning message. This configuration may be desirable if data spanning multiple days is required for analysis programs such as Time Space, or Split Monitor.

The following is a description of each table:

**Detector Data** – This table contains the VOS data collected using the Detector Mapper service. See section 7 – System Detector Data.

**Event Logger Data** – This table contains system Event Log Data. See section 6 – System Reports.

**Link VOS Log** – This table contains the system link data. See section 8 – Links.

**Signal Phase Data** – This table contains system Signal Phase Data. See section 6 – System Reports.



## SECTION 5 - TRAFFIC SIGNAL OPERATION

This section describes the complete *icons*<sup>TM</sup> traffic signal control operation.

### SYSTEM SETUP AND CONFIGURATION

Before operation with an intersection is possible, the intersection needs to be defined in the system. The following system components need to be configured with the intersection and controller parameters:

- ❑ Communications Server (ITMS Communications and ITMS Relay services).
- ❑ System Configuration Editor (*icons*<sup>TM</sup> database).
- ❑ Map Graphics Files (Main, Area and Intersection maps).

The order in which these updates are made is not important and even partial installations are possible as part of an overall system deployment. However, all three components need to be updated before complete *icons*<sup>TM</sup> operation can be supported.

For example, the communications server can be configured with all of the controller information to support communications integration tasks before these intersections are added to the *icons*<sup>TM</sup> database. This allows technicians to setup field controllers and support time synchronization operations prior to supporting complete central monitoring and control. Or, the *icons*<sup>TM</sup> database and graphics files may be generated prior to defining these controllers in the communications server. Once the communications server is properly configured and the controllers deployed, complete monitoring and control operations will be available.

Planning is an important first step prior to deploying controllers to support traffic signal operations. The follow are recommended initial planning steps:

- ❑ Develop a standard object numbering scheme for traffic signal objects (e.g. SIG, ZON, SEC).
- ❑ Identify logical groupings of signals for coordination and control purposes using the ZON and SEC object types.
- ❑ Identify the communications server (if multiple servers) and communication channel that will be used to host the new device, and assign unique drop (hardware) addresses for this device on a channel.
- ❑ Create a matrix table associating intersection name, location, system object number, zone or section grouping, supporting communications server, communications channel, and drop address. Use this as a master reference in configuring the various system components.

The SIG object numbers will be used to uniquely define each intersection in the system and is needed to completely configure all three components. The ZON and SEC logical object types are only needed by the *icons*<sup>TM</sup> database and are therefore only defined using the device configuration editor.

### Add Controller to Communications Server

Both the ITMS Communications and ITMS Relay service initialization (INI) files need to be modified to add new controllers (Ref. the *icons*<sup>TM</sup> System Administration Manual for complete details on adding/removing/modifying controllers for these services). Both services run on the communications server(s) and both need to be properly configured to successfully communicate with a field controller.

After changes are made to each service INI file, the corresponding service needs to be stopped and restarted before these changes take effect. Device communications may be verified by using the CommTest and/or ITMS Spy application (Ref. the *icons*<sup>TM</sup> System Administration Manual).

### Add Intersection using System Configuration Editor

Using the System Configuration Editor (Section 4) add all entities required for traffic signal operation. All entities must first be defined using the editor before other system elements can recognize and utilize these entities.

A System (SYS) must first be configured before any other device can be defined. After the system is defined the user may add Signals (SIG), Zones (ZON), Sections (SEC), and Detectors (DET) as required to completely define the operation.

### Add Intersection to Graphics Display

Intersection graphics are not mandatory for signal operation, but they are needed to support all of the *icons*<sup>TM</sup> workstation features. Adding the intersection to the main map allows the user to activate the intersection dialog box directly from the main map through point and click operation. Adding a separate intersection graphic provides support for all the graphical status monitoring through the intersection dialog box.

Reference the *icons*<sup>TM</sup> Graphics Editor Manual for complete details on modifying the main map and adding/modifying intersection graphics.

## MONITORING

To view attributes of a signal on the map, double left-click on the intersection icon, or, with the device selected, use the **Monitor | Devices** menu selection. This will open the intersection dynamic display screen. In addition to providing identifying information for that signal, this dialog box provides a button for accessing the controller database editor as discussed in Section 12.

The left panel Intersection Display, right panel Tabs, and bottom panel Phase Data can be shown or hidden by left-clicking on the appropriate item under the **Options** menu.

### Left Panel - Graphics

The user may customize information presented in the left panel graphics display using the Graphics Editor. See the *icons*<sup>TM</sup> Graphics Editor (IGE) Users Manual for more information. The following information may be displayed:

- ☐ Phase Interval (Green, Yellow, Red) for up to 40 phases
- ☐ Overlap Interval (Green, Yellow, Red) for up to 20 overlaps
- ☐ Ped Status (Walk, Flash Don't Walk, Don't Walk)
- ☐ Communications Failure
- ☐ Detector Fault
- ☐ Coordination Alarm
- ☐ Local Zero
- ☐ Cabinet Flash

- ❑ Preempt (railroad and EV)

*Note: The available status information is dependent upon the communications protocol and polling message type. The accuracy of the display is dependent upon the communications polling rate. Normal status polling of 1/sec or faster results in the display accurately reflecting real-time controller status. Slower polling rates may result in the display lagging the real-time controller status, resulting in apparently longer than normal phase times, or possibly missing short duration events such as yellow intervals.*

### Right Panel – Information

The **Information** tab provides identifying information about the signal. This information may be modified using the Configuration Editor (Section 4).

The **Params** button activates the Database Editor for this controller (Section 12). Clicking on the **Timing** tab in Figure 5-1 will open a timing dialog box, as shown in Figure 5-2.

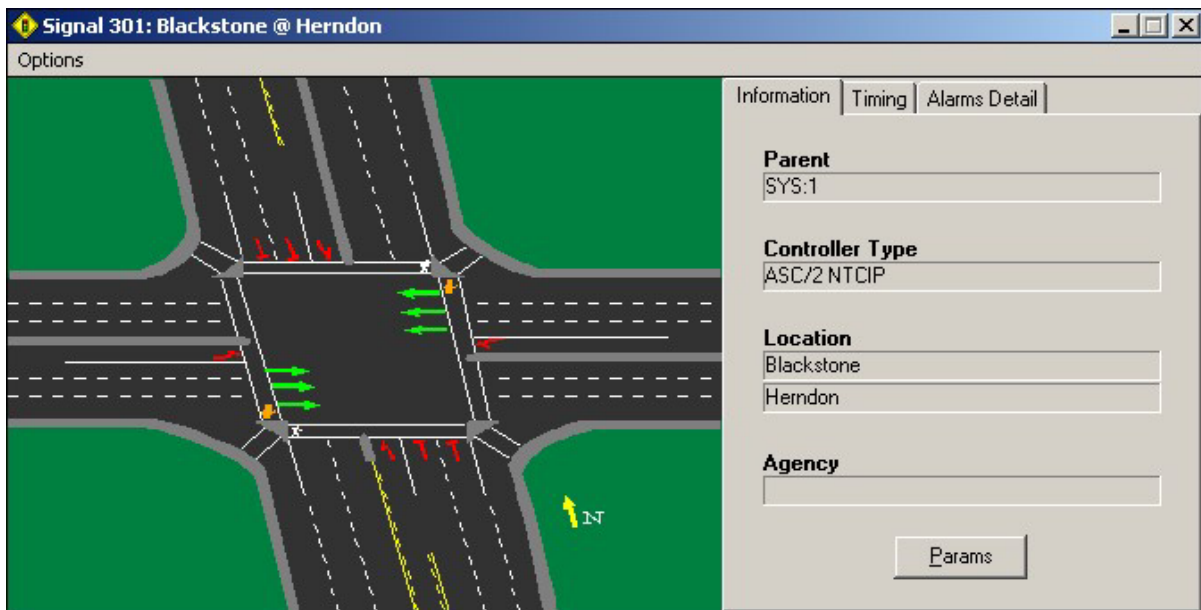


Figure 5-1: Information Display Screen

### Right Panel – Timing

The **Timing** tab provides pattern and phase timing information about the signal. An example is shown in Figure 5-2.

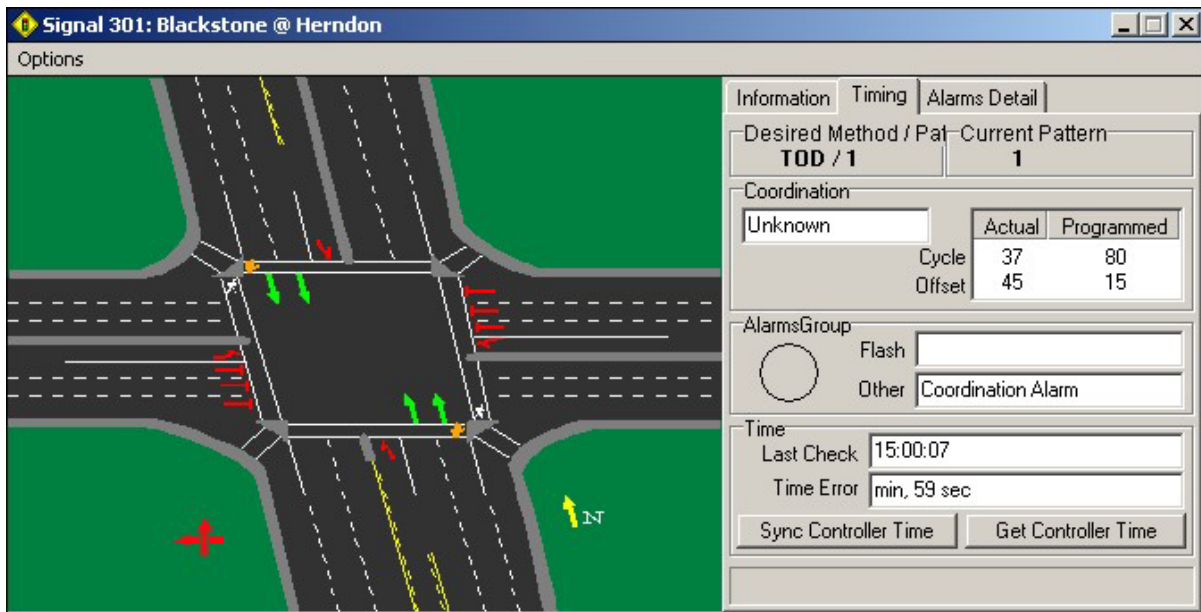


Figure 5-2: Timing Display Screen

The following is a description of various parameters in the Timing Display Screen:

#### Desired Method / Pat

Shows the desired control method and the associated pattern as commanded by *icons™*.

The following messages may be displayed in the *Desired Method* field:

- ❑ MAN: Manual pattern assignment from central.
- ❑ TOD: Time-of-day assignment from central.
- ❑ NON: Central not commanding controller.

The following messages may be displayed in the *Desired Pat* field:

- ❑ 1-250: Pattern assignment from central.
- ❑ LOCAL: controller is selecting the pattern locally. Indicated if there is no pattern currently called for by TOD or Manual for that signal.
- ❑ FLASH: Flash assignment from central.
- ❑ FREE: Free assignment from central.

#### Current Pattern

Shows the current operating pattern of the controller as reported by the controller. When the dialog box is first activated it may take up to 60 seconds for this parameter to be updated. The following values apply:

- ❑ 1 – 250: Normal range of available patterns
- ❑ LOCAL: Pattern 0 – controller is in local control operation.
- ❑ FLASH: Controller is in cabinet or programmed flash (AB3418 plan 254 / NTCIP plan 255)
- ❑ FREE: Controller is in free mode (AB3418 plan 255 / NTCIP plan 254).
- ❑ SIM: Simulator, indicating that the controller is off-line and simulated data is driving the intersection dialog box.

- ❑ Checking...: Determining what the current pattern is.
- ❑ Com Fail: Communications failure, pattern unknown. Shown if there is no communications or while the display is waiting for the first pattern status report.

**Coordination**

Shows the current state of the coordinated pattern being run. The leftmost field gives an indication where the pattern is in relation to the offset (Unknown, Free, In Transition, and In Sync). While a coordinated pattern is running, this will display 'In Transition' or 'In Sync'. When the controller is in free mode (AB3418 plan 255 / NTCIP plan 254), this will display 'Free'.

*Cycle*

Displays the Actual and Programmed Cycle time for the controller. The actual value indicates what is currently being reported from the field for this controller. This value is reset to zero when the system receives a Local Zero event from the controller. For non-coordinated operation where a Local Zero event is not generated, this value will count up indefinitely (AB3418). In other cases of non-coordinated operation (NTCIP), 'N/A' will be displayed. The programmed value is the value stored in the central database for this controller. For programmed values to be displayed the controller parameter data must first be uploaded and saved in the system database (Section 12). This parameter will indicate '0' for the actual time in non-coordinated operation. When the dialog box is first activated it may take up to 60 seconds before the actual value is accurately displayed.

*Offset*

Displays the Actual and Programmed Offset time for the controller. The actual value indicates what is currently being reported from the field for this controller. While a non-coordinated pattern (including flash) is running, a '0' will be displayed. When the controller is in free mode (AB3418 plan 255 / NTCIP plan 254), 'N/A' will be displayed. The programmed value is the value stored in the central database for this controller. For programmed values to be displayed the controller parameter data must first be uploaded and saved in the system database (Section 12). This parameter will indicate '0' for the programmed time in non-coordinated operation. When the dialog box is first activated it may take up to 60 seconds before the actual value is accurately displayed. Through the 'ShowAsPercent' command in the icons initialization file (icons.ini), this may be displayed in either seconds or a percentage (Ref. the *icons*<sup>TM</sup> System Administration Manual).

---

*Note: The sync time value in the icons.ini file needs to be set to the controller sync time for actual values to be properly displayed.*

*Note: The intersection graphic may need to be closed and reopened to reflect accurate values when switching between coordinated and non-coordinated patterns.*

---

**AlarmsGroup**

Displays alarm messages that are reported to icons from the controller (as defined in the communications protocol).

The following messages may be displayed in the *Flash* field:

- ❑ Cabinet Flash

The following messages may be displayed in the *Other* field:

- ❑ Critical Alarm
- ❑ Noncritical Alarm
- ❑ Detector Fault
- ❑ Coordination Alarm

- ☐ Local Override
- ☐ Local Zero
- ☐ Preempt

#### Time (NTCIP only)

Allows the user to determine the difference between the controller clock and *icons*<sup>TM</sup> system clock, and correct it if necessary. By left-clicking the **Get Controller Time** button, *icons*<sup>TM</sup> will determine any difference between the two clocks and display it in the *Time Error* field. The *icons*<sup>TM</sup> system time corresponding to this check is then displayed in the *Last Check* field. Left-clicking the **Sync Controller Time** button will synchronize the controller clock to match the *icons*<sup>TM</sup> system time.

*Note: This functions independently of the Time Drift service (See System Configuration Section 4 and the *icons*<sup>TM</sup> System Administration Manual.*

### Right Panel – Alarms Detail

The *Alarms Detail* tab displays the alarms found on the Timing Display Screen. Unlike the Timing Display screen, simultaneous alarms may be displayed together. An example is shown in Figure 5-3.

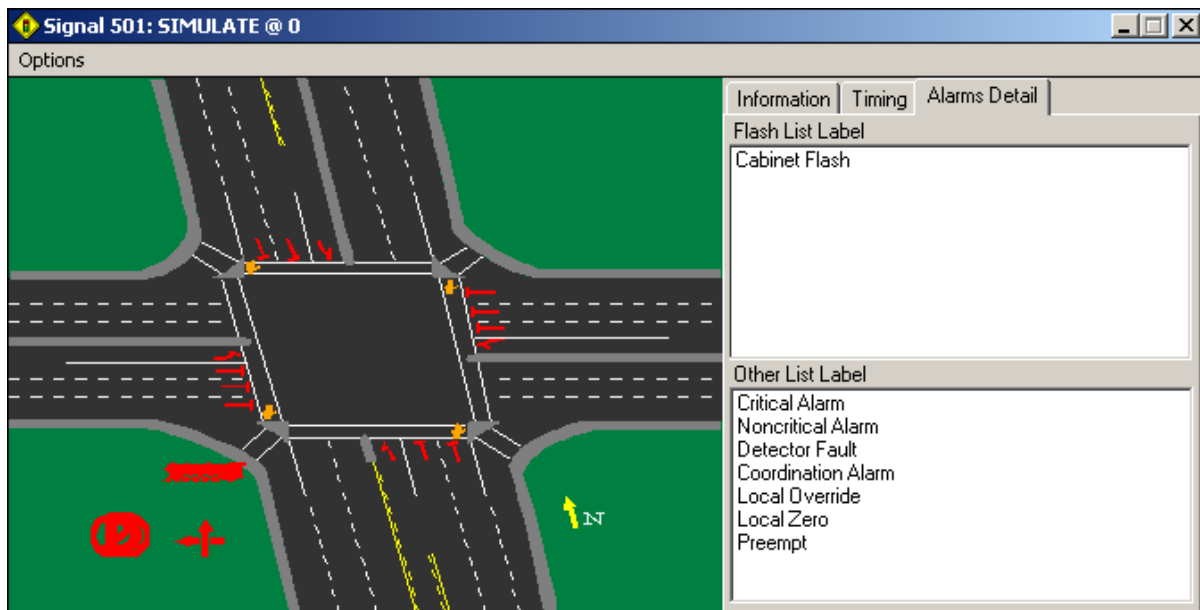


Figure 5-3: Alarms Detail Screen

Alarm messages that are reported to icons from the controller (as defined in the communications protocol) are shown here.

The following messages may be displayed in the *Flash* field:

- ☐ Cabinet Flash

The following messages may be displayed in the *Other* field:

- ☐ Critical Alarm
- ☐ Noncritical Alarm

- ❑ Detector Fault
- ❑ Coordination Alarm
- ❑ Local Override
- ❑ Local Zero
- ❑ Preempt

### Bottom Panel – Phase Data

The bottom panel displays phase-related data. An example is shown in Figure 5-4.

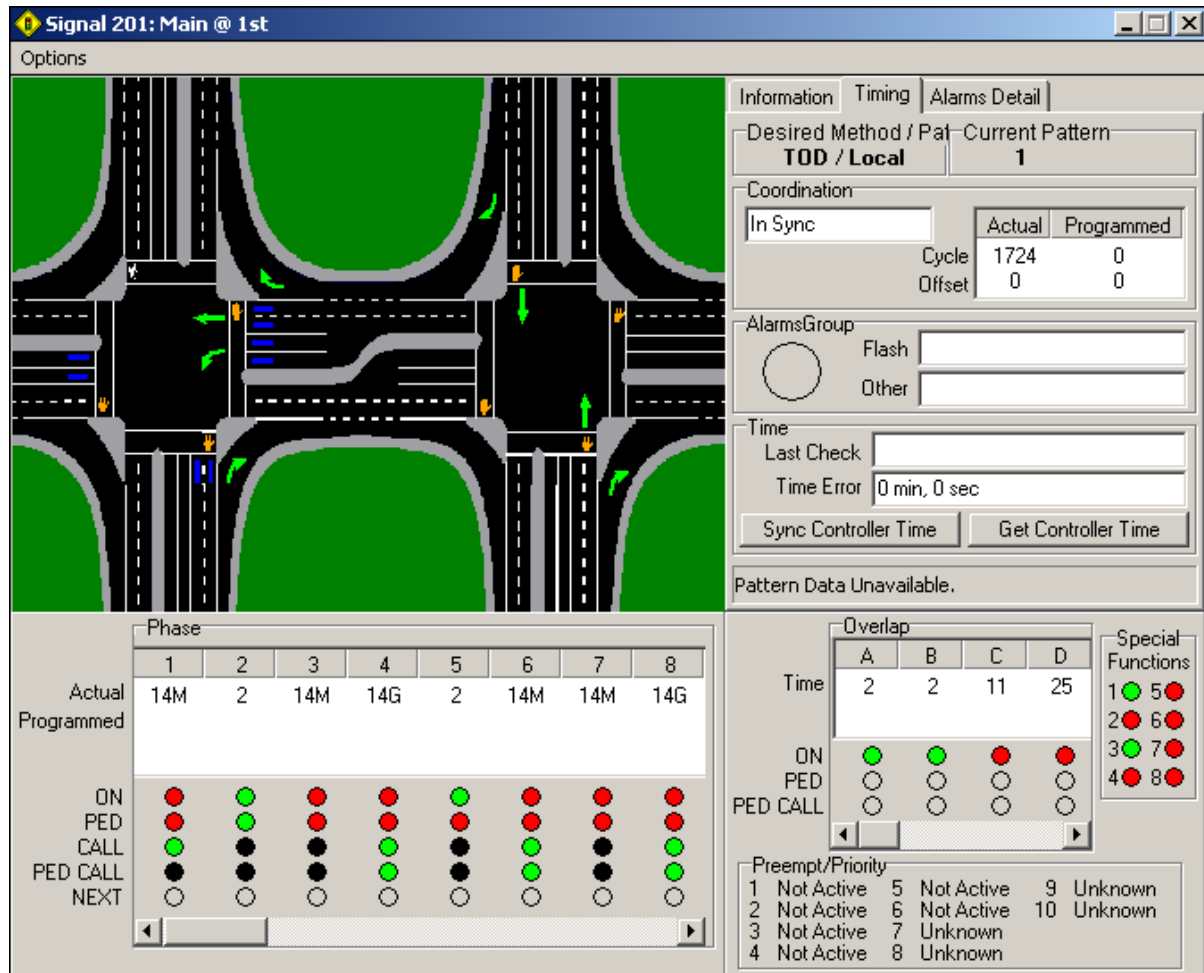


Figure 5-4: Intersection Graphic with All Panels Shown

### Phase

The Phase Display is comprised of both a text and graphical component, which, together, reflect the current state of the controller. Information is displayed for up to 16 phases.

The following text elements exist in the Phase Display:

- ❑ **Actual:** shows Actual green phase time for each phase. These values indicate what is currently being reported from the field for this controller. A reason for termination is displayed when the phase terminates (changes to yellow). It either displays a 'G' – gap out,



‘F’ – force off, or ‘M’ – maximum green. The termination code will remain in place for that phase until it goes green again.

---

*Note: The reason for termination code is only supported for communications protocols that return this information (i.e. AB3418 Extended status 8 and 16, and NTCIP).*

---

- ❑ Programmed: shows Programmed green phase time for each phase. These values are the values stored in the central database for this controller. For programmed values to be displayed, the controller parameter data must first be uploaded and saved in the system database (Section 12).

The following graphical elements exist in the Phase Display:

- ❑ ON: shows which vehicle phases are green, yellow, or red at any instant.
- ❑ PED: shows which pedestrian phases are in walk, ped clearance, or don't walk.
- ❑ CALL: displays which vehicle phases currently have calls waiting.
- ❑ PED CALL: displays which pedestrian phases currently have calls waiting.
- ❑ NEXT: reflects which phases will be active next (NTCIP only).

The icons initialization file (icons.ini) has two commands that affect the way phase times are displayed in the intersection dialog box (Ref. the [icons™](#) System Administration Manual). These are ‘ShowAsPercent’ and ‘ShowCountDown’. Through the use of the ‘ShowAsPercent’ command, phase times may be displayed in either seconds or a percentage. To choose between the display of ascending or decaying phase times, the ‘ShowCountDown’ command may be altered.

Phase timing assumes phases 1-4 are in ring 1, phases 5-8 are in ring 2, phases 9-12 are in ring 3, and phases 13-16 are in ring 4. The yellow intervals are simulated for 3 seconds for communication protocols that do not return yellow status (i.e. AB3418).

---

*Note: The available status information is dependent upon the communications protocol and polling message type. The accuracy of the status values is dependent upon the communications polling rate. Normal status polling of 1/sec or faster will result in the status panel accurately reflecting real-time controller status. Slower polling rates may result in the longer than actual phase times or possibly missing short duration events, such as yellow intervals.*

---

### **Overlap**

Displays the green phase times for each overlap. Information is displayed for up to 8 overlaps.

The following graphical elements exist in the Phase Display:

- ❑ ON: shows which overlaps are green, yellow, or red at any instant.
- ❑ PED: displays which overlap pedestrian phases are walk, ped clearance, or don't walk.
- ❑ PED CALL: reflects which overlap pedestrian phases have calls waiting.

### **Preempt / Priority**

Shows the status of preempt channels (Unknown, Other, Not Active).

### **Special Functions**

Graphically displays the status of special functions. Green indicates a special function that has been turned on, while red indicates one that has been turned off.



## CONTROL

The *icons*<sup>TM</sup> system uses a distributed control philosophy whereby patterns, or plans, are remotely selected. Traffic controllers manage real-time signal control using timing parameters defined and grouped by pattern, or plan, within the controller. The *icons*<sup>TM</sup> system can activate these defined patterns to effect different signal operations. Three different control modes may be used to select patterns remotely:

- ❑ Manual: Manual override mode allows the user to command a signal or group of signals to a pattern for limited duration at a specific date and time now or in the future. This mode is typically used as a temporary override for special events or other non-recurring short-term events.
- ❑ Time-of-Day (TOD): TOD mode allows the user to define recurring pattern schedules by specific day-of-week (DOW) and TOD criteria. The TOD schedule is typically used to implement the default control scheme for the system by assigning pattern selection actions to individual signals or groups of signals.
- ❑ Traffic Responsive: The Traffic Responsive Pattern Selection mode uses real-time traffic demand (volume and weighted occupancy) to select the pattern.

For each of these control modes different types of actions may be defined to select various patterns. These actions are defined as:

- ❑ PAT: This is a general-purpose action to set the controller to a new Pattern or Plan. Valid pattern numbers are from 1-250.
- ❑ FLASH: This is a special pre-defined pattern to command controller to flash operation.
- ❑ FREE: This is a special pre-defined pattern to command controller to free operation without coordination.
- ❑ LOCAL: This is a special pre-defined pattern (Pattern 0) to command controller to local mode operation. In this mode the controller operation is dependent upon its own internal scheduler and control methods. The *icons*<sup>TM</sup> system automatically issues pattern 0 by default if no other pattern is in effect for a signal.

The *icons*<sup>TM</sup> system also supports other various actions as defined below:

- ❑ SET: Action Sets are essentially groupings of other individual actions and is a convenient way to issuing multiple actions with a single entry. An Action Set is equivalent to a macro. Action Sets are further defined below.
- ❑ SPFON: Special Function On turns on specified controller special functions. Special functions may be used to control external devices such as flashers.
- ❑ SPFOFF: Special Function Off turns off specified controller special functions.
- ❑ CMP: Compares the central database with the specified controller database and reports if the two are different. The compare operation is only supported using the time-of-day (TOD) schedule control mode. It is further described under the TOD section below and is also discussed in Section 12.

## Control Hierarchy and Logic

The following control hierarchy applies:

1. Manual: if a manual assignment is in effect it overrides all other currently defined actions for the specified device.
2. TOD: the time-of-day scheduler provides override of a controller local operation.

- Standby (default): if no other scheduled pattern is currently in effect, the *icons*<sup>TM</sup> system will command the controller to local control operation (Pattern 0).

If a manual pattern has been commanded that pattern will remain active for as long as the manual command remains enabled. After the manual pattern terminates, any TOD pattern defined will become effective. And after the TOD pattern terminates the controller will revert to standby mode, meaning the controller will use a pattern or mode selected by the local controller time-of-day schedule rather than one commanded by *icons*<sup>TM</sup>.

---

*Note: Once a pattern (plan) becomes effective (either manual or automated) it may take up to 60 seconds for the plan to be communicated to the controller and then an additional 1 cycle length for the controller to advance to the coordinated phase where controller pattern changes take effect.*

---

Within *icons*<sup>TM</sup> the more specific command within the device hierarchy always takes precedence over the more general command. In other words, the action for a signal defaults to the action for the section in which it resides. If a signal is in no section, its default action is that for the zone in which it resides. If a signal is in no section and no zone, its default action is that for the whole system. Similarly, if no action is specified for a section, it defaults to the action specified for its zone if any, else for the whole system. If no action is specified at all, even for the system, no central control is enabled and each controller will default to its locally defined pattern selection. For example, if SIG#1 is part of SEC#1 and SEC#1 is commanded to pattern 1 while at the same time SIG#1 is commanded to pattern 2, then all of SEC#1 will be commanded to pattern 1, except for SIG#1 which would be commanded to pattern 2.

When adding either Manual or TOD entries start and stop times are required for all actions. When overlapping these entries for the same entity (i.e. SEC#1), the stop time of the first action must be reached before the next action will begin. This logic is shown in Figure 5-5. The logic applied for non-overlapping entries is shown in Figure 5-6.


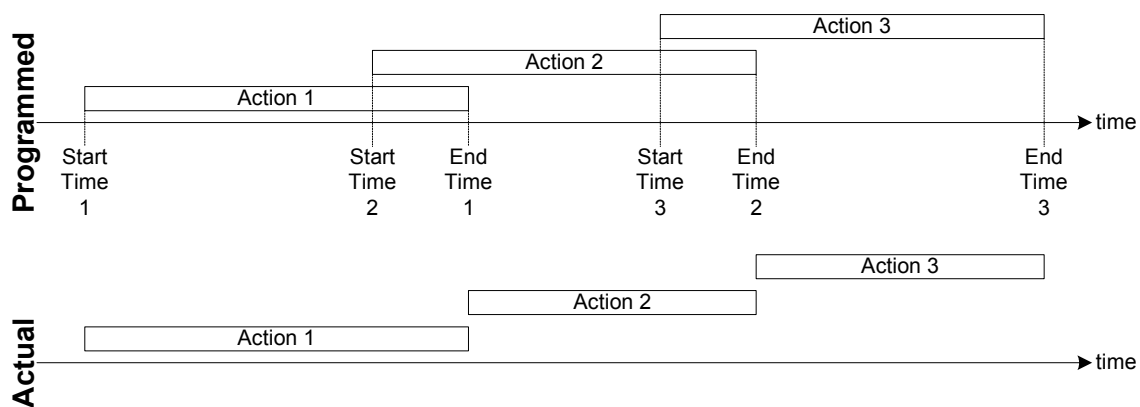


Figure 5-5: Overlapping Assignment Entries

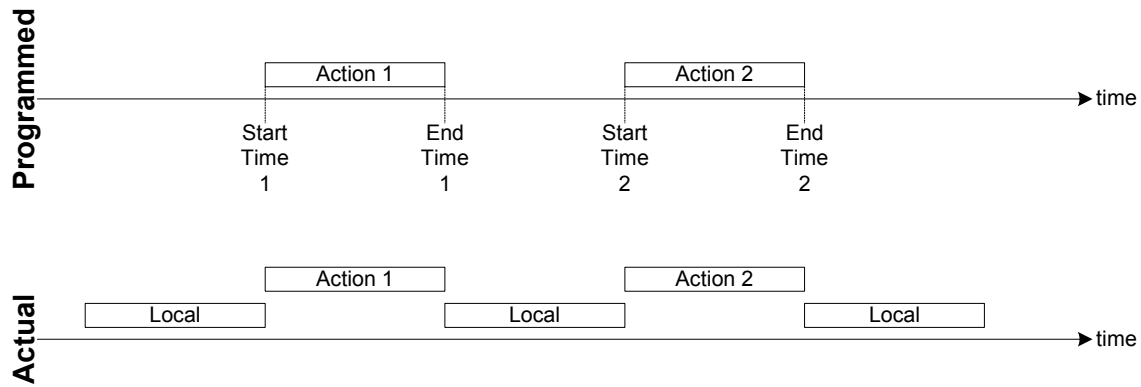

*Figure 5-6: Non-Overlapping Assignment Entries*

When adding either Manual or TOD entries, if the same entity is entered more than once with the same start time, and these entries result in conflicting actions, then the one higher in the list (lower number) takes precedence.


Centralized traffic control operation requires that the traffic control service is running on the *icons™* server (Ref. the *icons™* System Administration Manual). The traffic control service checks each minute whether an action needs to be performed based on the control configurations defined in this section.

## Manual Override

Manual commands are configured using the **Control | Manual Assignment** menu selection. This control mode allows the user to define a limited duration assignment to be applied at a specific date and time now or in the future. It is typically used as a temporary override for special events or other non-recurring short-term events. The manual command may be assigned to an individual signal or a group of signals using the section or zone entity types.

The manual override may be used to command a signal or group of signals to a certain pattern using either the PAT, FLASH, FREE, or LOCAL actions, or to activate the *icons™* traffic responsive operation using the TRS action as defined above. Likewise controller special functions may be activated using the SPFON/SPFOFF actions. Manual override may also command an action set using the SET action that would include multiple actions for multiple devices.

Selecting the **Manual Assignment** command generates a dialog box as shown in Figure 5-7.

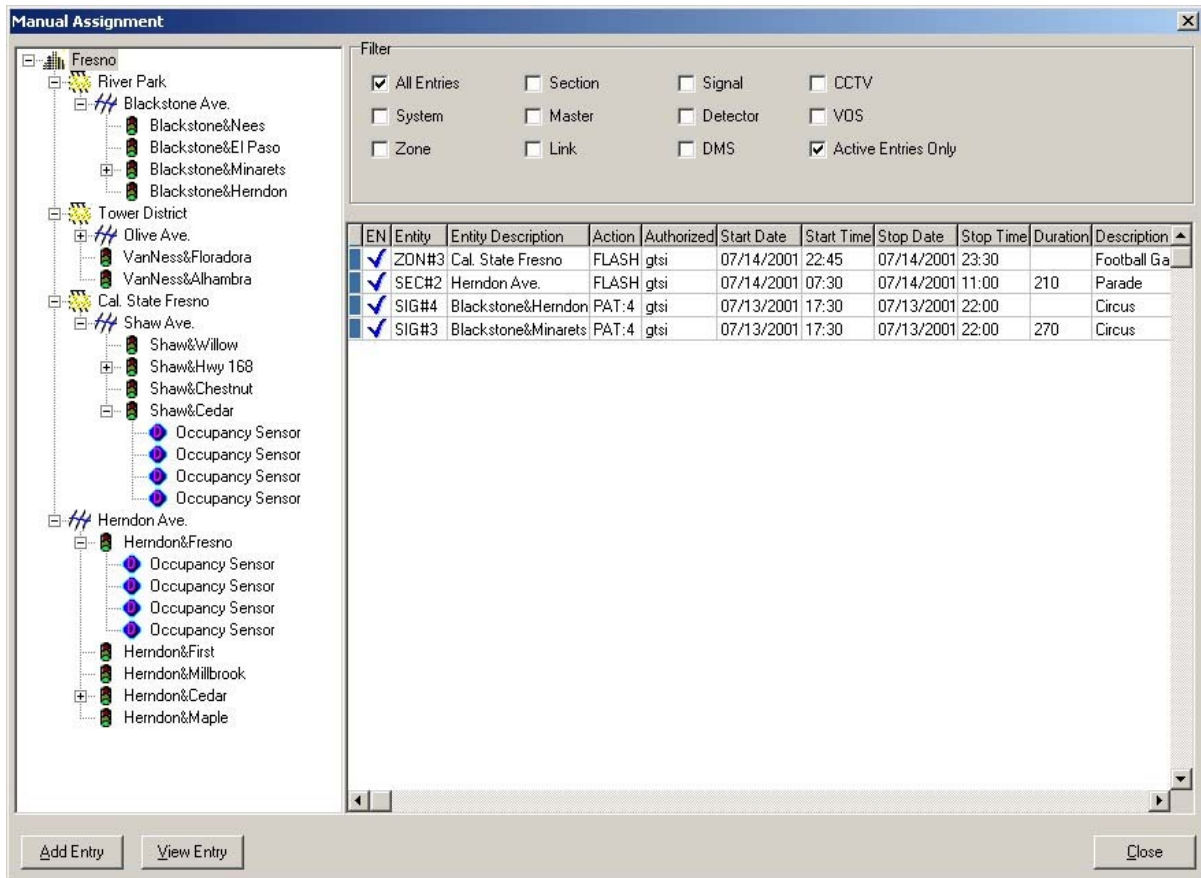

*Figure 5-7: Manual Assignment Screen*

Manual Assignments are grouped into a single table, which includes all of the defined and active manual step entries. The screen is divided into three regions. The left region provides a tree view of all devices that may be selected for manual assignment entry. The top region allows the user to set filters for viewing manual assignments by device type. The lower region displays all defined and active manual assignments. Assignments are automatically removed from the list once they expire. These assignments are displayed using the following parameters:

#### **EN (Enabled)**

Check box to enable and make active the current entry. Disabling an entry permanently removes it from the list.

#### **Entity**

Equivalent to the Entity Type and Entity Number defined in the System Configuration Editor for this entity.

#### **Entity Description**

Equivalent to the Primary and Secondary Names defined in the System Configuration Editor for this entity.

#### **Action**

Equivalent to the Action defined in the Assignment Settings below.

#### **Authorized**

Displays the **icons™** user ID of the individual that added the entry. This is a non-editable field.

#### Start Date / Start Time

Equivalent to the Start Date and Start Time defined in the Assignment Settings below.

#### Stop Date / Stop Time

Equivalent to the End Date and End Time defined in the Assignment Settings below. Manual assignment actions can span multiple days in duration.

#### Duration (Min.)

Equivalent to the Duration defined in the Assignment Settings below (in minutes).

#### Description

Equivalent to the Description defined in the Assignment Settings below. (Limit 15 characters)

The screen layout allows the user to enter manual command information from either the tree or list view. To add an entry from the tree view, click twice slowly (do not double click) on the entity to enter edit mode. Alternatively, the **Add Entry** button may be used to enter edit mode from the list view. The resulting Assignment Settings window is shown in Figure 5-8.

Highlighting an entry and selecting the **View Entry** button activates the Assignment Settings window in Figure 5-8 as a read-only screen to allow the user to view details of the assignment setting.

Figure 5-8: Manual Assignment Settings Screen

Within the Assignment Settings dialog box, the user may apply an action to the entity at a specific date and time now or in the future. The following parameters are defined:

**Entity**

Pull down list of all defined system objects by type. Only the selected object will be affected by the defined action. Below the pull down list is the Primary and Secondary Names defined in the System Configuration Editor for this object.

**Action**

Pull down list of possible actions that may be defined for this entity. The list includes the following:

- ☐ FLASH: Commands the entity into flash mode.
- ☐ FREE: Commands the entity into free mode.
- ☐ LOCAL: Allows the controller to run from its internal scheduler.
- ☐ PAT: Commands new pattern operation for the specified entity. If a pattern is selected that is not defined in the controller then the controller will revert to local mode. Valid patterns are between 1 and 250. (usage: PAT: pattern #)
- ☐ SET: Action Set. With this action the Entity and Entity Description fields are cleared since Action Sets already include the affected entities.
- ☐ SPFOFF: Special Function Off. Valid range 1-8. (usage: SPFOFF: special function #)
- ☐ SPFON: Special Function On. Valid range 1-8. (usage: SPFON: special function #)
- ☐ TRS: Traffic Responsive. With this action the Entity and Entity Description fields are cleared since TRS plans already include the affected entities.

**Authorized By**

This is a read-only field specifying the User Name of the individual making the manual assignment based on the active sign-on account (as defined in the User Profiles menu)

**Description**

This is an optional free text description of the manual action. (Limit 30 characters)

**Start Date / Start Time**

Date and time that this manual assignment will take affect.

**End Date / End Time**

Date and time that this manual assignment will terminate. This field is only editable if the **End Time** radio button is selected. If End Time is selected, only the End Time will be displayed on the Manual Assignment screen.

**Duration**

Time duration in minutes from the Start Date/Time that the assignment remains in effect. This field is only editable if the **Duration** radio button is selected. (Range = 1 – 1439). If Duration is selected, the specified duration and corresponding End Time is displayed on the Manual Assignment screen.

**TOD Schedule**

Automated time-of-day (TOD) commands are configured using the **Setup | TOD Schedule** menu selection. This control mode allows the user to define recurring actions to be performed by specific day-of-week (DOW) and TOD criteria. The TOD schedule is typically used to implement the default



control scheme for the system by assigning actions to individual signals or groups of signals using the section or zone entity types.

The TOD schedule may be used to command a signal or group of signals to a certain pattern using either the PAT, FLASH, FREE, or LOCAL actions, or to activate the *icons*<sup>TM</sup> traffic responsive operation using the TRS action as defined above. Likewise controller special functions may be activated using the SPFON/SPFOFF actions, or a database compare scheduled using the CMP action. The TOD Schedule may also command an action set using the SET action that would include multiple actions for multiple devices.

All schedule TOD entries may begin at 12:00am and must end by 11:59pm. The user selects the desired days-of-the-week to implement a continuous action or have the action span multiple days. A special holiday day type and holiday table may also be selected (see Holiday Assignment) for each action. If the holiday day type is selected and today is a holiday then *icons*<sup>TM</sup> will perform the actions defined. The holiday day type also takes precedence over the DOW day type if the same entity is entered with conflicting actions. For example, if today is Monday and a holiday and two entries exist for SIG#1; one has the Monday DOW selected with pattern 1 as the action and the second has Holiday selected with pattern 2; then SIG#1 will be commanded to pattern 2.

Selecting the **TOD Schedule** command produces a dialog box which allows the user to add, delete, or modify TOD schedules for entities belonging to the system as shown in Figure 5-9.

EN	Entity	Entity Description	Action	Start Time	M	T	W	T	F	S	S	H	Holiday list	Stop Time	Description
✓	SYS#1	Pleasant Hill	PAT:1	07:00 AM	✓	✓	✓	✓	✓					09:00 AM	AM Pattern
✓	SEC#1	Contra Costa North	FREE	08:45 AM	✓	✓	✓	✓	✓					03:45 PM	Free
✓	SEC#2	Contra Costa Central	FREE	08:45 AM	✓	✓	✓	✓	✓					08:00 PM	Free
✓	SEC#3	Contra Costa South	PAT:2	08:45 AM	✓	✓	✓	✓	✓					10:30 AM	Mid Morning Pat
✓	SYS#1	Pleasant Hill	PAT:3	11:00 AM	✓	✓	✓	✓	✓					03:00 PM	Midday/PM Patte
✓	SEC#1	Contra Costa North	PAT:4	03:45 PM	✓	✓	✓	✓	✓					07:00 PM	PM Pattern
✓	SYS#1	Pleasant Hill	FREE	07:00 PM	✓	✓	✓	✓	✓	✓	✓			11:59 PM	Free
✓	SEC#1	Contra Costa North	PAT:5	10:00 AM						✓	✓			04:00 PM	Weekend Pattern
✓	SEC#3	Contra Costa South	PAT:5	10:00 AM						✓	✓			05:00 PM	Weekend Pattern

Figure 5-9: TOD Schedule Screen

The screen is divided into three regions. The schedule region provides a list of all defined TOD schedules. For each TOD schedule the user can define a complete new list of TOD actions in the lower region. The top region allows the user to set filters for viewing TOD action assignments by device type. The lower region displays all defined TOD assignments for the highlighted TOD schedule.

Use the **Add** or **Modify** button in the top region to add a new or modify an existing TOD table. A TOD table must first exist before TOD actions may be defined. Multiple TOD tables may be defined; however, only one may be active at any one time as indicated by the **A** designator next to the table entry. Tables may be defined as active by using the **Modify** button. Use the **Delete** button to delete the highlighted TOD table. The table entry screen is shown in Figure 5-10.

*Figure 5-10: TOD Table Entry*

The Master checkbox allows the user to designate this table as the Master or Active **A** table. A description for the TOD table may also be added.

Highlight the desired TOD schedule table in the top region to add step entries. Use the **Insert Row** or **Append Row** buttons to add a new entry. This action creates a new editable entry within the display area. To delete an entry, highlight the entry and select the **Delete Row** button. When the **Apply** or **OK** button is pressed, all modified information is stored in the corresponding database.

The following is a description of the TOD action parameters:

#### **EN (Enabled)**

Checking this box makes the corresponding entry active.

#### **Entity**

All defined system objects that may be commanded (SYS, ZON, SEC, SIG) are shown in this drop-down box.

#### **Entity Description**

Displays the Primary and Secondary Names for the selected entity, as defined in the System Configuration Editor.

#### **Action**

Drop-down box with a list of all possible actions that may be selected for this entity. The list includes the following:

- ❑ **CMP:** Compares the databases in the selected ASC2 controller to their counterparts in icons. The results of the comparison are displayed through the **Monitor |**



**Controller Database Comparison Results** command (Section 12). (usage: CMP: entity #)

- ☐ FLASH: Commands the entity into flash mode.
- ☐ FREE: Commands the entity into free mode.
- ☐ LOCAL: Allows the controller to run from its internal scheduler.
- ☐ PAT: Commands new pattern operation for the specified entity. If a pattern is selected that is not defined in the controller then the controller will operate in local mode. Valid patterns are between 1 and 250. (usage: PAT: pattern #)
- ☐ SET: Action Set. With this action the Entity and Entity Description fields are cleared since Action Sets already include the affected entities
- ☐ SPFOFF: Special Function Off. Valid range 1-8. (usage: SPFOFF: special function #)
- ☐ SPFON: Special Function On. Valid range 1-8. (usage: SPFON: special function #)
- ☐ TRS: Traffic Responsive. With this action the Entity and Entity Description fields are cleared since TRS plans already include the affected entities.

#### Start Time

Time that this TOD action will begin (Range = 12:00 AM - 11:58 PM).

#### Day (M-S)

Day checkboxes (M-S) allow the user to select which days-of-the-week that this action will be in effect.

#### Holiday (H)

The Holiday (H) check box activates a special holiday schedule as defined in the Holiday Assignment section below. If the H box is checked, the system will first check if today has been defined as a holiday in the Holiday List that was specified. If it is, the action will be executed. If not, the action will only be executed if today has been selected in the Day (M-S) checkboxes.

#### Holiday List

Drop-down box which allows the user to select from all defined holiday tables. This is only active if Holiday (H) is selected.

#### Stop Time

Time that this TOD action will end. (Range = 12:01 AM - 11:59 PM)

#### Description

Optional free text description of the action.

### Holiday Assignment

Holiday Assignments are configured using the **Setup | Holiday Assignment** menu selection. This command provides access to a calendar in which holidays can be defined on specified dates during a selected calendar year, as shown in Figure 5-11. Holiday Assignments are only used with TOD Schedule control to define a special day type.

Multiple holiday tables may be defined each with its own set of defined holidays and calendars. Using multiple tables the user can define different types of holidays for traffic management purposes. For example, Holiday Table 1 may be used to define holidays that typically do not result in heavy traffic volumes, such as Thanksgiving Day or Christmas Day; while Holiday Table 2 may be used to define holidays that typically generate heavy volumes, such as the day after Thanksgiving. Used within the TOD Schedule, these two tables may be defined to implement different traffic control

patterns. The Holiday Assignment tables are not limited to defining only holidays. For example, they may also be used to define any special non-recurring events that require special traffic management strategies.

The screenshot shows the 'Holiday Assignment' window. At the top left is a 'Holiday Table' list with columns 'Number' and 'Description'. It contains four entries: 'Holiday:1 Holiday 1', 'Holiday:2 Holiday 2', 'Holiday:3 Holiday 3', and 'Holiday:4 Holiday 4'. Each entry has a small 'M' icon to its left. To the right of the list are 'Add', 'Delete', and 'Modify' buttons. The year '2001' is displayed in the top right. Below the list is a 'Year' dropdown menu with years from 2001 to 2006. The main area displays twelve monthly calendars for 2001, arranged in a 3x4 grid. Each calendar has columns for days of the week (S, M, T, W, H, F, S) and rows for the days of the month. Some dates are highlighted in grey, indicating active holidays. At the bottom are buttons for 'Insert Row', 'Append Row', 'Delete Row', 'OK', 'Cancel', and 'Apply'.

Figure 5-11: Holiday Assignment Screen

The screen is divided into three regions. The Holiday Table region provides a list of all defined holiday tables. For each holiday table the user can define a complete new list of holiday schedules by year in the lower regions. The lower left region displays the year and the lower right region displays the active holidays for that year.

Use the **Add** or **Modify** button in the top region to add a new or modify an existing holiday table. A holiday table must first exist before holiday schedules may be defined. Multiple holiday tables may be defined and active (indicated by the **M** designator next to the table entry) at any one time. Tables may be defined as active by using the **Modify** button. Use the **Delete** button to delete the highlighted holiday table. The table entry screen is shown in Figure 5-12.

Figure 5-12: Holiday Table Entry

The Master checkbox allows the user to designate this table as the Master **M** or Active table. A description for the holiday table may also be added.

Next use the **Insert Row** or **Append Row** buttons to add a new schedule entry. This action prompts the user with a dialog box to enter the desired year. Once a valid year has been entered the calendar for that year is displayed in the lower right region. Holidays are toggled on and off by clicking the corresponding date in the calendar. To delete a schedule, highlight the entry and select the **Delete Row** button. When the **Apply** or **OK** button is pressed, all modified information is stored in the corresponding database.

Holiday schedule tables identified with the **M** in the top region are active tables, making them available for use in the TOD Schedule.

## Traffic Responsive

Traffic Responsive operations are configured using the **Setup | Traffic Responsive** menu selection. This control mode allows pattern selection based on observed traffic conditions. To implement traffic responsive actions, the user must establish a relationship between traffic conditions, measured through system detectors in the form of volumes and occupancies, and traffic management actions. This relationship has several parameters that must also be calibrated and carefully configured for effective operation of the algorithm.

The algorithm used in *icons*<sup>TM</sup> is the UTCS “first generation” control algorithm as published by FHWA in the Traffic Control Systems Handbook with notable enhancements. This algorithm is a pattern matching method that compares the current observed traffic flow conditions to predefined *levels*. A *level* is a combination of specially computed system detector observations (a weighted sum of volume and occupancy, as defined below). Each traffic responsive plan supports up to ten levels, and for each level the plan can include multiple commands. For example, Level 1 may command section 1 to pattern 1, section 2 to pattern 5 and section 3 to pattern 3. Level 2 may command section 1 to pattern 6, section 2 to pattern 5, section 3 to pattern 1, and so on. After each traffic flow calculation time period (which is configurable by the user), the algorithm compares the measured detector values with the values assigned for each level, and selects the level that most closely matches the actual field conditions.

Traffic flow is measured with system detectors using the *icons*<sup>TM</sup> Detector Mapper service (Ref. to Section 7 to setup and configure system detector data collection). For each detector included in a traffic-responsive plan, *icons*<sup>TM</sup> calculates a weighted volume plus occupancy value for each time period. This value is representative of the traffic flow in vehicles-per-hour. The formula used is  $(V_i + K * O_i)$  where:

- $V_i$  is the volume in vehicles-per-hour,
- $O_i$  is the occupancy for the  $i^{\text{th}}$  detector (a value between 0-1), and
- $K$  is a scaling factor used to convert the occupancy measurement to the corresponding “volume” when traffic is congested.

After calculating  $(V_i + K * O_i)$  for each detector specified in the plan, **icons™** calculates the absolute value of the difference between a target and the measured  $(V_i + K * O_i)$ . A weighting value  $W_i$  can be applied to each absolute value, if desired, and then the weighted absolute values are added together for each traffic level for detectors that have valid measurements. The level that will be selected is the one that has the lowest value for the sum of the absolute values, given that this metric is at least a *threshold* percentage less than the metric for the current level being used in the traffic-responsive plan. If two or more levels have the same absolute difference metric, then the lowest numbered level will be selected as a default (i.e. Level 1 would be selected over Level 2).

Traffic Responsive plans can be enabled through Manual, TOD Schedule, or Action Set control.

Selecting the **Traffic Responsive** command produces a dialog that allows the user to modify the parameters for traffic responsive plans as shown in Figure 5-13.

**Traffic Responsive**

**Traffic Responsive Plans**

Number	Description
M TRS: 1	Traffic Responsive 1
M TRS: 2	Incidents 2

**Filter**

☒ All Entries
 ☐ Section
 ☐ Signal
 ☐ CCTV

☐ System
 ☐ Master
 ☐ Detector
 ☐ VDS

☐ Zone
 ☐ Link
 ☐ DMS

**Traffic Flow Parameters**

EN	Detector	Entity Description	Weight	K	Level 1	Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Level 9	Level 10
✓	DET#1	NONE&NONE	100	20	100	200	300	400	500	600	700	800	900	1000
✓	DET#2	NONE&NONE	100	20	50	100	150	200	250	300	350	400	450	500
✓	DET#3	NONE&NONE	100	20	25	50	75	100	125	150	175	200	225	250

Insert Detector
 Append Detector
 Delete Detector
 Change Threshold: 10
 Detector Quality: 90
 Calculation Interval: 15

**Timing Plans**

EN	Entity	Entity Description	Level 1	Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Level 9	Level 10	Description
✓	SEC#1	Main Street North	PAT:1	PAT:2	PAT:3	PAT:4	PAT:4	PAT:4	PAT:5	PAT:6	PAT:6	PAT:7	
✓	SEC#2	Main Street North	FREE	FREE	LOCAL	LOCAL	PAT:2	PAT:2	PAT:2	PAT:3	PAT:4	PAT:5	

Insert Entity
 Append Entity
 Delete Entity
 OK
 Cancel
 Apply

Figure 5-13: Traffic Responsive Screen

The screen is divided into four regions. The top left *Traffic Responsive Plans* region provides a list of all defined Traffic Responsive plans. For each plan, the user can define a complete new list of Traffic Responsive parameters and actions in the lower regions. The top right *Filter* region allows the user to

set filters for viewing action assignments by device type. The middle *Traffic Flow Parameters* region allows the user to define up to ten “levels” of traffic for the traffic responsive plan. The user can specify any number of detectors to determine each level, but the number of levels is fixed (the levels can be thought of as the traffic patterns that the field data is being matched to). The lower *Timing Plans* region allows the user to define the actions to be taken for different entities within the system, such as zones, sections, or signals for each traffic level of traffic.

A Traffic Responsive plan must first be defined before the various parameters can be configured. Use the **Add** or **Modify** button in the top region to add a new or modify an existing Traffic Responsive plan. Multiple Traffic Responsive plans may be defined and active (indicated by the **M** designator next to the table entry on the main screen) at the same time. Plans may be made active by using the **Modify** button and checking the “active” checkbox. Use the **Delete** button to delete the highlighted Traffic Responsive plan. The plan entry screen is shown in Figure 5-14.

Figure 5-14: Traffic Responsive Plan Entry

A description for the Traffic Responsive plan may also be added in this dialog box as shown above.

To configure a particular plan, highlight the desired Traffic Responsive plan table in the top left region. Use the **Insert Detector** or **Append Detector** buttons to add a new detector entry in the middle region. This action creates a new editable detector entry within the display area. To delete an entry, highlight the entry and select the **Delete Detector** button.

The following is a description of the Traffic Flow parameters in the middle section of the setup screen:

#### EN (Enabled)

Checking this box includes this detector in the actual traffic flow calculations. Clearing this box temporarily removes this detector without needing to delete it altogether.

#### Detector

All defined system detector objects (DET) are shown in this drop-down box. Select the desired detector from this list.

#### Entity Description

Displays the Primary and Secondary Names for the selected detector entity, as defined in the System Configuration Editor.

#### Weight

Allows the user to assign an importance or weighting value to each detector. The weight (W) is applied to the absolute value of the difference between each target and the actual traffic flow calculation:  $(V+K*O)$ .

**K**

The occupancy scaling factor; an integer value from 0-10000 used to scale the measured occupancy in the traffic flow calculation:  $(V+K*O)$ .

**Level1, Level2, ..., Level10**

These columns are used to enter the “target” values for each  $(V+K*O)$  detector values in a level group. Up to 10 levels are allowed in each traffic responsive plan. The level1....level10 columns are repeated in the lower section to allow association of particular patterns with each level for any number of systems, zones, sections, or signals.

**Change Threshold**

The minimum percentage difference between the sum of the absolute differences of the *current* level and the level that is being considered as the *new* level, for a level change to occur. This parameter is used to prevent excessive plan changes from occurring in response to minor traffic flow fluctuations.

**Detector Quality**

The percentage of detectors that must have valid volume and occupancy data for the traffic responsive calculations to be performed.

**Calculation Interval**

How often to re-compare the field detector data with the level targets and make a level selection, in minutes. This value must be greater than the Collection Period defined in the Detector Mapper initialization file – typically 5 minutes or greater.

The following is a description of the Timing Plan parameters:

**EN (Enabled)**

Checking this box includes the entity in this traffic responsive plan. Clearing this box temporarily removes this entity from the traffic responsive plan without deleting it altogether.

**Entity**

Shows all defined system objects that may be commanded to a new timing pattern (SYS, ZON, SEC, and SIG) in this drop-down box.

**Entity Description**

Displays the Primary and Secondary Names for the selected entity, as defined in the System Configuration Editor.

**Level1, Level 2, ..., Level10**

These columns indicate the pattern to be activated for each level for up to 10 levels for each controller, section, zone, or system in the traffic responsive plan. Selecting this cell presents the user with a drop-down list of possible plan options including: FLASH, FREE, LOCAL, and PAT (1-250).

**Description**

Optional free text description for each SYS, ZON, SEC, or SIG in this traffic responsive plan.

When the **Apply** or **OK** button is pressed, all modified information is stored in the corresponding database. **Cancel** will discard all changes made to the screen and close the traffic responsive configuration screen.

## Action Set Editor

Action Sets are configured using the **Setup | Action Set Editor** menu selection. An action set is a series of actions that are applied to various entities and is a means of conveniently defining multiple actions for multiple entities with a single entry. As such, an action set is equivalent to a macro operation. The defined action set can be activated using the Manual or TOD Schedule controls.

Through the use of action sets, more general traffic management decisions, or management actions, are possible - such as instructing one section to operate in programmed flash, another section to run a traffic responsive method, one signal to run a specific pattern, and another signal to turn on a special function. An action set can specify the same or different actions for any combination of systems, zones, sections and signals.

Action Sets are enabled through Manual or TOD Schedule control.

The **Action Set Editor** command is used to produce a dialog box which allows the user to create (add) new action sets for an entity or delete/modify action sets from the entity as shown in Figure 5-15. The screen is divided into three regions. The top region provides a list of all defined Action Sets and allows the user to set filters for viewing the corresponding list of actions by device type. For each Action Set the user can define a complete new list of actions using either the tree or list view of the lower region.

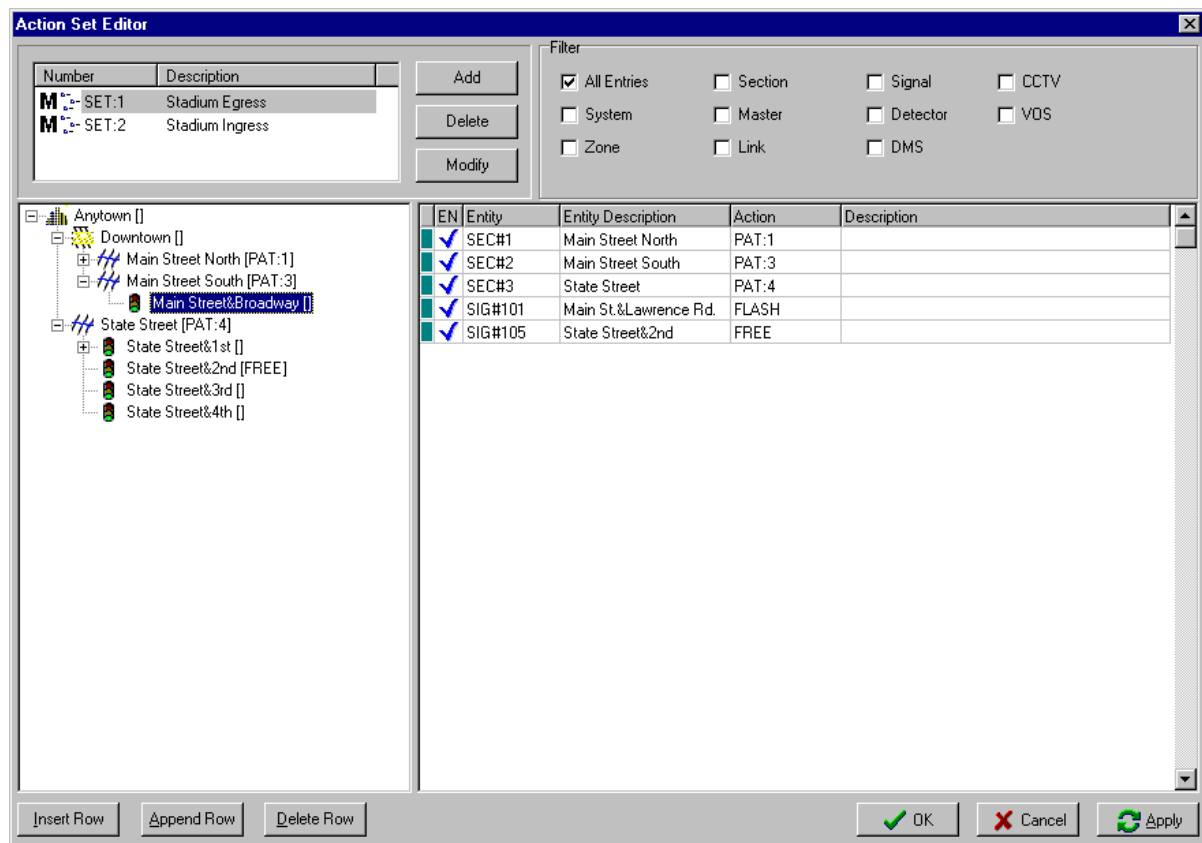


Figure 5-15: Action Set Editor Screen



Use the **Add** or **Modify** button in the top region to add a new or modify an existing Action Set. An Action Set must first exist before Action Set entries may be defined. Multiple Action Sets may be defined and active at any one time as indicated by the **M** designator next to the table entry. Action Sets may be defined as active by using the **Modify** button. Use the **Delete** button to delete the highlighted Action Set. The Action Set table entry screen is shown in Figure 5-16.

Figure 5-16: Action Set Table Entry

The Master checkbox allows the user to designate this table as the Master **M** or Active table. A description for the Action Set may also be added.

Highlight the desired Action Set table in the top region to add actions in the lower region. Use the **Insert Row** or **Append Row** buttons to add a new entry. Alternatively, to add or change an entry in the tree view, click twice slowly (do not double click) on the entity to enter edit mode. Either method creates a new editable entry within the list view display area. Type in the desired action and press ENTER or click outside the edit box to submit. To delete an entry, highlight the entry and select the **Delete Row** button. When the **Apply** or **OK** button is pressed, all modified information is stored in the corresponding database.

The following is a description of the parameters in the Action Set Editor:

#### EN (Enabled)

Check box to enable and make active the current entry.

#### Entity

A drop down box of defined system objects by type appears when the user begins typing in the entity fields. The selected object will be the one affected by the defined action.

#### Entity Description

Equivalent to the Primary and Secondary Names defined in the System Configuration Editor for this entity.

#### Action

A pull down list of possible actions that may be defined for this entity. The list includes the following:

- ❑ **CMP:** Compares the databases in the selected ASC2 controller to their counterparts in icons. The results of the comparison are displayed through the **Monitor | Controller Database Comparison Results** command (Section 12). (usage: CMP: entity #)
- ❑ **FLASH:** Commands the entity into flash mode.



- ❑ **FREE:** Commands the entity into free mode.
- ❑ **LOCAL:** Allows the controller to run from its internal scheduler.
- ❑ **PAT:** Commands new pattern operation for the specified entity. If a pattern is selected that is not defined in the controller then the controller will operate in local mode. Valid patterns are between 1 and 250. (usage: PAT: pattern #)
- ❑ **SET:** Action Set. With this action the Entity and Entity Description fields are cleared since Action Sets already include the affected entities
- ❑ **SPFOFF:** Special Function Off. Valid range 1-8. (usage: SPFOFF: special function #)
- ❑ **SPFON:** Special Function On. Valid range 1-8. (usage: SPFON: special function #)
- ❑ **TRS:** Traffic Responsive. With this action the Entity and Entity Description fields are cleared since TRS plans already include the affected entities.

**Description**

Optional free text description of the action.

**Active Configuration**

The current Active Configuration can be viewed the **Control | Active Configuration** menu selection. The Active Configuration provides a convenient method of viewing all active traffic management actions and the affected entities. The **Active Configuration** command generates a status screen as shown in Figure 5-17.

The screen is divided into four regions. The top region shows all currently active Manual Override Commands. To modify currently active manual commands use the **Control | Manual Assignment** menu selection.

The middle region shows any currently active TOD Schedule. To modify currently active TOD Schedules use the **Setup | TOD Schedule** menu selection.

The lower left region shows any currently active Traffic Response Plans. Traffic Response plans are activated using the Manual, TOD Schedule, or Action Set controls. To modify which plans are active enter the configuration areas for these controls. To edit the contents of a Traffic Responsive Plan use the **Setup | Traffic Responsive** menu selection.

The lower right region shows any currently active Action Sets. Action Sets are activated using the Manual or TOD Schedule controls. To modify which sets are active enter the configuration areas for these controls. To edit the contents of an Action Set use the **Setup | Action Sets** menu selection.

**Active Configuration**

Active Manual Override Commands

Active	Entity	Entity Description	Action	Authorization	Start Date	Start Time	Stop Date	Stop Time
A	SIG#101	Main St.&Lawrence Rd.	PAT:1	gtsi	08/17/2001	11:54	08/17/2001	12:54
A			TRS:1	gtsi	08/17/2001	12:26	08/17/2001	13:26
A			TRS:1	gtsi	08/17/2001	12:26	08/17/2001	13:26
A			TRS:2	gtsi	08/18/2001	06:40	08/18/2001	07:40
A			SET:1	gtsi	08/18/2001	06:41	08/18/2001	07:41
A	SIG#101	Main St.&Lawrence Rd.	SPFON:1	gtsi	08/18/2001	09:35	08/18/2001	10:35

Active Time of Day Schedule

Active	Number	Description	Affected Entities
A	TOD:1	Active 1	.,SIG#101,SIG#102

Active Traffic Responsive Plans

Active	Number	Description	Affected Entities
A	TRS:1	Stadium Egress	SEC#1,SEC#2
A	TRS:2	Stadium Ingress	

Active Action Sets

Active	Number	Description	Affected Entities
A	SET:1	Stadium Egress	SEC#1,SEC#2,SEC#3,SIG#101,

OK

Figure 5-17: Active Configuration Screen

## CLOCK SYNCHRONIZATION

Traffic signal controllers are responsible for their own internal timing and therefore clock accuracies are important especially when operating in coordinated mode. The controller clocks are periodically synchronized using the ITMS Time Broadcast services running on each Communications Server. ITMS Time Broadcast runs as a background process and does not have a user interface component available through the *icons*<sup>TM</sup> system. Additionally, the ITMS Time Drift (NTCIP only) service running on the central server can be configured to set controller clocks that have exceeded a certain time drift from the *icons*<sup>TM</sup> system. The ITMS Time Drift service also runs as a background process, but is configured through the System Configuration Editor. When using ITMS Time Broadcast, all controllers on each Communications Server will be updated at the same time. In contrast, when using the ITMS Time Drift, all selected controllers using the NTCIP protocol will be updated as their drift exceeds the allowable limit. See the *icons*<sup>TM</sup> System Administration Manual for detailed instructions on setup and configuration of the Time Broadcast and Time Drift services.

## SECTION 6 - SYSTEM REPORTS

The **icons™** system supports several different standard reports that allows the user to query current and historical status information. The System Status and Communications Status reports provide current status information on all field devices. The Event Log report provides current as well as historical detailed information on all system events. The Alarm report provides a historical record of all triggered defined alarms. The Stuck Preempt Events report displays currently stuck preempt events, in addition to stuck preempt events which have occurred in the past and have already been cleared.

When viewing these reports, the following buttons are available:



Print: Sends report to printer (requires a default printer be configured in Windows)



Refresh: Seeks current data from database



Group Tree View: Opens window on left side of screen showing applicable entities



Go to First Page



Go to Previous Page



Go to Next Page



Go to Last Page



Search Text: Search report for keywords

### SYSTEM STATUS

The System Status screen displays the current status of all field devices communicating with the **icons™** system. Use the **Monitor | System Status** menu item to activate the System Status screen as shown in Figure 6-1.

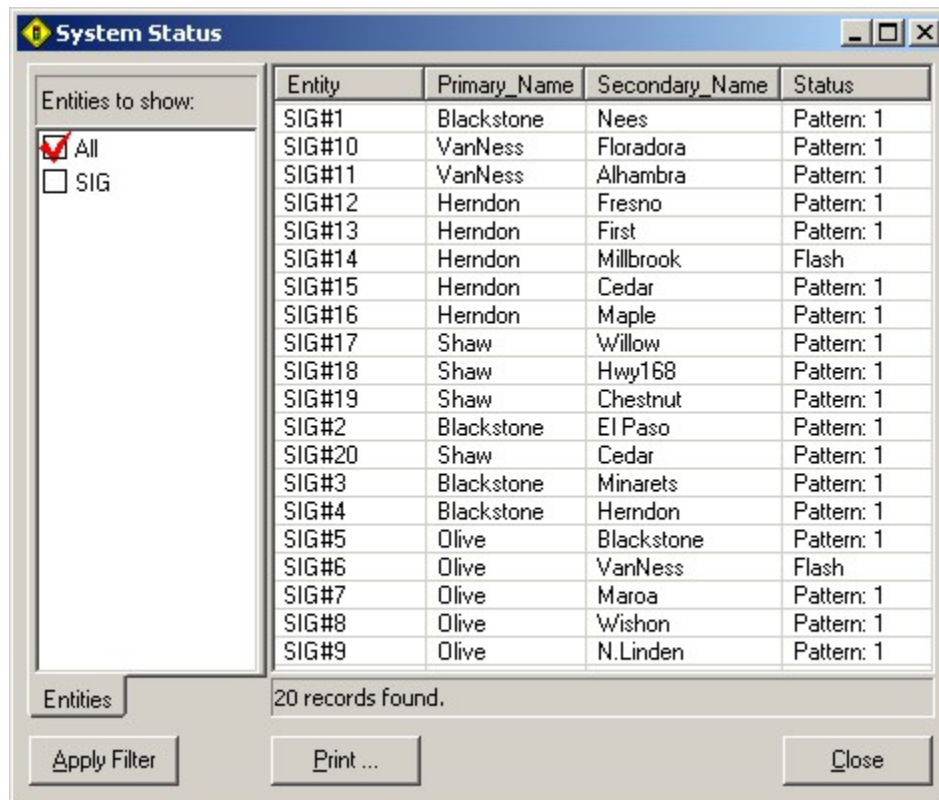


Figure 6-1: System Status Screen


The left region of the window allows display filters to be set. Three selections are possible. **All** selects all devices and is the default setting when first activating the display. **DET** selects detector device types and **SIG** displays signal device types. Once selected, the **Apply Filter** button must be pressed for them to take affect. They will remain active as long as the System Status dialog box remains open.

The right region lists the current status information on filtered device types. This window automatically refreshes once per second. Entries may be sorted by selecting any column header.

The following are the status values found in the system status window:

**Comm failure:** Loss of communications.  
**Pattern:** Displays pattern 1-250.  
**Free:** Controller operating in free mode.  
**Flash:** Controller currently in flash mode.  
**N/A:** No status currently available.

Pressing the **Print** button opens the report window, as shown in Figure 6-2.

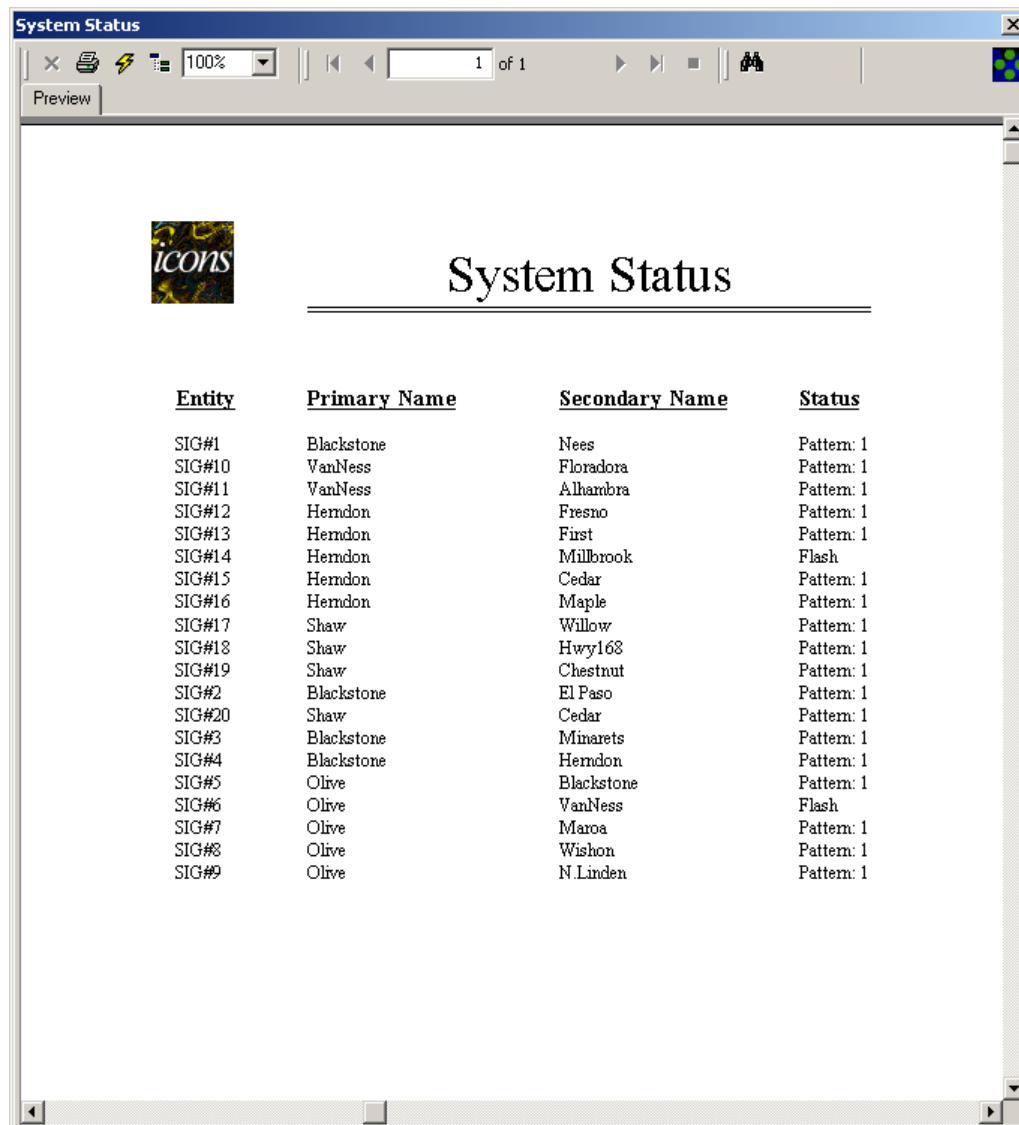


<u>Entity</u>	<u>Primary Name</u>	<u>Secondary Name</u>	<u>Status</u>
SIG#1	Blackstone	Nees	Pattern: 1
SIG#10	VanNess	Floradora	Pattern: 1
SIG#11	VanNess	Alhambra	Pattern: 1
SIG#12	Hemdon	Fresno	Pattern: 1
SIG#13	Hemdon	First	Pattern: 1
SIG#14	Hemdon	Millbrook	Flash
SIG#15	Hemdon	Cedar	Pattern: 1
SIG#16	Hemdon	Maple	Pattern: 1
SIG#17	Shaw	Willow	Pattern: 1
SIG#18	Shaw	Hwy168	Pattern: 1
SIG#19	Shaw	Chestnut	Pattern: 1
SIG#2	Blackstone	El Paso	Pattern: 1
SIG#20	Shaw	Cedar	Pattern: 1
SIG#3	Blackstone	Minarets	Pattern: 1
SIG#4	Blackstone	Hemdon	Pattern: 1
SIG#5	Olive	Blackstone	Pattern: 1
SIG#6	Olive	VanNess	Flash
SIG#7	Olive	Maroa	Pattern: 1
SIG#8	Olive	Wishon	Pattern: 1
SIG#9	Olive	N Linden	Pattern: 1

Figure 6-2: System Status Report

## COMMUNICATION STATUS

The Communications Status screen displays the current communications status of all field devices communicating with the **icons™** system. Use the **Monitor | Communications Status** menu item to activate the Communication Status screen as shown in Figure 6-3.

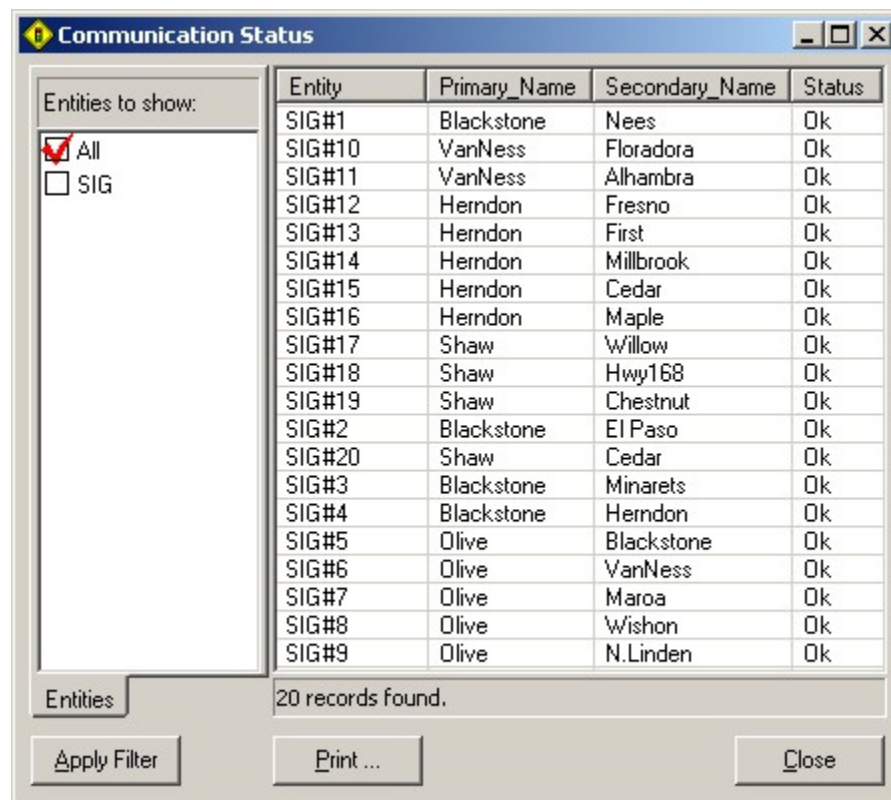

*Figure 6-3: Communication Status Screen*


As with the System Status display, the screen is divided into two regions. The left region allows display filters to be set. Three selections are possible. **All** selects all devices and is the default setting when first activating the display. **DET** selects detector device types and **SIG** displays signal device types. Once selected, the **Apply Filter** button must be pressed for them to take affect. They will remain active as long as the System Status dialog box remains open.

The right region lists the current status information on filtered device types. This window automatically refreshes once per second. Entries may be sorted by selecting any column header.

The following are the status values found in the Communication Status window:

- OK:** Controller is on-line and communicating.
- Fail:** Controller has lost communication and is not responding.
- N/A:** No status currently available.

Pressing the **Print** button opens the report window, as shown in Figure 6-4.

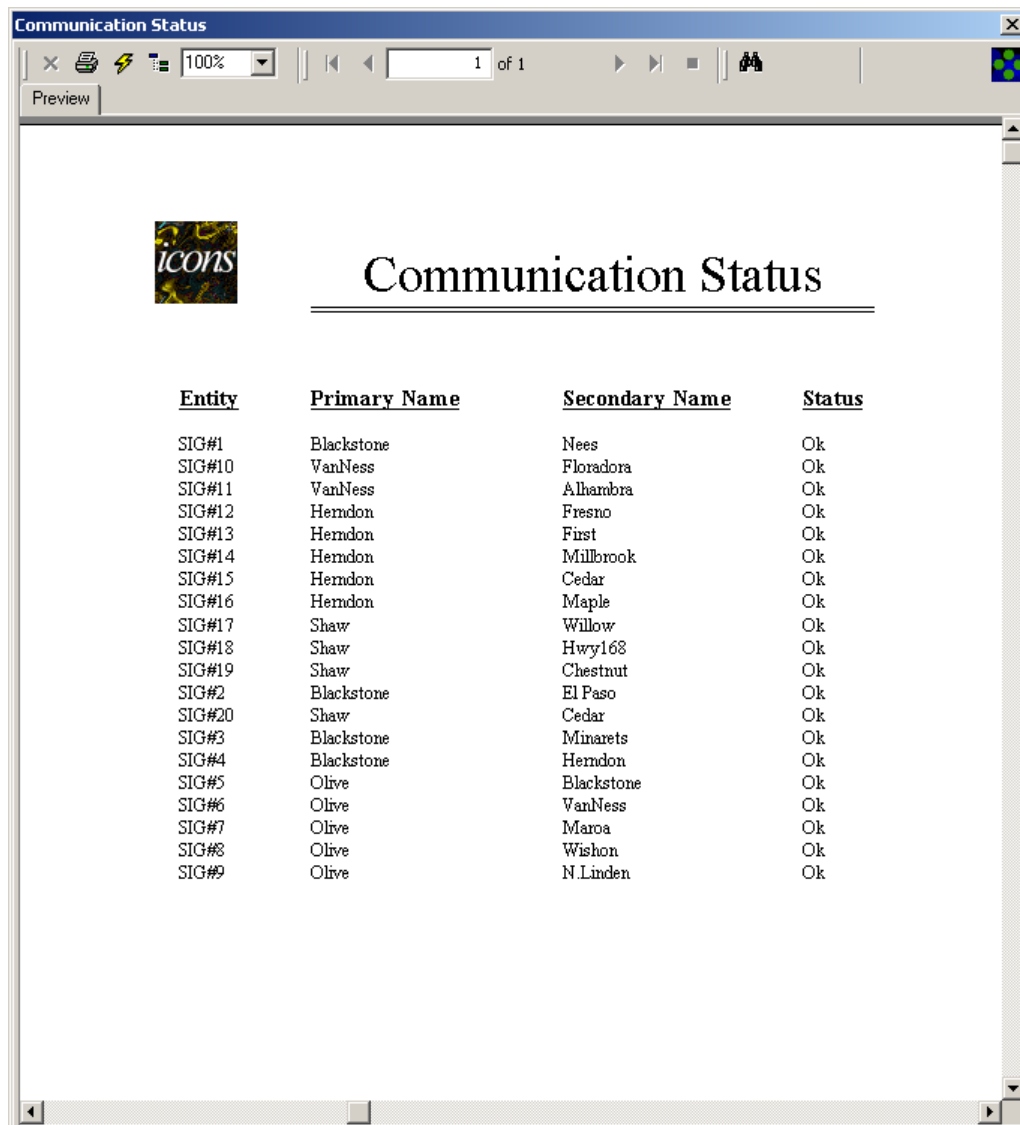

<u>Entity</u>	<u>Primary Name</u>	<u>Secondary Name</u>	<u>Status</u>
SIG#1	Blackstone	Nees	Ok
SIG#10	VanNess	Floradora	Ok
SIG#11	VanNess	Alhambra	Ok
SIG#12	Hemdon	Fresno	Ok
SIG#13	Hemdon	First	Ok
SIG#14	Hemdon	Millbrook	Ok
SIG#15	Hemdon	Cedar	Ok
SIG#16	Hemdon	Maple	Ok
SIG#17	Shaw	Willow	Ok
SIG#18	Shaw	Hwy168	Ok
SIG#19	Shaw	Chestnut	Ok
SIG#2	Blackstone	El Paso	Ok
SIG#20	Shaw	Cedar	Ok
SIG#3	Blackstone	Minarets	Ok
SIG#4	Blackstone	Hemdon	Ok
SIG#5	Olive	Blackstone	Ok
SIG#6	Olive	VanNess	Ok
SIG#7	Olive	Maroa	Ok
SIG#8	Olive	Wishon	Ok
SIG#9	Olive	N.Linden	Ok

Figure 6-4: Communication Status Report

## EVENT LOG

The Event Log gives a history of logged system events. This log contains a chronological recording of significant signal status changes, such as communications status changes, pattern changes, controller alarms, etc. These events are date and time stamped to allow the user to utilize search and sort filters. The ITMS Event Logger and ITMS Event Log Monitor services (See the *icons*<sup>TM</sup> System Administration Manual) control the information being recorded. The Event Logger determines what information is recorded. The Event Log Monitor determines how data is recorded and archived (See the System Configuration Editor Event Log Monitor Configuration – Section 4).

Selecting this menu item will provide access to an Event Log screen as shown in Figure 6-5.

The screenshot shows a software window titled "Event Log". On the left is a sidebar with filter controls. The main area is a table with the following columns: SystemID, DeviceDescription, DeviceID, TimeStamp, EventDescription, and Number. The table contains 227 records. The sidebar includes sections for "Time Stamp" (with a "Last 1 min." checkbox and "From/To" date and time pickers), "Device ID" (with "From/To" numeric pickers), and "List Size" (with a "Max" value of 1000). At the bottom of the sidebar are buttons for "Apply Filter", "Print ...", and "Close".

SystemID	DeviceDescription	DeviceID	TimeStamp	EventDescription	Number
1	Signal	101	2002-05-03 18:42:05	SET_CONTROLLER_PATTERN	0
1	Signal	201	2002-05-03 18:42:05	SET_CONTROLLER_PATTERN	0
1	Signal	101	2002-05-03 18:41:35	REPORTING_LOCAL_ZERO	1
1	Signal	101	2002-05-03 18:41:35	STOPPED_REPORTING_LOCAL_ZERO	0
1	Signal	101	2002-05-03 18:41:03	SET_CONTROLLER_PATTERN	0
1	Signal	201	2002-05-03 18:41:03	SET_CONTROLLER_PATTERN	0
1	Signal	101	2002-05-03 18:40:56	DEVICE_COMMUNICATIONS_CEASED	0
1	Signal	101	2002-05-03 18:40:56	PED_CALL_INACTIVE	1
1	Signal	101	2002-05-03 18:40:56	PED_CALL_INACTIVE	2
1	Signal	101	2002-05-03 18:40:56	PED_CALL_INACTIVE	3
1	Signal	101	2002-05-03 18:40:56	PED_CALL_INACTIVE	4
1	Signal	101	2002-05-03 18:40:56	PED_CALL_INACTIVE	5
1	Signal	101	2002-05-03 18:40:56	PED_CALL_INACTIVE	6
1	Signal	101	2002-05-03 18:40:56	PED_CALL_INACTIVE	7
1	Signal	101	2002-05-03 18:40:56	PED_CALL_INACTIVE	8
1	Signal	101	2002-05-03 18:40:56	PREEMPT_NOTACTIVE	3
1	Signal	101	2002-05-03 18:40:56	PREEMPT_NOTACTIVE	4
1	Signal	101	2002-05-03 18:40:56	PREEMPT_NOTACTIVE	5
1	Signal	101	2002-05-03 18:40:56	PREEMPT_NOTACTIVE	6
1	Signal	101	2002-05-03 18:40:56	PREEMPT_NOTACTIVE	1
1	Signal	101	2002-05-03 18:40:56	PREEMPT_NOTACTIVE	2
1	Signal	101	2002-05-03 18:40:56	COORDINATION_TRANSITION_IN_SYNC	0
1	Signal	101	2002-05-03 18:40:01	REPORTING_LOCAL_ZERO	1
1	Signal	101	2002-05-03 18:40:01	STOPPED_REPORTING_LOCAL_ZERO	0
1	Signal	101	2002-05-03 18:40:01	SET_CONTROLLER_PATTERN	0
1	Signal	201	2002-05-03 18:40:01	SET_CONTROLLER_PATTERN	0
1	Signal	101	2002-05-03 18:39:00	SET_CONTROLLER_PATTERN	0
1	Signal	201	2002-05-03 18:39:00	SET_CONTROLLER_PATTERN	0
1	Signal	101	2002-05-03 18:38:26	REPORTING_LOCAL_ZERO	1
1	Signal	101	2002-05-03 18:38:26	STOPPED_REPORTING_LOCAL_ZERO	0
1	Signal	101	2002-05-03 18:37:58	SET_CONTROLLER_PATTERN	0
1	Signal	201	2002-05-03 18:37:58	SET_CONTROLLER_PATTERN	0
1	Signal	101	2002-05-03 18:36:57	SET_CONTROLLER_PATTERN	0
1	Signal	201	2002-05-03 18:36:57	SET_CONTROLLER_PATTERN	0
1	Signal	201	2002-05-03 18:36:57	PATTERN_CHANGED	1

Figure 6-5: Event Log Data Screen

The left region of the window allows display filters to be set. These filters are found within two tabs; *Range* and *Device Types*.

The *Range* tab allows the user to filter the presentation of the event log data based upon either the time at which the event occurred, or the device associated with the event. The user is also permitted to limit the amount of data displayed. It includes the following parameters:

#### Time Stamp

##### Last ☐ Minutes

When selected, only the events that occurred within the specified number of minutes are shown. If this is not selected, the From and To times are used.

##### From / To

All events between these two times are displayed.

#### Device ID

The Device ID filter allows the user to selectively view the data of specific controllers. An inclusive range of controllers or all controllers may be selected.

##### From / To



Events associated with devices with numbers between these are displayed.

### List Size

**Max:**  x1000

When selected, this limits the data being analyzed to the specified number (x1000) of entries. The first entry retrieved occurs at the beginning of the time period specified under *Time Stamp*, and retrieval ends after the list size has been achieved. If this is not selected, all entries will be displayed for the specified time period.

*Note: Depending on how the Event Log Monitor feature is configured to handle the Event Logger data, it is possible that entries within the specified time period will not be available for display. Refer to Section 4 – System Configuration for Event Log Monitor setup.*

The *Device Types* tab is shown in Figure 6-6.


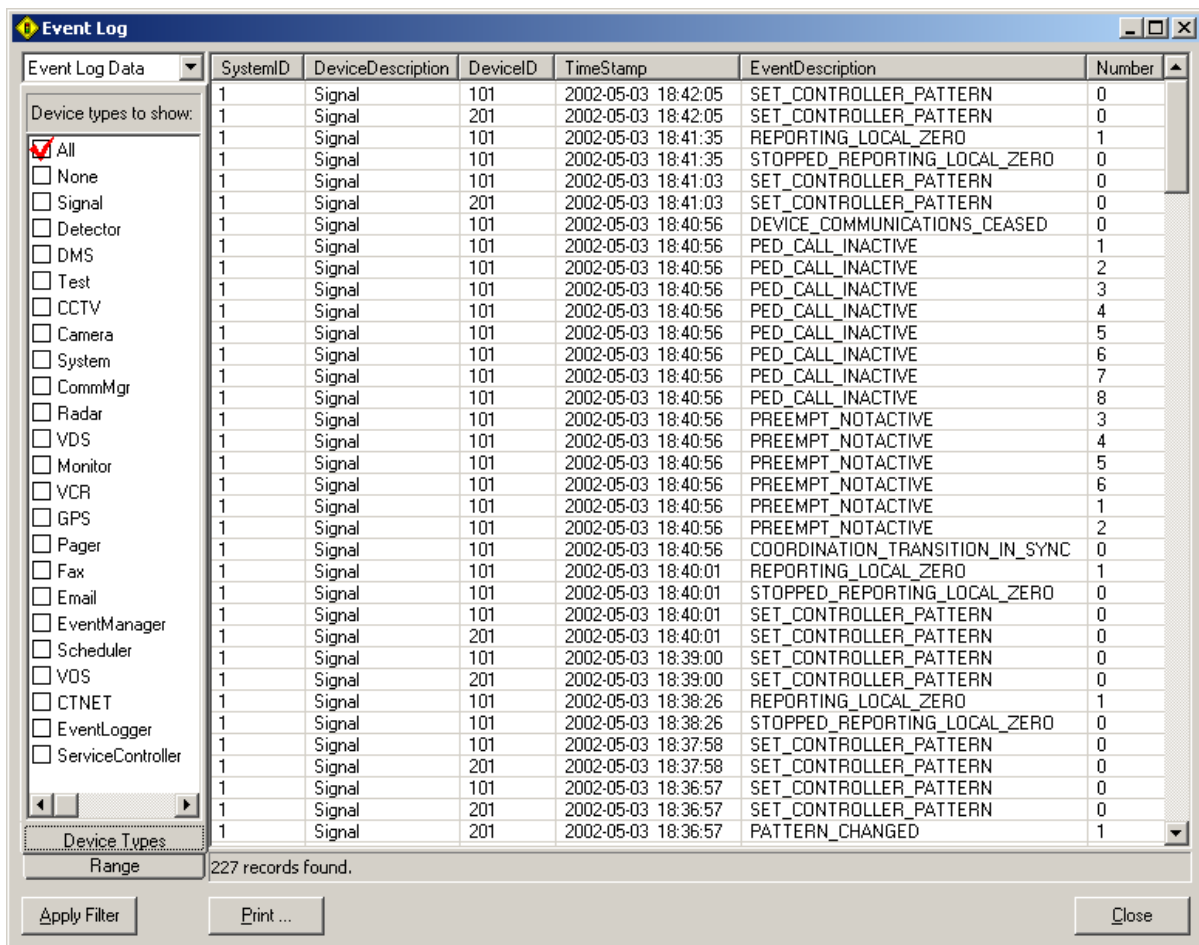


Figure 6-6: Device Types Tab

The *Device Types* tab allows the user to select from different device types to be displayed.

The pull down list at the top allows the user to select from two log files. The **Event Log Data** file, which is displayed by default when the event log is opened, typically records exception based events, such as loss of communications, controller flash, preemption, etc. The **Signal Phase Data** file, in

comparison, typically contains signal state changes that occur each cycle, such as pattern and phase interval changes, and local zero crossing. This is shown in Figure 6-7.

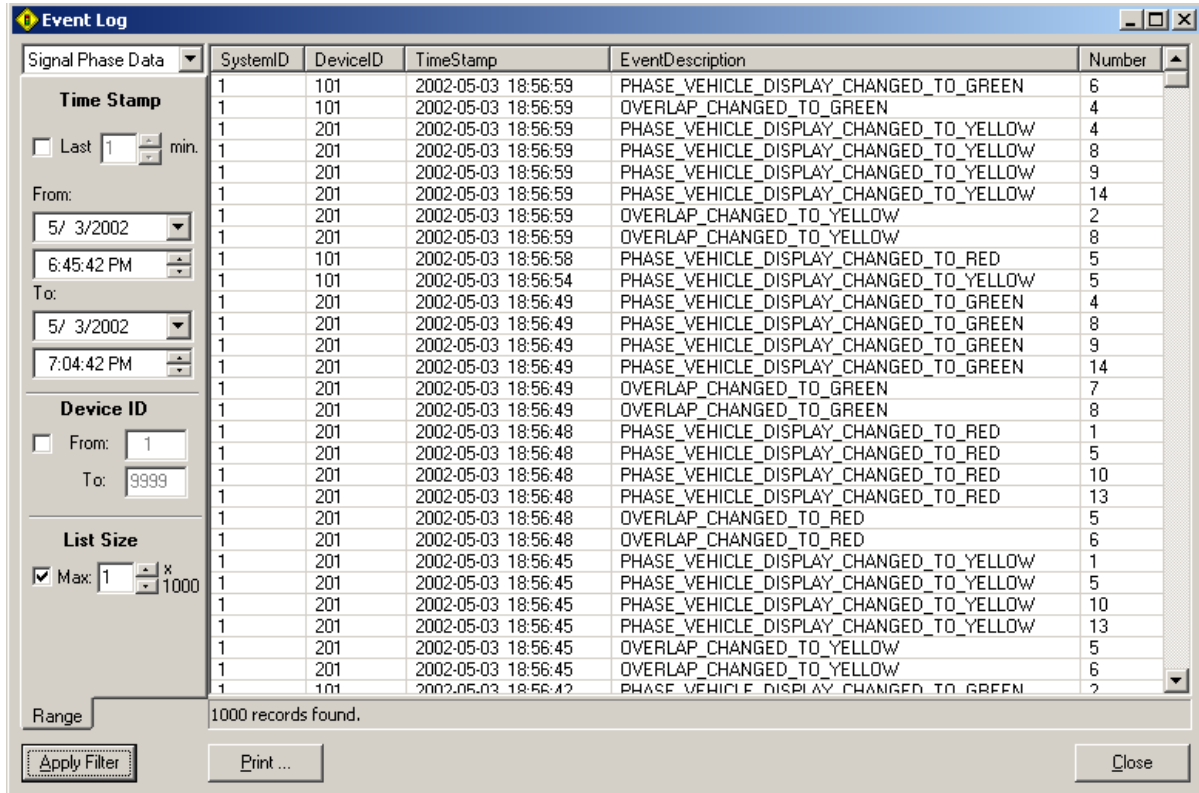

The screenshot shows the 'Event Log' window with a table of signal phase data. The table has five columns: SystemID, DeviceID, TimeStamp, EventDescription, and Number. The data shows various phase changes for a vehicle display, including transitions between green, yellow, and red states, and overlap changes. The 'Number' column indicates the count of each event type.

SystemID	DeviceID	TimeStamp	EventDescription	Number
1	101	2002-05-03 18:56:59	PHASE_VEHICLE_DISPLAY_CHANGED_TO_GREEN	6
1	101	2002-05-03 18:56:59	OVERLAP_CHANGED_TO_GREEN	4
1	201	2002-05-03 18:56:59	PHASE_VEHICLE_DISPLAY_CHANGED_TO_YELLOW	4
1	201	2002-05-03 18:56:59	PHASE_VEHICLE_DISPLAY_CHANGED_TO_YELLOW	8
1	201	2002-05-03 18:56:59	PHASE_VEHICLE_DISPLAY_CHANGED_TO_YELLOW	9
1	201	2002-05-03 18:56:59	PHASE_VEHICLE_DISPLAY_CHANGED_TO_YELLOW	14
1	201	2002-05-03 18:56:59	OVERLAP_CHANGED_TO_YELLOW	2
1	201	2002-05-03 18:56:59	OVERLAP_CHANGED_TO_YELLOW	8
1	101	2002-05-03 18:56:58	PHASE_VEHICLE_DISPLAY_CHANGED_TO_RED	5
1	101	2002-05-03 18:56:54	PHASE_VEHICLE_DISPLAY_CHANGED_TO_YELLOW	5
1	201	2002-05-03 18:56:49	PHASE_VEHICLE_DISPLAY_CHANGED_TO_GREEN	4
1	201	2002-05-03 18:56:49	PHASE_VEHICLE_DISPLAY_CHANGED_TO_GREEN	8
1	201	2002-05-03 18:56:49	PHASE_VEHICLE_DISPLAY_CHANGED_TO_GREEN	9
1	201	2002-05-03 18:56:49	PHASE_VEHICLE_DISPLAY_CHANGED_TO_GREEN	14
1	201	2002-05-03 18:56:49	OVERLAP_CHANGED_TO_GREEN	7
1	201	2002-05-03 18:56:49	OVERLAP_CHANGED_TO_GREEN	8
1	201	2002-05-03 18:56:48	PHASE_VEHICLE_DISPLAY_CHANGED_TO_RED	1
1	201	2002-05-03 18:56:48	PHASE_VEHICLE_DISPLAY_CHANGED_TO_RED	5
1	201	2002-05-03 18:56:48	PHASE_VEHICLE_DISPLAY_CHANGED_TO_RED	10
1	201	2002-05-03 18:56:48	PHASE_VEHICLE_DISPLAY_CHANGED_TO_RED	13
1	201	2002-05-03 18:56:48	OVERLAP_CHANGED_TO_RED	5
1	201	2002-05-03 18:56:48	OVERLAP_CHANGED_TO_RED	6
1	201	2002-05-03 18:56:45	PHASE_VEHICLE_DISPLAY_CHANGED_TO_YELLOW	1
1	201	2002-05-03 18:56:45	PHASE_VEHICLE_DISPLAY_CHANGED_TO_YELLOW	5
1	201	2002-05-03 18:56:45	PHASE_VEHICLE_DISPLAY_CHANGED_TO_YELLOW	10
1	201	2002-05-03 18:56:45	PHASE_VEHICLE_DISPLAY_CHANGED_TO_YELLOW	13
1	201	2002-05-03 18:56:45	OVERLAP_CHANGED_TO_YELLOW	5
1	201	2002-05-03 18:56:45	OVERLAP_CHANGED_TO_YELLOW	6
1	101	2002-05-03 18:56:42	PHASE_VEHICLE_DISPLAY_CHANGED_TO_GREEN	2

Figure 6-7: Signal Phase Data Screen

When making any changes to the filter settings, or selecting a different log file, the **Apply Filter** button must be pressed for the changes to take affect. Once the changes take affect, they remain active as long as the Event Log dialog box remains open.

The right region displays the results of the search based on filter parameters set in the left region. The event log refreshes itself every 30 seconds ('Apply Filter' can also be pressed to refresh). Entries may be sorted by selecting any column header.

Pressing the **Print** button opens the report window, as shown in Figure 6-8.

Sys ID	Device Des.	Device ID	TimeStamp	Event Des.	Number
1	Signal	501	2002-05-03 19:03:54	SET_CONTROLLER_PATTERN	0
1	Signal	501	2002-05-03 19:03:54	STOPPED_REPORTING_DETECTOR_FAULT	0
1	Signal	501	2002-05-03 19:03:54	STOPPED_REPORTING_CRITICAL_ALARM	0
1	Signal	501	2002-05-03 19:03:54	REPORTING_DETECTOR_FAULT	1
1	Signal	501	2002-05-03 19:03:54	STOPPED_REPORTING_COORDINATION_ALARM	0
1	Signal	101	2002-05-03 19:03:54	DEVICE_COMMUNICATIONS_CEASED	0
1	Signal	201	2002-05-03 19:03:54	DEVICE_COMMUNICATIONS_CEASED	0
1	Signal	501	2002-05-03 19:03:54	DEVICE_COMMUNICATIONS_CEASED	0
1	Signal	501	2002-05-03 19:03:54	REPORTING_LOCAL_OVERRIDE	1
1	Signal	501	2002-05-03 19:03:54	REPORTING_COORDINATION_ALARM	1
1	Signal	501	2002-05-03 19:03:55	PATTERN_CHANGED	254
1	Signal	501	2002-05-03 19:03:55	SPECIAL_FUNCTION_1_STATUS_CHANGED	0
1	Signal	501	2002-05-03 19:03:55	SPECIAL_FUNCTION_2_STATUS_CHANGED	0
1	Signal	501	2002-05-03 19:03:55	SPECIAL_FUNCTION_3_STATUS_CHANGED	0
1	Signal	501	2002-05-03 19:03:55	SPECIAL_FUNCTION_4_STATUS_CHANGED	0
1	Signal	501	2002-05-03 19:03:55	RED_CALL_INACTIVE	1
1	Signal	501	2002-05-03 19:03:55	RED_CALL_ACTIVE	2
1	Signal	501	2002-05-03 19:03:55	RED_CALL_INACTIVE	3
1	Signal	101	2002-05-03 19:03:51	DEVICE_COMMUNICATIONS_CEASED	0
1	Signal	201	2002-05-03 19:03:51	DEVICE_COMMUNICATIONS_CEASED	0
1	Signal	501	2002-05-03 19:03:51	DEVICE_COMMUNICATIONS_CEASED	0
1	Signal	101	2002-05-03 19:03:41	SET_CONTROLLER_PATTERN	0
1	Signal	201	2002-05-03 19:03:41	SET_CONTROLLER_PATTERN	0
1	Signal	101	2002-05-03 19:03:39	REPORTING_LOCAL_ZERO	1
1	Signal	101	2002-05-03 19:03:39	STOPPED_REPORTING_LOCAL_ZERO	0
1	Signal	101	2002-05-03 19:02:39	SET_CONTROLLER_PATTERN	0
1	Signal	201	2002-05-03 19:02:39	SET_CONTROLLER_PATTERN	0
1	Signal	101	2002-05-03 19:02:04	REPORTING_LOCAL_ZERO	1
1	Signal	101	2002-05-03 19:02:04	STOPPED_REPORTING_LOCAL_ZERO	0
1	Signal	201	2002-05-03 19:01:37	SET_CONTROLLER_PATTERN	0
1	Signal	101	2002-05-03 19:01:37	SET_CONTROLLER_PATTERN	0
1	Signal	101	2002-05-03 19:00:34	SET_CONTROLLER_PATTERN	0
1	Signal	201	2002-05-03 19:00:34	SET_CONTROLLER_PATTERN	0
1	Signal	101	2002-05-03 19:00:30	REPORTING_LOCAL_ZERO	1
1	Signal	101	2002-05-03 19:00:30	STOPPED_REPORTING_LOCAL_ZERO	0
1	Signal	101	2002-05-03 18:59:33	SET_CONTROLLER_PATTERN	0
1	Signal	201	2002-05-03 18:59:33	SET_CONTROLLER_PATTERN	0
1	Signal	101	2002-05-03 18:58:54	REPORTING_LOCAL_ZERO	1
1	Signal	101	2002-05-03 18:58:54	STOPPED_REPORTING_LOCAL_ZERO	0
1	Signal	201	2002-05-03 18:58:32	SET_CONTROLLER_PATTERN	0
1	Signal	101	2002-05-03 18:58:32	SET_CONTROLLER_PATTERN	0
1	Signal	101	2002-05-03 18:57:30	SET_CONTROLLER_PATTERN	0
1	Signal	201	2002-05-03 18:57:30	SET_CONTROLLER_PATTERN	0

Figure 6-8: Event Log Report

## ALARM REPORT

The Alarm report provides a detailed summary of all alarms that have been triggered (defined under **Setup | Alarms and Paging | Alarm Triggers**). This can be viewed by selecting **Reports | Alarm**, and is shown in Figure 6-9.

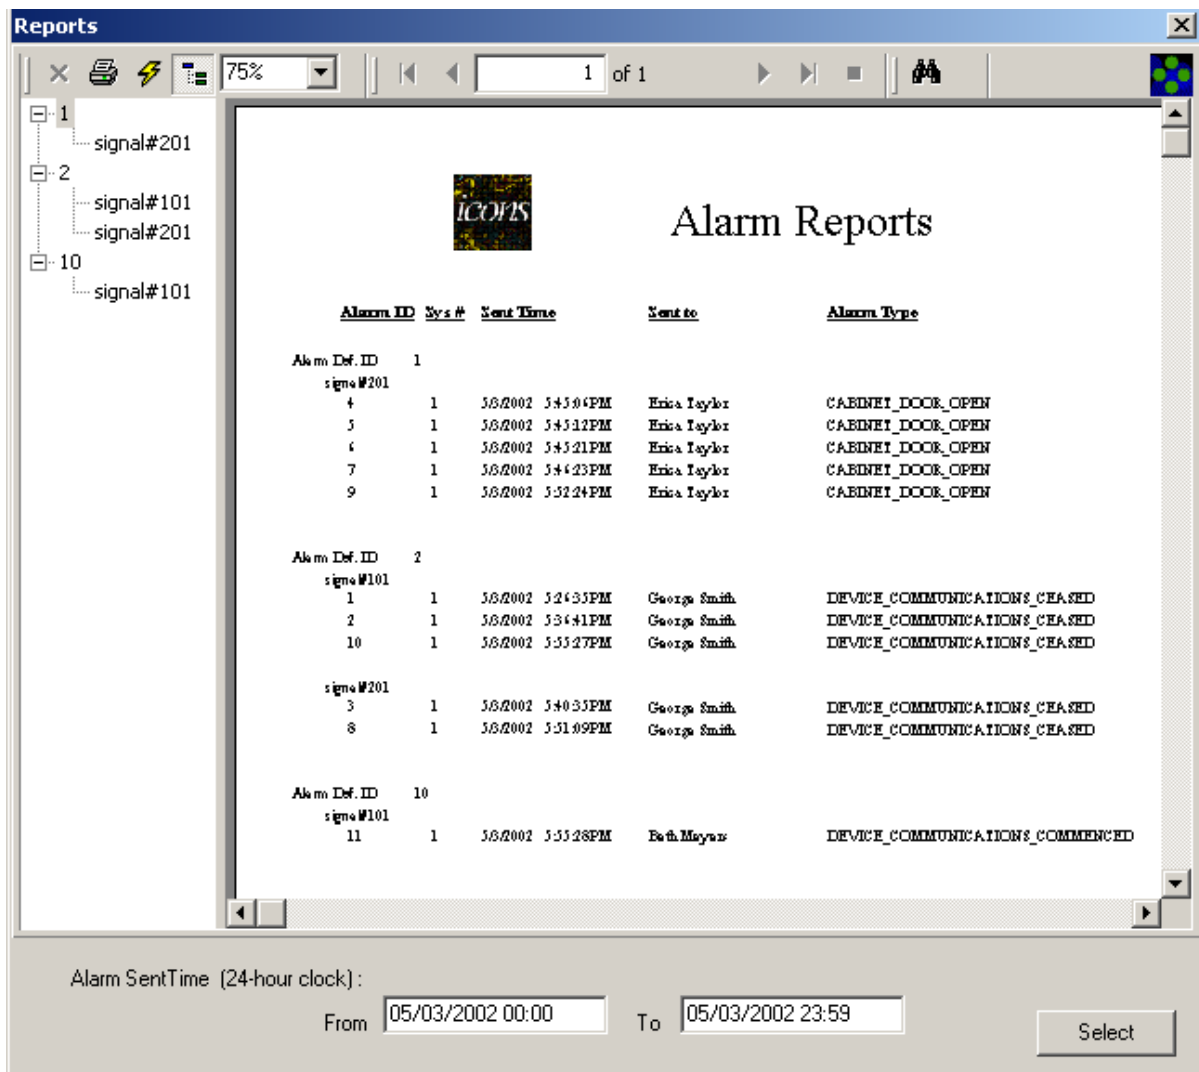




Figure 6-9: Alarm Report

To view alarm data, a range of alarm sent times must be set. The *From* date must be the current date or before, while the *To* date must be sometime after that (but not the same). Pressing the **Select** button, followed by the  button, will update the report with the desired data.

When the Group Tree View is active, entities with identical alarms are grouped together for convenience. Under a given alarm trigger ID, selecting an entity will display each instance of that alarm in the order that it was received.

## STUCK PREEMPT EVENTS REPORT

The Stuck Preempt Events Report provides a detailed summary of all preempts which have been deemed stuck by the Stuck Preempt Detection Service. This can be viewed by selecting **Reports | Stuck Preempt Events**. Currently Stuck Preempt Events, in addition to a Stuck Preempt Event History may be viewed, as shown in Figures 6-10 and 6-11, respectively. Selecting the desired

report, followed by the  button, will update the screen with the desired data. The Stuck Preempt Detection service is configured through the System Configuration Editor (Section 4).

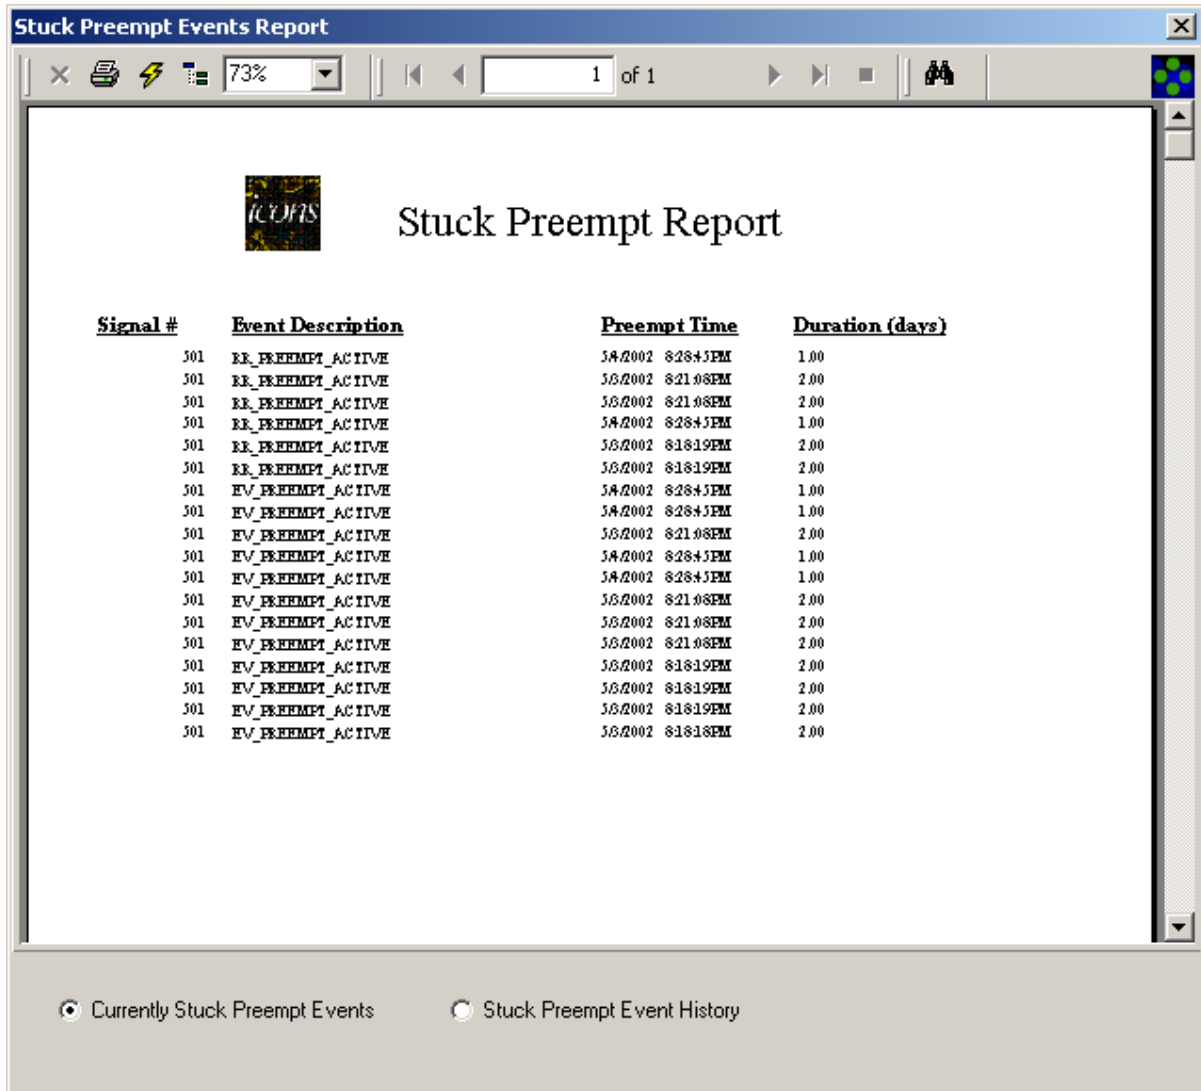


Figure 6-10: Currently Stuck Preempt Events Report

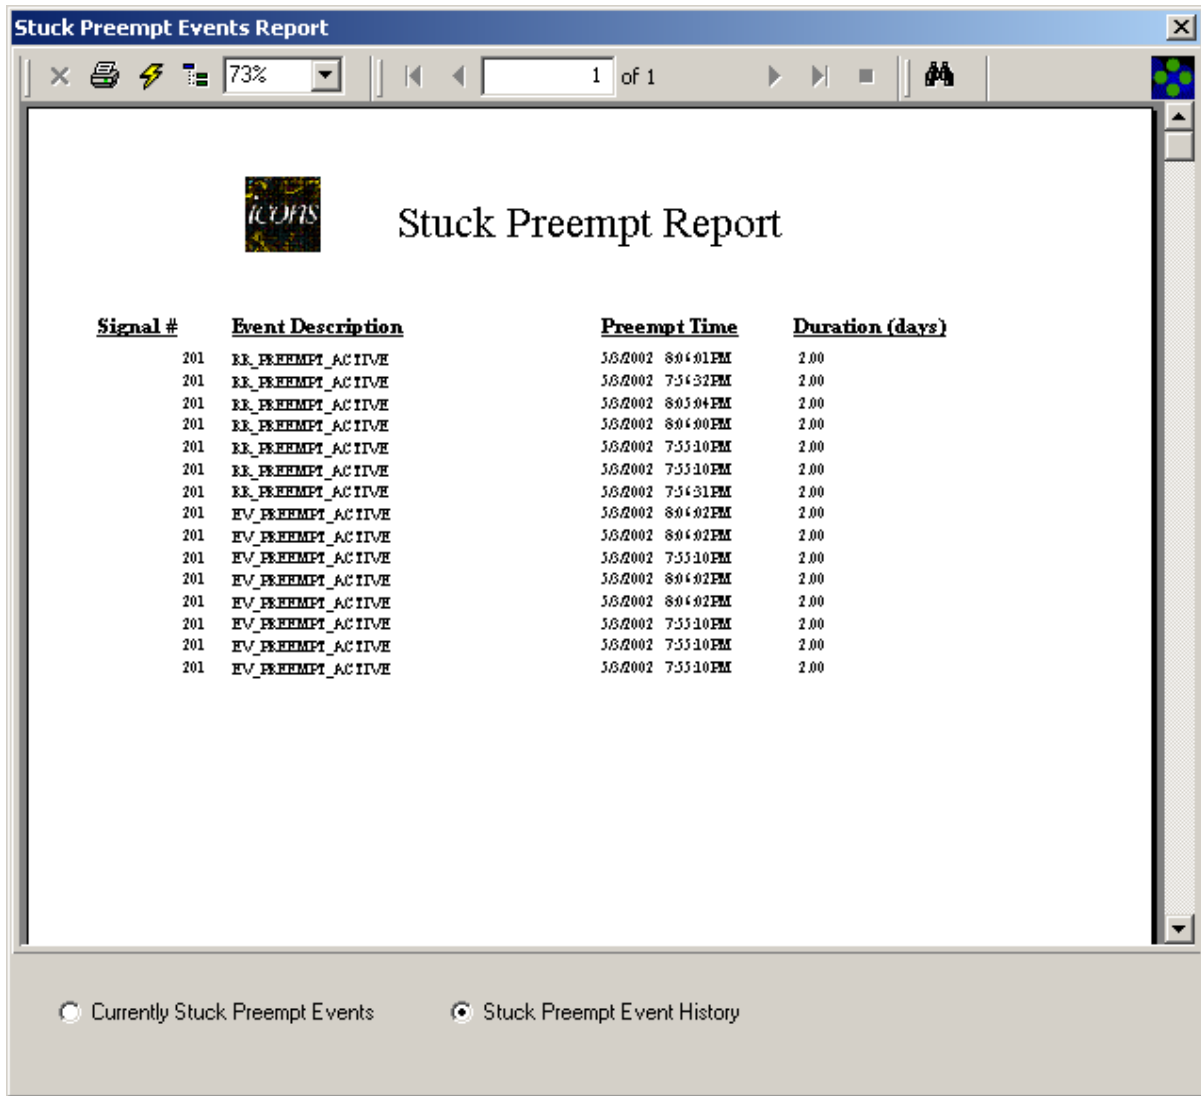


Figure 6-11: Stuck Preempt Event History Report

## SECTION 7 - SYSTEM DETECTOR DATA

The **icons™** system is able to collect, log, display, and export vehicle system detector data consisting of vehicle volume, occupancy, and speed (VOS). The VOS operation is able to collect this traffic data per system vehicle detector to support off-line vehicle demand analysis as well as real-time input to Links and Traffic Response operations. The VOS parameters collected are defined below:

- ❑ **Volume:** number of vehicle counts detected during the collection time period and expressed as an average number of vehicles per hour (vehicles/hour).
- ❑ **Occupancy:** amount of time that vehicles occupied the detector over the specified interval, expressed as a percentage of the total collection time period (1-100%).
- ❑ **Speed:** This is a calculated speed value using the measured volume and occupancy for the specified collection time period (miles/hr). The speed calculation is dependent upon an average detection zone length and average vehicle length.

### SETUP AND CONFIGURATION

System detectors must first be defined in **icons™** using the System Configuration Editor (Section 4) prior to collecting VOS data. System detectors must also be defined for the Detector Mapper service to collect, process, and store raw detector; and to be able to view data using the VOS display.

VOS data collection requires that the ITMS Communications and Detector Mapper services are properly initialized and running to collect and store this data. The following is a description of the various parameters that need to be set in the ITMS Communications Initialization (itmscomm.ini) and Detector Mapper Initialization (dm.ini) files. These services need to be restarted before any modified parameters take effect (See the **icons™** System Administration Manual).

#### **itmscomm.ini**

- ❑ **SecondaryPollMessage:** AB3418\_DD or NTCIP\_SEC. This message is sent by **icons™** requesting detector data from the controller. The poll message must be compatible with the protocol for that channel.
- ❑ **SecondaryPollPeriod:** 0 – 255. This is amount of time, in seconds, that **icons™** waits to send a request for detector data. It should be between 1/2 and 1/3 the controller collection period to ensure that VOS data is reliably retrieved from the controller. Duplicate detector data responses from the controller within the same controller collection period are discarded.

#### **DM.ini**

- ❑ **CollectionTimePeriod:** This is the length of time, in seconds, that VOS sample data is collected before averaging and speed calculations are performed. At a minimum, this is recommended to be 3 to 5 times the controller collection period to generate reasonable averages. For Model 2070 controllers with NextPhase, the collection period is fixed at 60 seconds. Typically, this is set to either 5, 10, or 15 minutes.
- ❑ **CollectionErrorThreshold = 0 – 100.** This indicates the allowable percentage of invalid VOS samples, in whole percentage points. If a collection of VOS samples is not within the error threshold, averaging and speed calculations cannot be performed.

The Event Log Monitor determines how Detector Data is recorded and archived (See the System Configuration Editor Event Log Monitor Configuration – Section 4).



## VOS DATA DISPLAY

The VOS display, in conjunction with the ITMS Detector Mapper Service, allows the user to display and export to file volume, occupancy and speed (VOS) data collected from vehicle detectors. Selecting the **Monitor | VOS Display** menu item generates the VOS display as shown in Figure 7-1. The VOS display allows the user to view historical volume, occupancy, and speed system detector data in either tabular or graphical format. The display has three tabs and automatically defaults to the Detectors tab. The user configures the VOS parameters from the Detectors tab and then uses the Graph tab and Tabular Report tab to display the resulting information. The Graph and Tabular Report tabs are only selectable once the parameters under the Detector tab have been properly configured.

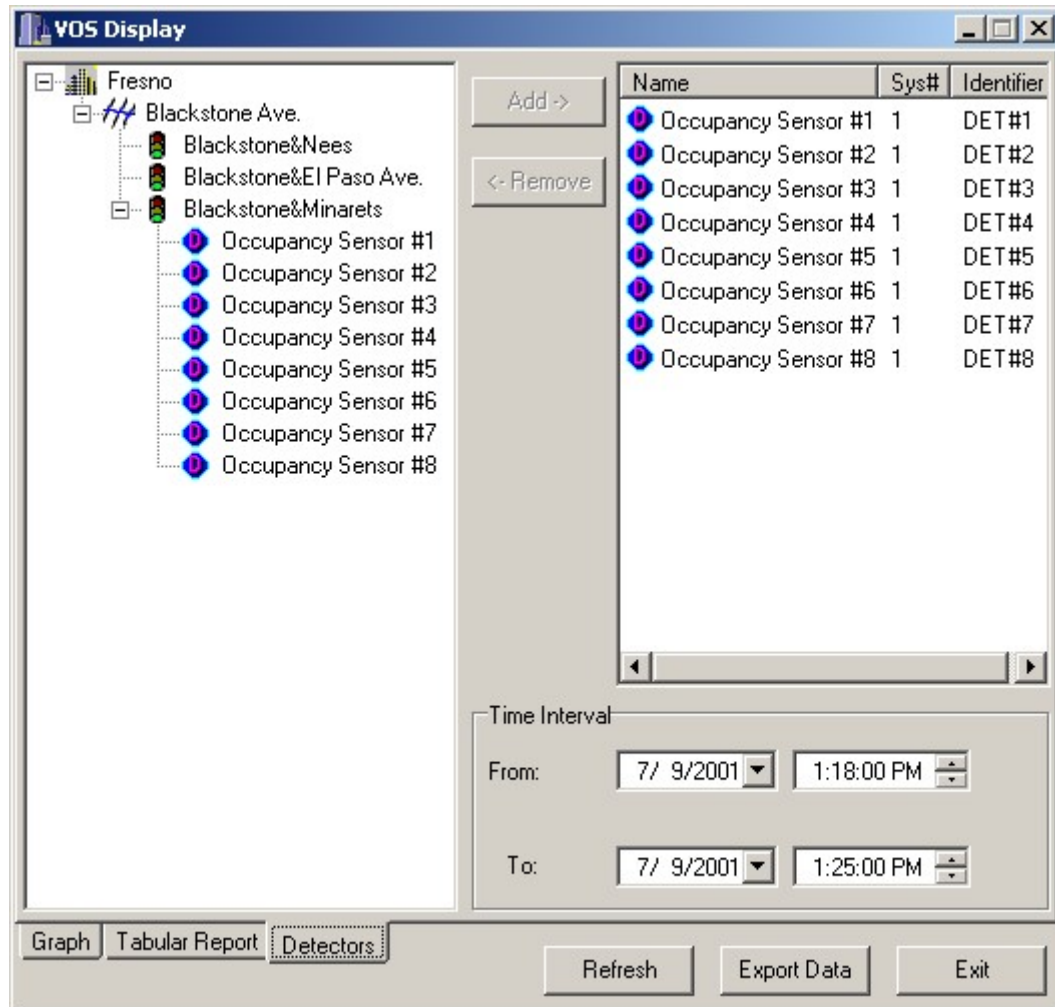


Figure 7-1: VOS Display

From the Detector tab the left side panel provides the user with a tree view of all system objects from which to select. Controllers with detectors (or stand-alone detectors) may be selected for VOS data monitoring. This is accomplished by highlighting the desired entity and pressing the **Add>>** button. The entity will then appear in the right panel, designating that it has been selected. This procedure is repeated for all entities to be monitored. To remove an entity from the right panel, highlight it in the right panel and press the **<<Remove** button.



*Note: Entity selection is not retained after the VOS dialog is closed.*

Once all desired entities have been added, the Time Interval must be set. This is the window of time over which volume and occupancy data will be analyzed and speed calculations performed. Since this data is continuously being logged, start times that have already occurred are valid, as are end times occurring in the future.

Selecting the **Tabular Report** tab displays the screen shown in Figure 7-2.

System ID	Detector ID	Date / Time	Volume(veh/h)	Occupancy(%)	Speed(mi/h)	Period
1	1	07/09/01 13:19:24	720	17.5	45	25
1	2	07/09/01 13:19:24	576	18	35	25
1	3	07/09/01 13:19:24	576	16	40	25
1	4	07/09/01 13:19:24	432	19	25	25
1	5	07/09/01 13:19:24	432	15	32	25
1	6	07/09/01 13:19:24	432	15	32	25
1	7	07/09/01 13:19:24	576	14	45	25
1	8	07/09/01 13:19:24	720	17	47	25
1	1	07/09/01 13:20:44	432	15	32	25
1	2	07/09/01 13:20:44	432	13	37	25
1	3	07/09/01 13:20:44	576	15	42	25
1	4	07/09/01 13:20:44	864	16.5	58	25
1	5	07/09/01 13:20:44	864	20	48	25
1	6	07/09/01 13:20:44	864	27	35	25
1	7	07/09/01 13:20:44	432	22.5	21	25
1	8	07/09/01 13:20:44	432	20.5	23	25
1	1	07/09/01 13:23:24	576	17	37	25
1	2	07/09/01 13:23:24	576	16.5	38	25
1	3	07/09/01 13:23:24	720	18	44	25
1	4	07/09/01 13:23:24	720	15	53	25
1	5	07/09/01 13:23:24	720	17.5	45	25
1	6	07/09/01 13:23:24	576	19.5	32	25
1	7	07/09/01 13:23:24	432	17.5	27	25

**Figure 7-2: Tabular Report**

The following is a description of each column entry:

- ❑ System ID – System entity number as defined in the System Configuration Editor
- ❑ Detector ID – System unique detector ID number as defined in the System Configuration Editor.
- ❑ Date / Time – The date and time of the VOS (volume, occupancy, and speed) calculation as performed by the Detector Mapper service. The time interval between calculations is equal to the collection time period.
- ❑ Volume – number of vehicle counts detected during the collection time period and expressed as an average number of vehicles per hour (vehicles/hour).

- ❑ Occupancy – amount of time that vehicles occupied the detector over the specified interval, expressed as a percentage of the total collection time period (1-100%).
- ❑ Speed – This is a calculated speed value using the measured volume and occupancy for the specified collection time period (miles/hr). The speed calculation is dependent upon an average detection zone length and average vehicle length as specified in the Detector Mapper initialization file for that service (Ref. the *icons™* System Administration Manual).
- ❑ Period – The controller collection period specified in the AB3418 Detector Data Response Packet (Byte 4).

This information may also be displayed in graphical form by selecting the **Graph** tab. Once selected, **Volume**, **Occupancy**, and **Speed** tabs appear. These are used to display the corresponding graphs, as shown in Figures 7-3, 7-4, and 7-5.

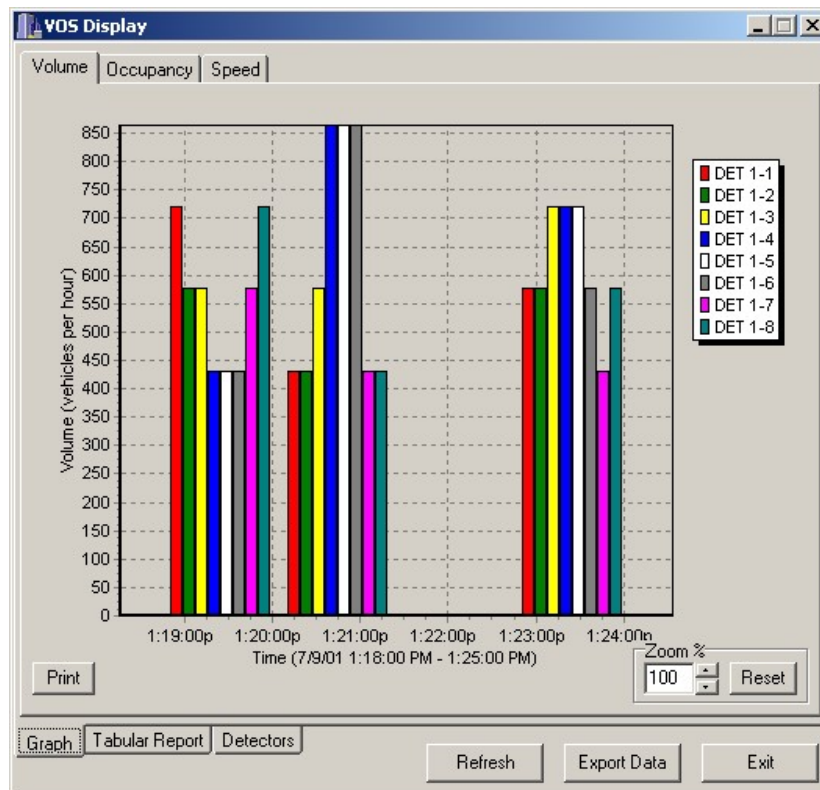


Figure 7-3: Volume Graph

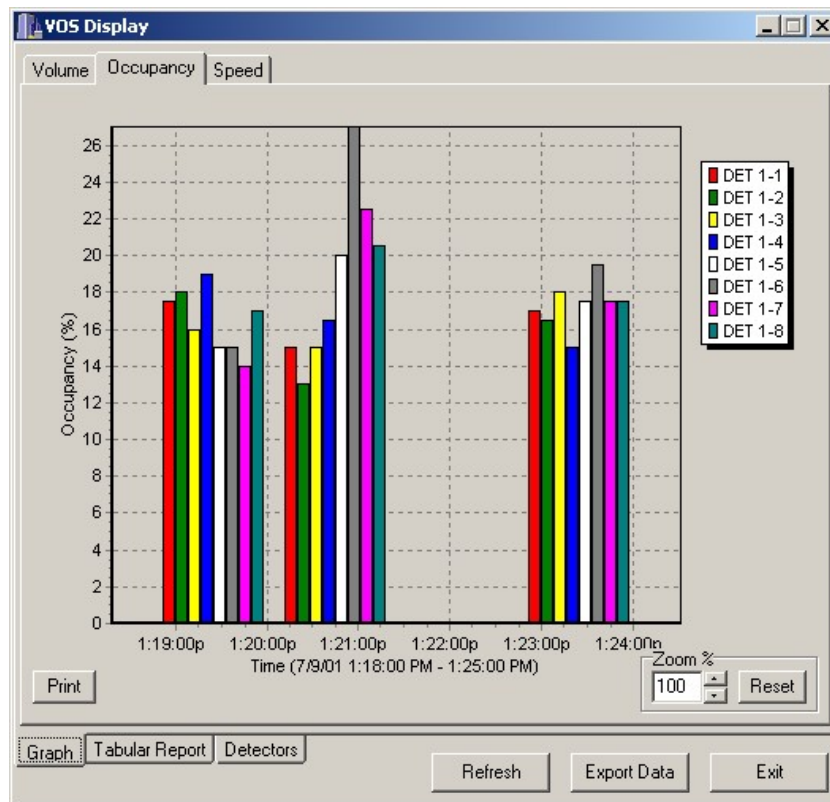


Figure 7-4: Occupancy Graph



Figure 7-5: Speed Graph

While viewing the graphs, they may be zoomed in and out by pressing the up and down arrows. Panning is possible by right-clicking anywhere on the graph and moving the desired direction. To instantly center the graph and restore the zoom to 100%, press **Reset**. If a hardcopy of the graph is desired, press the **Print** button. Printing requires a default printer to be configured in Windows.

The **Refresh** button recalculates the VOS data and updates the displays as necessary. The **Export Data** button allows the user to save the VOS data results to a comma delimited text file. Once pressed, the window shown in Figure 7-6 appears, allowing the name and path of the file to be entered.

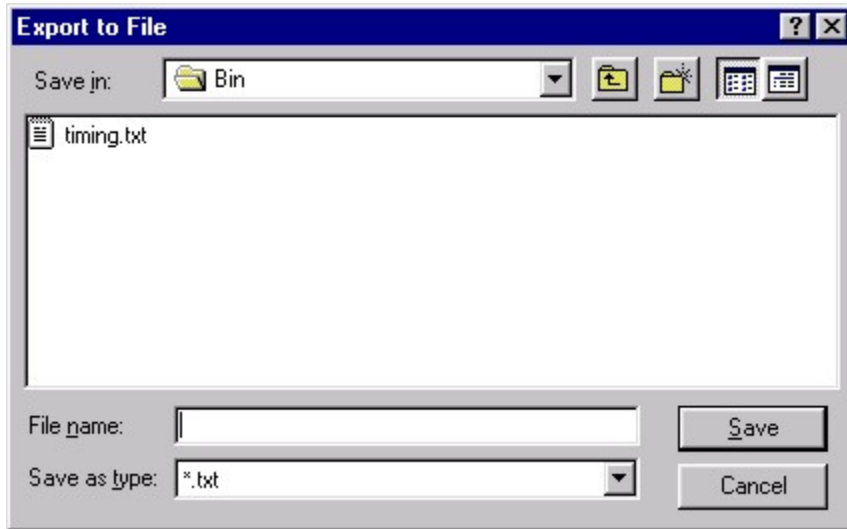


Figure 7-6: Export VOS Data

The resulting comma delimited text file, as viewed from a text-editor, is shown in Figure 7-7.

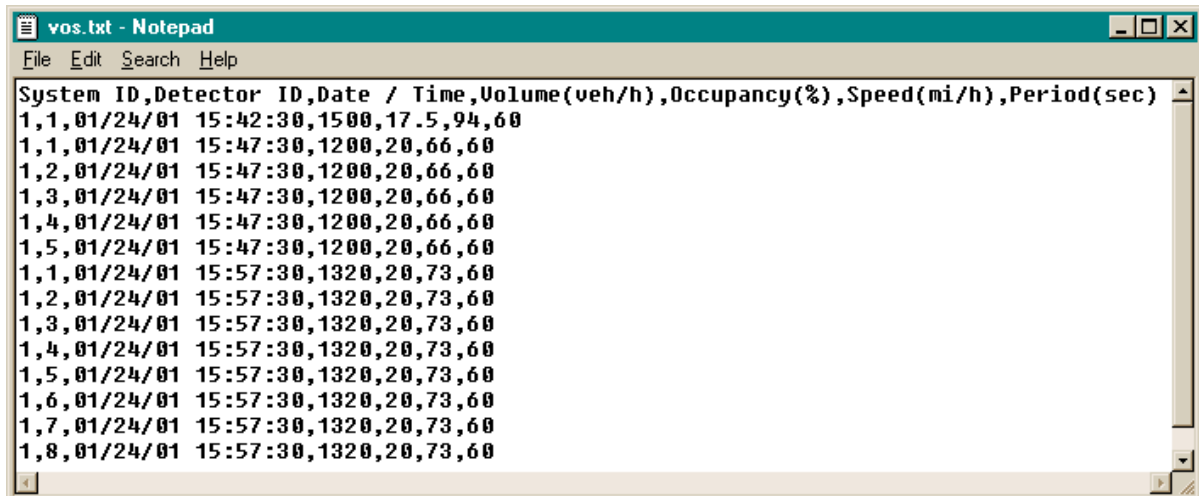


Figure 7-7: VOS Text File

## SECTION 8 - LINKS

A link is a graphic display used to indicate the state of traffic flow along a roadway. Links are typically placed on the main system map in *icons™*, and change color as the flow increases or decreases. They receive their information from system detectors, which provide numbers for both volume and occupancy. From this information, *icons™* calculates speed and a weighted volume / occupancy factor ( $V + K*O$ ).

The **View | Link** menu item allows the user to select which one of the four parameters (Volume, Occupancy, Weighted Volume+Occupancy, or Speed) is used to generate the Link display. Only one component may be selected at any time, which is applied to all defined links. The selection is a “Global” selection but can be different for each workstation. An example of a main system map with links defined is shown in Figure 8-1.

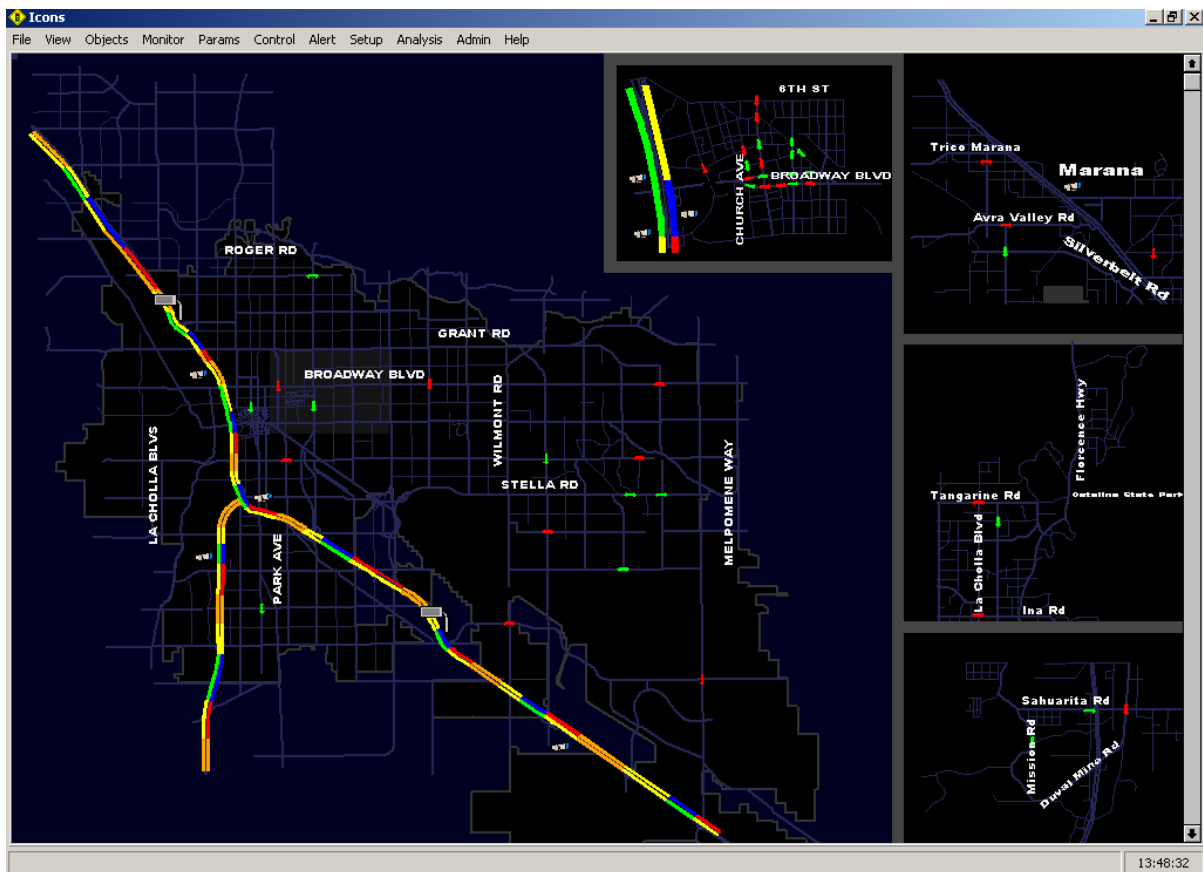


Figure 8-1: Main System Map with Links Defined

## SETUP AND CONFIGURATION

Link Setup and Configuration requires two steps.

1. The first is to establish global system settings that define the default link operation for the entire system. This step can occur either before or after links have been defined in the second step. However, these default settings are displayed with each individual link

configuration. The user has the option of using the default system settings or defining new individual settings for each link. Having the default systems settings first typically makes defining individual links easier. The system settings can be changed at any time. If links are configured to use the default settings then these settings will take affect immediately.

2. The second step is to define each individual link using the System Configuration Editor. Defining an individual link is covered in Section 4. Each link is then further configured to define all of its lane-based member system detectors along with relative weightings used in the link calculations. This process assumes that individual member detectors have already been defined and configured in the System Configuration Editor (Section 4)

## System Link Configuration

The first step to setting up a Link is to define the system default values. Select the **Admin | System Configuration** menu item to open the System Configuration Editor (Section 4). Next select the **System Settings | Link Configuration** menu item from the System Configuration Editor menu bar. The System Link Configuration screen is shown in Figure 8-2.

**System Link Configuration**

**Timing**

Calculation Period (sec): 0

Maximum Calculation Period (sec): 90

**Link Validity**

Valid Detector Threshold (%): 99

**Logging**

☒ Logging Enabled

**Link Levels**

	Flash	A	B	C	D	E	F
Colors:		Green	Blue	Yellow	Orange	Red	Red
Volume:		(offset) 0 %	20 %	40 %	60 %	80 %	100 %
		(veh/hr) 0	360	720	1080	1440	1800 (High Vol)
V + KD:		(offset) 0 %	20 %	40 %	60 %	80 %	100 %
		(veh/hr) 0	360	720	1080	1440	1800 (High V+KD)
Occupancy:		(%) 0 %	17 %	34 %	51 %	68 %	85 %
Speed:		(offset) +INF %	100 %	80 %	60 %	40 %	20 %
		(mi/hr) +INF	55 (Free Flow)	44	33	22	11

Special Case Colors:

Flash Invalid Un-initialized

Save Cancel

Figure 8-2: System Link Configuration

### Timing

#### Calculation Period (sec)

This is the time period (in seconds) by which the system will aggregate system detector data into link values and update the appropriate display. If this is set to zero, the system will calculate and



display as soon as data is available. Otherwise, this must be greater than or equal to the CollectionTimePeriod specified in the detector mapper configuration file (DM.ini).

**Maximum Calculation Period (sec)**

This is the maximum time (in seconds) that the system will wait for a detector to return data, before considering it to be invalid. It is also the period after which calculation and display will be forced if the “calculation period” is set to zero and there are non-responsive detectors within the link. This must be greater than or equal to the CollectionTimePeriod specified in the detector mapper configuration file (DM.ini).

**Link Validity****Valid Detector Threshold (%)**

This is the percent of detectors within a link that must be valid for the link to be considered valid. If the percentage of valid detectors within a link falls below this value, the link will become invalid and stop reporting. Invalid links are shown with the “invalid color”.

**Logging****Logging Enabled**

This flag turns logging on or off. If this option is checked, all links using this option will record their data to the database as it is generated. (Note: this option is only available if the “System Wide Overrides” in “Individual Link Configuration Settings” are set to “Use System Wide Values”). The Event Log Monitor determines how Link Data (Link VOS Log) is recorded and archived (See the System Configuration Editor Event Log Monitor Configuration – Section 4).

**Link Levels**

This sets the *link level thresholds* and *graphic colors*. Link level thresholds are specified separately for volume, V+KO, occupancy, and speed. Volume, V+KO, and speed scale between zero and infinity, and occupancy scales between zero and 100. To begin with, base values must be specified for volume, V+KO, and speed (in the “High Vol.”, “High V+KO”, and “Free Flow” fields), from which the rest of the thresholds will be calculated. The values in the “%” fields are used to calculate offsets from this base. (Note that occupancy has no base value, as it is a percent value and will be the same for all links.) The volume and V+KO scales will be increasing scales, with percent offsets from the base value (E/F value.) The speed scale will be a decreasing scale, with percent offsets from the free flow speed (A/B value.) For example, if the free flow speed is set to 55, and the speed percents are set to 90%, 80%, 70%, and 60%, the speed thresholds will be 55, 50, 44, 39, and 33 miles per hour. Percent values are used in the volume, V+KO, and speed scales, to allow the scale to vary from link to link. (Separate base values may be specified for each link, but the entire scale does not need to be re-specified for each link.)

Graphic colors specify what graphic color will be displayed for what threshold range (the two threshold fields that the color spans). For example, if the speed thresholds are 55, 50, 44, 39, and 33 (55 mph, 90%, 80%, 70%, and 60%), and a link has a speed value of 35, the link will display as color “E”. (The rule for a volume, occupancy, or V+KO link value to be within a threshold range is “lower threshold value” < link value <= “upper threshold value”, except for the first threshold where “lower threshold value” <= link value <= “upper threshold value”. For speed, it is “upper threshold value” > link value >= “lower threshold value”, except for the first threshold where “upper threshold value” >= link value >= “lower threshold value”.) There are also two special case colors, “Invalid” and “Un-initialized”, which a link will change to if it becomes invalid or if it has not yet been initialized by the system (respectively).

**Flash**

Will cause the link graphic to flash the specified color.

**Colors**

Allows color selection for each of the link states. Colors are selected by first clicking on the desired link state, and then selecting the appropriate color in the color palette. There can be a maximum of sixteen (16) colors to choose from. These colors are retrieved from the LinkColors database table. (Note: color changes can only take effect by restarting the *icons™* iGUI)

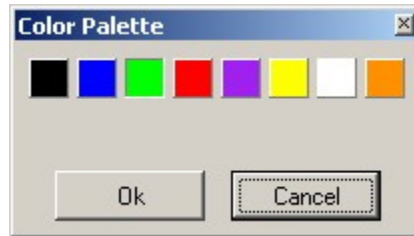


Figure 8-3: Link Color Selection

**Volume**

This defines the number of vehicles per hour. The *High Volume* parameter is the volume that is considered 100%. The boundary points between states are entered as percentage values of the *High Volume* value. Values are automatically calculated from these percentage values to show values relative to the *High Volume* value.

**V+KO**

V+KO is defined as the volume + K\*occupancy. The K constant can be adjusted and the *High V+KO* value is the value that yields 100%. The boundary points between states are entered as percentages of the *High V+KO* value. Values are automatically calculated from these percentage values to show values relative to the *High V+KO* value.

**Occupancy**

This is the percentage of time that the link has occupancy. Values can be specified for boundary points to define link states. These values are in percent.

**Speed**

This is the average speed of the vehicles within the link. Boundaries may be specified which are percentages of the *Free Flow* speed.

**Special Case Colors**

Colors used when the link is un-initialized (default state) and invalid.

**Individual Link Configuration**

Each individual link must be defined using the System Configuration Editor (Section 4). Each link is then further configured by selecting the **Configure** button in the Link Settings region of the Link Configuration screen within the System Configuration Editor. The resulting Link Configuration screen is shown in Figure 8-4.



**Link1 - Configuration**

**Link Display Levels**

Use System Settings | **Override Level Bases** | Override All Display Level Settings

Colors: A B C D E F

Volume: (offset)	0	%	20	%	40	%	60	%	80	%	100	%	+INF	%
(veh/hr)	0		360		720		1080		1440		1800		(High Vol.)	+INF
V + KO: (offset)	0	%	20	%	40	%	60	%	80	%	100	%	+INF	%
(veh/hr)	0		360		720		1080		1440		1800		(High V+KO)	+INF
Occupancy: (%)	0	%	17	%	34	%	51	%	68	%	85	%	100	%
Speed: (offset)	+INF	%	100	%	80	%	60	%	40	%	20	%	0	%
(mi/hr)	+INF		55		(Free Flow)	44		33		22		11		0

**Logging** ☐ Override ☒ Enable Logging

**V + KO** ☐ Override K Constant: 10

**Lane\Location Configuration**

Lane	Location 1	Location 2	Location 3
1	DET#1		
2		DET#2	
3			DET#3

Configure

Save Cancel

Figure 8-4: Link Configuration

**Link Display Levels****Use System Settings**

Link will use the data stored in the System Link Configuration (See System Link Configuration above). Users will still be able to add and remove detectors.

**Override Level Bases**

Allows user to specify new *High Volume*, *High V+KO*, and *Free Flow* values (See System Link Configuration above for more details on these parameters) while maintaining the default step increments.

**Override All Display Level Settings**

Actual calculated values are ignored and user may enter custom values for the link state boundaries.

**Logging****Override / Enable Logging**

When “Override” is checked, the user may change the “Enable Logging” setting for that particular link. This overrides the setting in the System Link Configuration (Figure 8-2).

**V+KO****Override / K Constant**

When “Override” is checked, the user may change the value of the K constant for that particular link. This overrides the setting in the System Link Configuration (Figure 8-2).

**Lane \ Location Configuration**

This area displays the member detectors within the link, their lane, and location position. To edit this information, press the **Configure** button. The Detector Location Configuration screen is shown in Figure 8-5.

Lane	Detector Number	Description	Volume Factor	Occupancy Factor	Speed Factor
Lane 1	DET#1	NONE @ NONE	100	100	100
Lane 2	DET#2	NONE @ NONE	100	100	100
Lane 3					

Buttons: Add Lane, Insert Lane, Delete Lane, Add Location, Insert Location, Delete Location, Save, Cancel

*Figure 8-5: Detector Location Configuration*

The Detector Location Configuration allows the user to add, insert, and remove lanes and location and place detectors within these locations. The user is able to assign scaling factors for volume, occupancy, and speed, which are used in the link calculation.

The volume counts for each lane at a location are summed while occupancy and speed are averaged. All locations are then averaged for all three parameters to generate a single volume, occupancy, and speed parameter for the link.

Use the **Add Lane** or **Insert Lane** buttons to add a new lane and location. With the lane selected use the **Add Location** or **Insert Location** buttons to add additional locations to the selected lane. For each new location select the Detector Number cell to activate a drop-down list of all available system detectors. Select the desired detector and add the appropriate scaling factors for volume, occupancy and speed. Use the **Save** button to save settings and revert back to the Link Configuration screen (figure 8-4).

**LINK DATA DISPLAY**

To view attributes of a link on the map, double left-click on the link icon, or with the desired Link device selected, use the **Monitor | Device** menu selection. This will open the link dynamic display screen, which shows the past and current status of the selected link graphically, in addition to displaying the current values numerically. The colors used in plotting these values are those

established in the System Link Configuration (see above). Invalid link data is not shown, while data that has been made invalid by changing link settings is shown as a darker version of the series' color.

*Note: Historical plot data is not reproduced after the link dialog is closed.*

### Left Panel - Volume

Selecting the *Volume* tab displays a plot of the link volume, as shown in Figure 8-6.

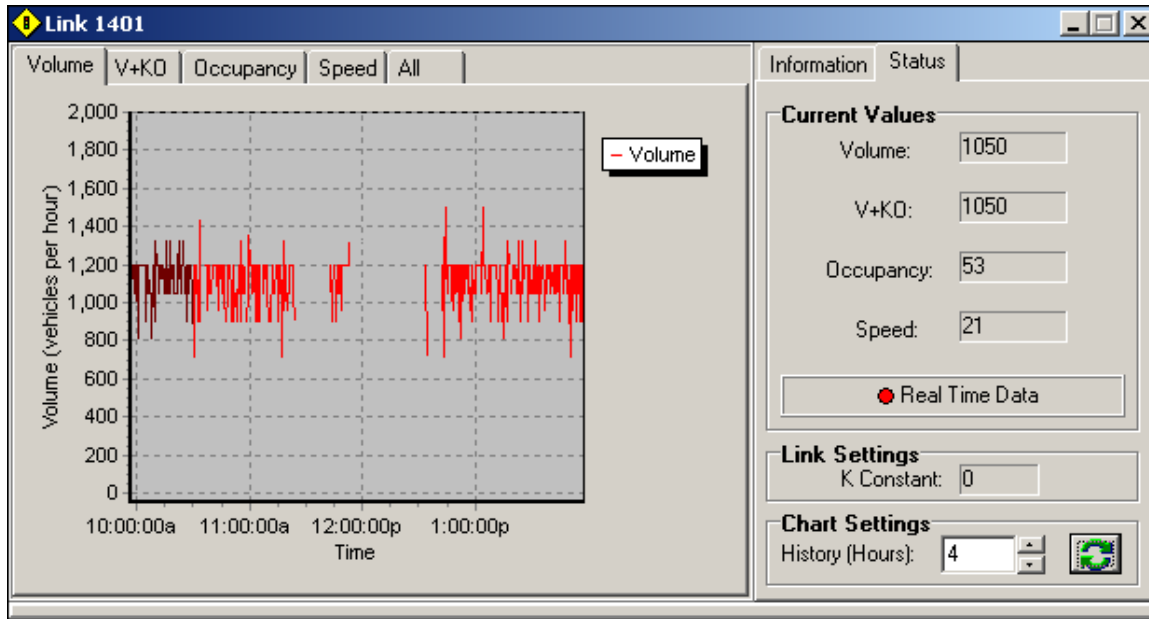


Figure 8-6: Link Volume Plot

### Left Panel – V+KO

Selecting the *V+KO* tab displays a plot of the link volume plus a constant multiplied by the link occupancy, as shown in Figure 8-7.

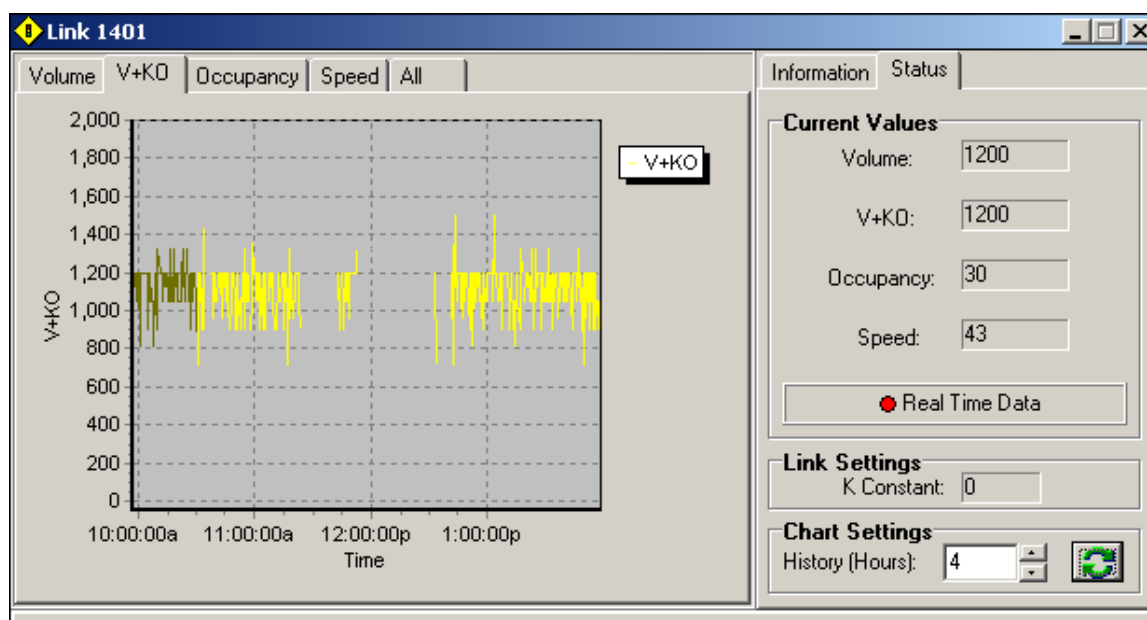


Figure 8-7: Link V+KO Plot

### Left Panel - Occupancy

Selecting the *Occupancy* tab displays a plot of the link occupancy, as shown in Figure 8-8.

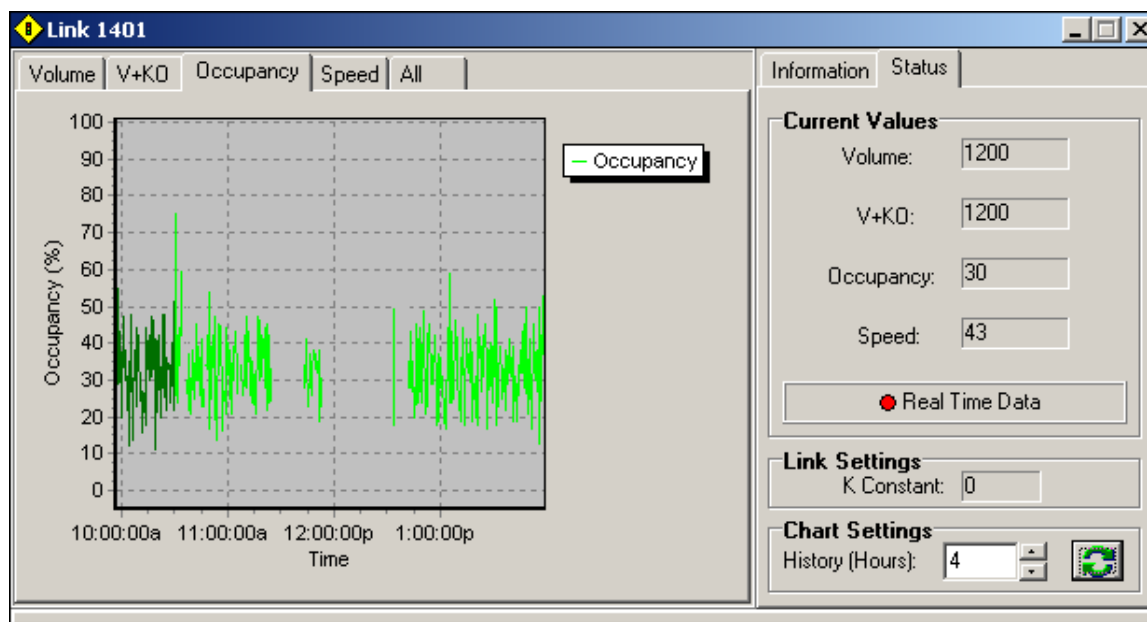


Figure 8-8: Link Occupancy Plot

### Left Panel - Speed

Selecting the *Speed* tab displays a plot of the link speed, as shown in Figure 8-9.

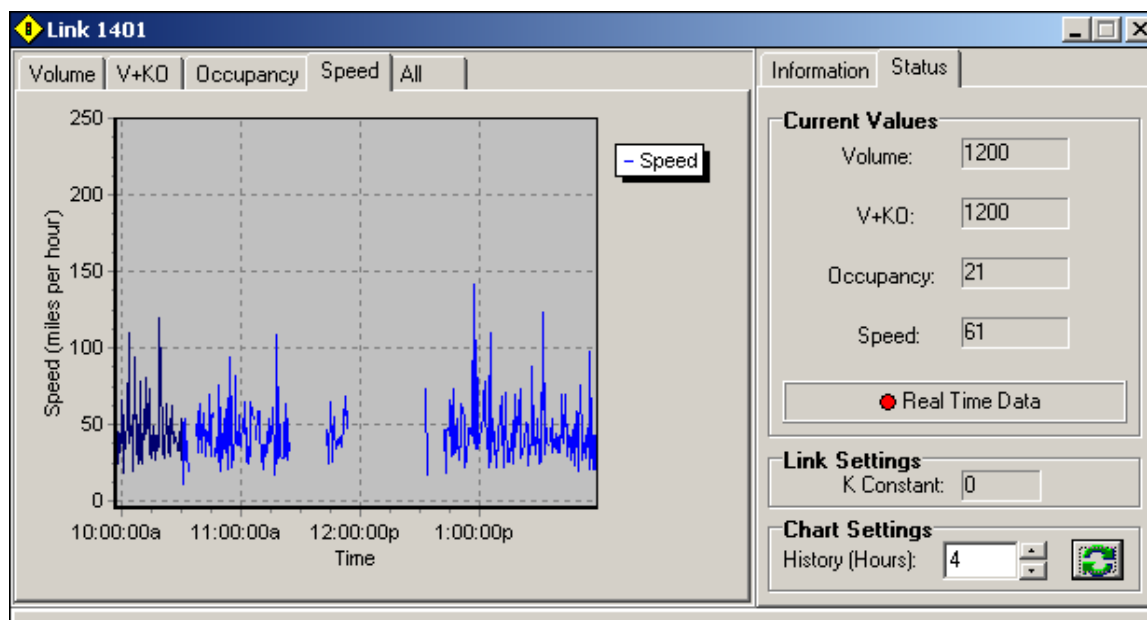


Figure 8-9: Link Speed Plot

### Left Panel - All

The default tab is *All*, which shows plots of volume, V+KO, occupancy, and speed. These plots are all contained within one chart and are displayed in a single scale. This is shown in Figure 8-10.

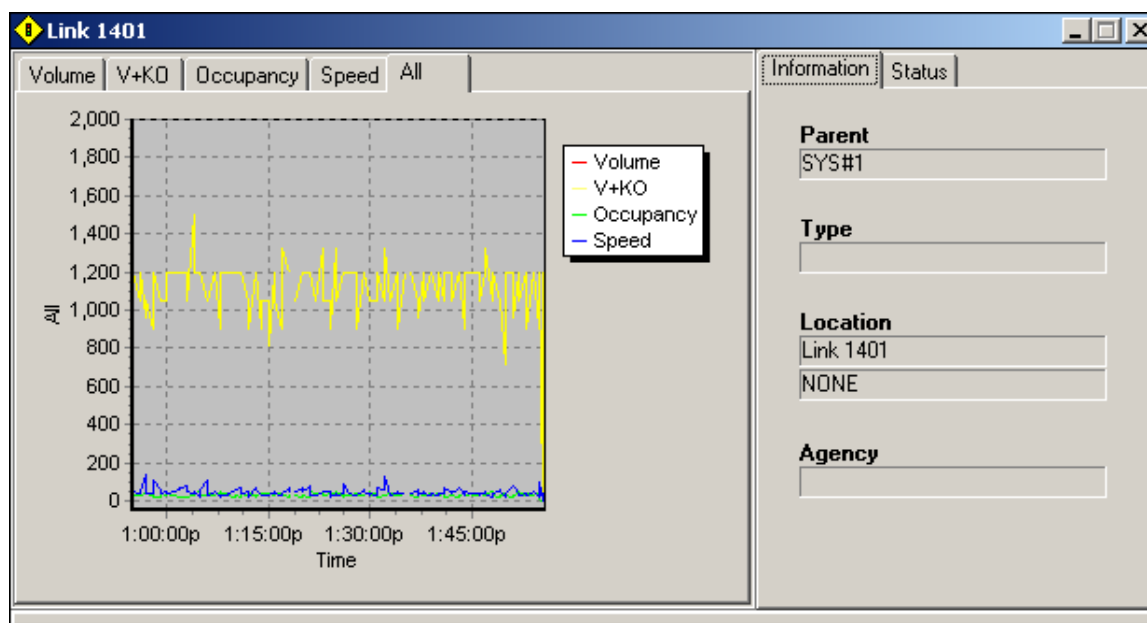


Figure 8-10: Link Information Display Screen

### Right Panel – Information

The information tab provides identifying information about the link. This includes the primary and secondary name of the link, as well as its parent in the object tree. An example is shown in Figure 8-10. This information may be modified using the System Configuration Editor (Section 4).

*Note: The “Type” and “Agency” fields are not currently used.*

## Right Panel – Status

The following is a description of various parameters in the Status window, as shown in Figure 8-11:

### Current Values

Fields containing volume, occupancy, speed, and V+KO are found here, and automatically update as new data is received. There is a flashing “Real Time Data” indicator below these fields, which signifies that the data is being updated.

*Note: The dialog will always be updating unless the link is unrecognized or the system stops processing detector data for any reason.*

### Link Settings

K Constant: the link’s configured “K” constant, which is used in V+KO calculations. As defined in the Link Configuration (figure 8-4).

### Chart Settings

History (Hours): current history timeframe being shown on the graph. Changing the history value and pressing the apply button will cause the graph to refresh to the newly specified history. This setting defaults to one hour.

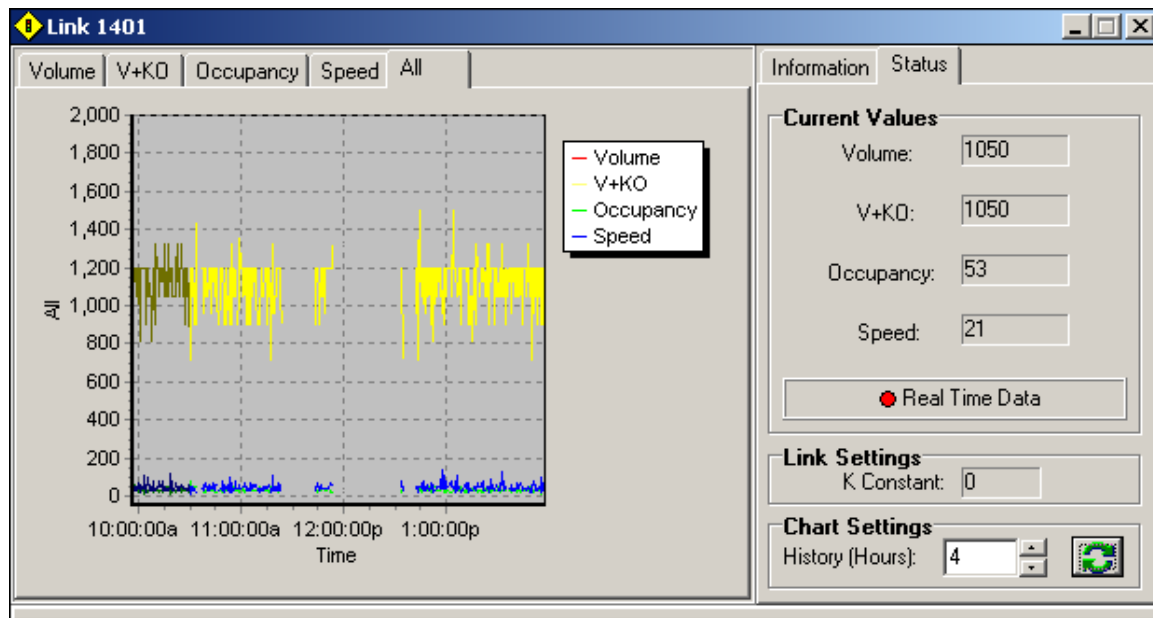


Figure 8-11: Link Status Display Screen

## SECTION 9 - SPLIT MONITOR

The Split Monitoring tool supports analysis of phase utilization for individual signals by allowing the user to display split data over specified time intervals. The tool uses phase data transition information, stored in the *icons*<sup>TM</sup> database for the selected controller, to calculate the actual split usage. The split data may be used to adjust signal timings to improve signal operational performance.

### SETUP AND CONFIGURATION

To utilize the split monitor, the following must first be completed:

1. Signals must be defined in the System Configuration Editor (Section 4).
2. Use the Database Editor to upload the timing database from the controller into *icons*<sup>TM</sup> (Section 12).
3. Check the Icons.ini file for the following settings: [SuperUser] Enabled = 1, [PlugIn] Analysis = Analysis 1. (See the *icons*<sup>TM</sup> System Administration Manual)
4. Configure the ITMS Event Logger service to collect phase data for the selected controller (See the *icons*<sup>TM</sup> System Administration Manual). The following Signal Phase Data Table information needs to be collected: Pattern Changes and Updates, Local Zero, Phase and Overlap interval changes, Preemption, and Communication Ceased and Commenced. The Event Log Monitor determines how the Signal Phase Data is recorded and archived (See the System Configuration Editor Event Log Monitor Configuration – Section 4).

The maximum accepted phase times for green, yellow and red are 120 seconds, 8 seconds, and 5 seconds, respectively. The maximum accepted cycle time is 255 seconds. Times of greater length will be ignored. The user will be warned if times are filtered unless the system is in Automatic Refresh Mode.

A minimum screen resolution of 800x600 is required.

---

*Note: The split monitor is limited to displaying information for standard ring/phase configurations. Ring1: P1-4, Ring2: P5-8. The Split Monitor is not able to generate true split length data using the AB3418 protocol since this protocol is only capable of returning actual green interval or absence of green. It is not able to communicate the independent amber and red intervals. Other protocols such as AB3418E and NTCIP do not have these limitations.*

*Note: In the event that an intersection remains in the same pattern until the last PATTERN\_CHANGED record is trimmed from the Event Log, launching Split Monitor will produce the error message "Pattern not found. Programmed data will not be displayed." Restarting the ITMS Relay service, or changing plans in the controller, will generate the needed event to avoid this message.*

---

### MONITORING/ANALYSIS

Selecting the **Analysis | Split Monitor** menu item generates the Split Monitor tool as shown in Figure 9-1. A bar graph is drawn for each phase comparing the programmed phase splits with the average actual phase split times.

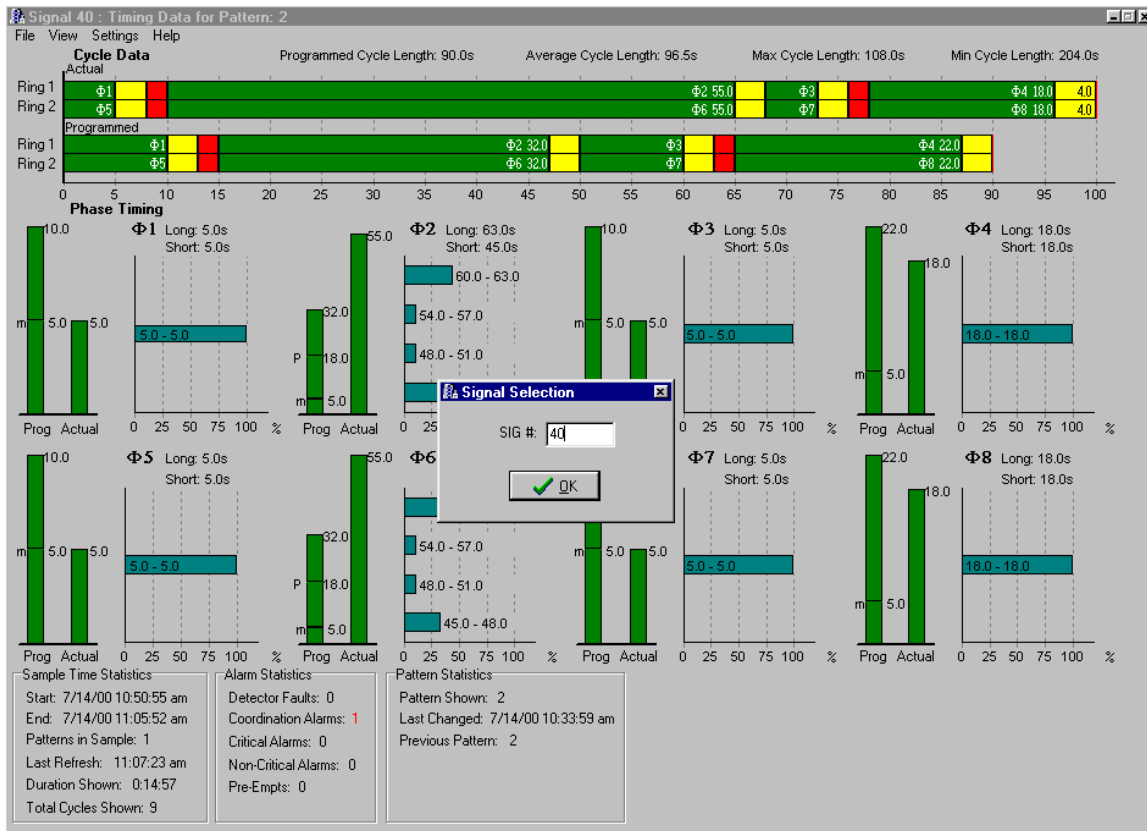


Figure 9-1: Split Monitor

The menu bar includes the following submenu items:

- ☐ File
- ☐ View
- ☐ Settings
- ☐ Help

A drop down menu for any of these menu items can be selected by left clicking its menu title. A detailed discussion of the contents of each of these menu items is contained in the following section.

## The File Menu

The file menu is used to load a new signal for analysis. The **Load Signal** command allows data to be viewed for a different controller.

## The View Menu

The view menu is used to modify the view and display contents of the Split Monitor tool. Different views are used to support the analysis of different aspects of the signal timing operation. The View Menu contains the following choices:

- ☐ Default View
- ☐ Set Defaults...
- ☐ Statistics
- ☐ Values



- ❑ Histograms
- ❑ Cycle Timings
- ❑ Phase Timings

The **Default View** command refreshes the screen to reflect the selections in the display settings defaults.

The **Set Defaults...** command sets the defaults for histogram points, phase view, cycle view, and values. When selected, the dialog box shown in Figure 9-2 will appear:

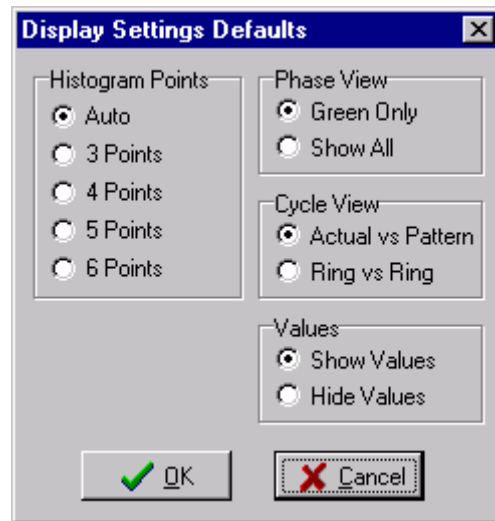


Figure 9-2: Changing Default Settings

The **Statistics** command displays or hides Sample Time, Alarm, and Pattern Statistics.

The **Values** command displays or hides values on the bar graphs.

The **Histograms** command allows access to the following choices: **Auto**, **3 Points**, **4 Points**, **5 Points**, and **6 Points**. These selections determine the number of bars used by the Split Monitor to represent phase duration ranges. Where the **Auto** command determines this automatically, the other commands force the respective number of bars to be displayed.

The **Cycle Timings** command allows access to the following choices: **Actual vs Pattern** and **Ring vs Ring**. The **Actual vs Pattern** command displays actual and programmed cycle data for each ring. The **Ring vs Ring** command displays actual cycle data for each ring and programmed cycle data for each ring.

The **Phase Timings** command allows access to the following choices: **Green Only**, **Show All**, and **Constant Scale**. The **Green Only** command displays programmed and actual average phase timings for only the green state. The **Show All** command displays programmed and actual average phase timings for green, yellow, and red states. The **Constant Scale** command establishes a scale for the programmed and actual average phase timings for all phases that is based on the maximum value of the group.

## The Settings Menu


The settings menu contains the following choices:

- ☐ Refresh Now
- ☐ Sample Time...
- ☐ Refresh Rate...
- ☐ Filters...

These menu items can be selected by left clicking on the menu item title. A description of each menu item is provided below.

The **Refresh Now** command updates the split usage information. This feature is disabled if a 'User Specified' sample time setting has been specified.

The **Sample Time...** command allows the user to select the time period that is analyzed to produce the split usage information. When selected, the dialog box shown in Figure 9-3 will appear:

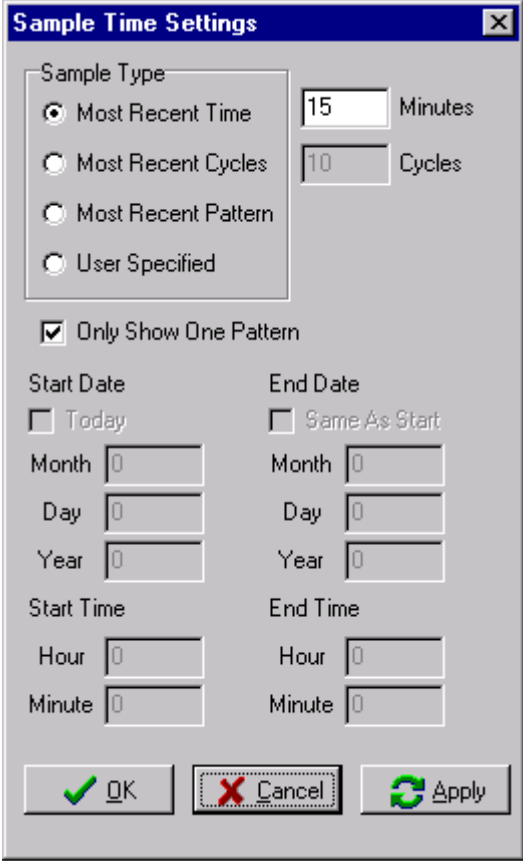

The 'Sample Time Settings' dialog box contains the following elements:

- Sample Type** section with four radio buttons:
  - ☒ Most Recent Time (with a text box containing '15' and the label 'Minutes')
  - ☐ Most Recent Cycles (with a text box containing '10' and the label 'Cycles')
  - ☐ Most Recent Pattern
  - ☐ User Specified
- ☒ Only Show One Pattern
- Start Date** section with:
  - ☐ Today
  - Month, Day, and Year dropdown menus.
- End Date** section with:
  - ☐ Same As Start
  - Month, Day, and Year dropdown menus.
- Start Time** section with:
  - Hour and Minute dropdown menus.
- End Time** section with:
  - Hour and Minute dropdown menus.
- Buttons at the bottom:  OK,  Cancel, and  Apply.

Figure 9-3: Sample Time Settings

The following is a description of the various Sample Time Settings parameters:

### Most Recent Time

Utilizes data from the most recent X minutes. This must be greater than 2 minutes.

### Most Recent Cycles

Utilizes data from the most recent X cycles. This must be between 2 and 1500.

#### **Most Recent Pattern**

Utilizes data from the most recent pattern.

#### **User Specified**

Utilizes data from a time period starting on a specific month / day / year / hour / minute and ending on a specific month / day / year / hour / minute. This time period must not exceed 5 days.

#### **Today**

With this box checked the month / day / year fields below are filled in for the start date with today's date.

#### **Same As Start**


With this box checked the month / day / year fields below are filled in for the end date with today's date.

#### **Only Show One Pattern**

If this box is checked and multiple patterns are found, the single most often occurring pattern and the corresponding data is reported. If this box is unchecked and multiple patterns are found, all patterns are reported, programmed data is not shown and the user is warned.

The **Refresh Rate...** command allows updating of the split usage information based on a user-defined time interval

When selected, the dialog box shown in Figure 9-4 will appear:

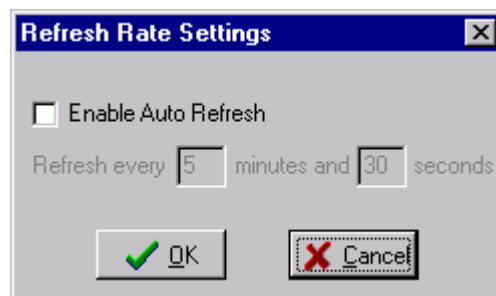

*Figure 9-4: Refresh Rate Settings*

By clicking on the 'Enable Auto Refresh' check-box and specifying an interval, *icons™* will automatically update the split usage information accordingly. When this is selected, all user warnings are disabled. This prevents a possible accumulation of warning windows should the system be left for automatic display.

The **Filters...** command allows user to specify if transitions and/or preemption is filtered out of data. When selected, the dialog box shown in Figure 9-5 will appear:

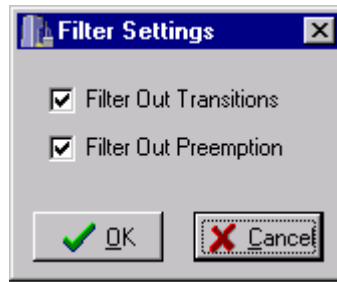


Figure 9-5: Filter Settings

By clicking on the appropriate check-box(es), *icons*<sup>TM</sup> will automatically filter and display the data accordingly.

### The Help Menu

The Help menu contains information on the Legend used for displaying timing data. The **Legend** command displays the legend for the timing data. When selected, the dialog box shown in Figure 9-6 will appear:



Figure 9-6: Split Monitor Legend

## SECTION 10 - TIME SPACE DIAGRAM

The Time Space Diagram is a tool to analyze progression and coordination along a defined route. It displays progression color bands from multiple intersections in coordinated operation allowing an operator to verify the level of optimization based on various parameters. The tool uses phase data transition information stored in the *icons*<sup>TM</sup> database for the selected controllers to generate the display.


### SETUP AND CONFIGURATION

To take advantage of the time/space feature, the following must first be completed:

1. Signals must be defined in the System Configuration Editor (Section 4).
2. Use the Database Editor to upload the timing database from the controller into *icons*<sup>TM</sup> (Section 12).
3. Open the time/space diagram window by selecting **Analysis | Time/Space Diagram**.
4. Enter a new route, or open a previously-created one.
5. Add new locations as desired.
6. Configure the ITMS Event Logger service to collect phase data for the selected controller (See the *icons*<sup>TM</sup> System Administration Manual). The Event Log Monitor determines how the Signal Phase Data is recorded and archived (See the System Configuration Editor Event Log Monitor Configuration – Section 4).

### MONITORING/ANALYSIS

The **Analysis | Time/Space Diagram** menu selection activates the Time/Space Diagram. The user can then define and display a time-space diagram, an example of which is shown in Figure 10-1. The name of the displayed route is shown in the title bar at the top of the window. The diagram is divided into three regions. The left region shows a list view of the names of signalized intersections on the selected route. The right region shows the resulting time space diagram, including progression bands between intersections. Time is represented horizontally, while the distance between intersections is represented vertically. Each pair of horizontal bars represents an intersection and shows the red, yellow, and green time for selected phases for that intersection. The gray diagonal bands show the estimated vehicle progression between intersections based on distance between intersections and average posted speed along the route. The coordination offset for the selected signal is displayed on the bottom of the screen. The user can click and drag the horizontal bars to change offsets. A button bar with frequently used commands is visible so that the user can quickly add and remove locations, zoom in and out, change the operation mode, and change which display bands are visible. A status bar at the bottom displays “Long” hint information when the user places the mouse pointer over an item or location. Locations can be reordered by dragging the location within the location list.

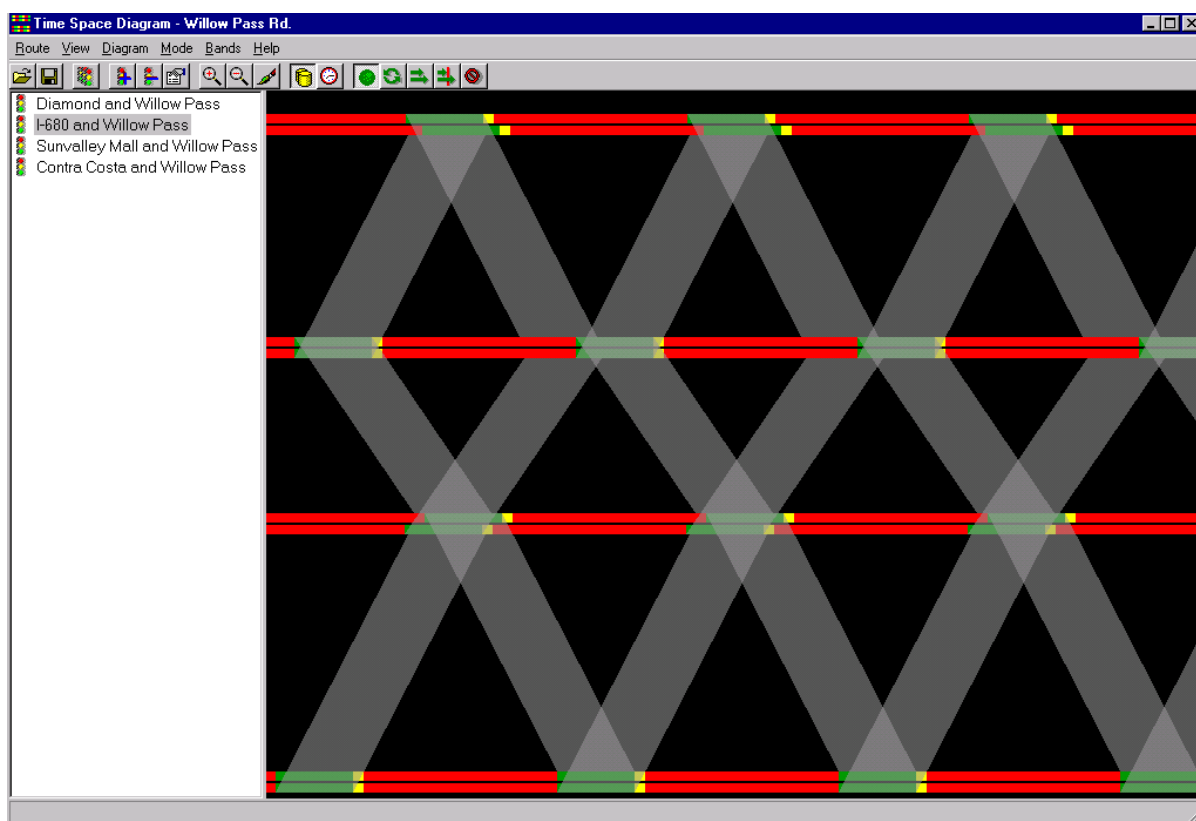

*Figure 10-1: Time/Space Diagram*

The menu bar includes the following submenu items:

- ☐ Route
- ☐ View
- ☐ Diagram
- ☐ Mode
- ☐ Bands
- ☐ Help

A drop down menu for any of these menu items can be selected by left clicking its menu title. A detailed discussion of the contents of each of these menu items is contained in the following section.


### **The Route Menu**

The route menu contains the following choices:

- ☐ New
- ☐ Open
- ☐ Save
- ☐ Save As
- ☐ Close
- ☐ Location
- ☐ Exit

This menu items can be selected by left clicking on the menu item title. A description of these menu items is contained below.


The **New** command allows a new route to be created. When selected, the dialog box shown in Figure 10-2 will appear:

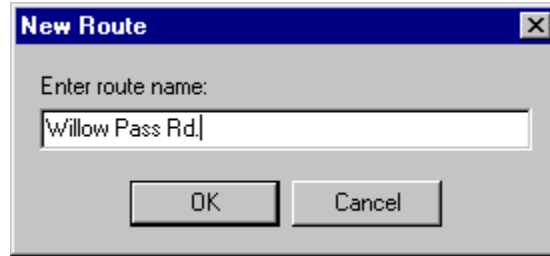

The 'New Route' dialog box has a title bar with a close button. It contains a label 'Enter route name:' followed by a text input field containing 'Willow Pass Rd.'. At the bottom are 'OK' and 'Cancel' buttons.

*Figure 10-2: Creating a New Route*

Once completed, the Location Properties Editor window shown in Figure 10-3 will appear, allowing the first location to be entered.

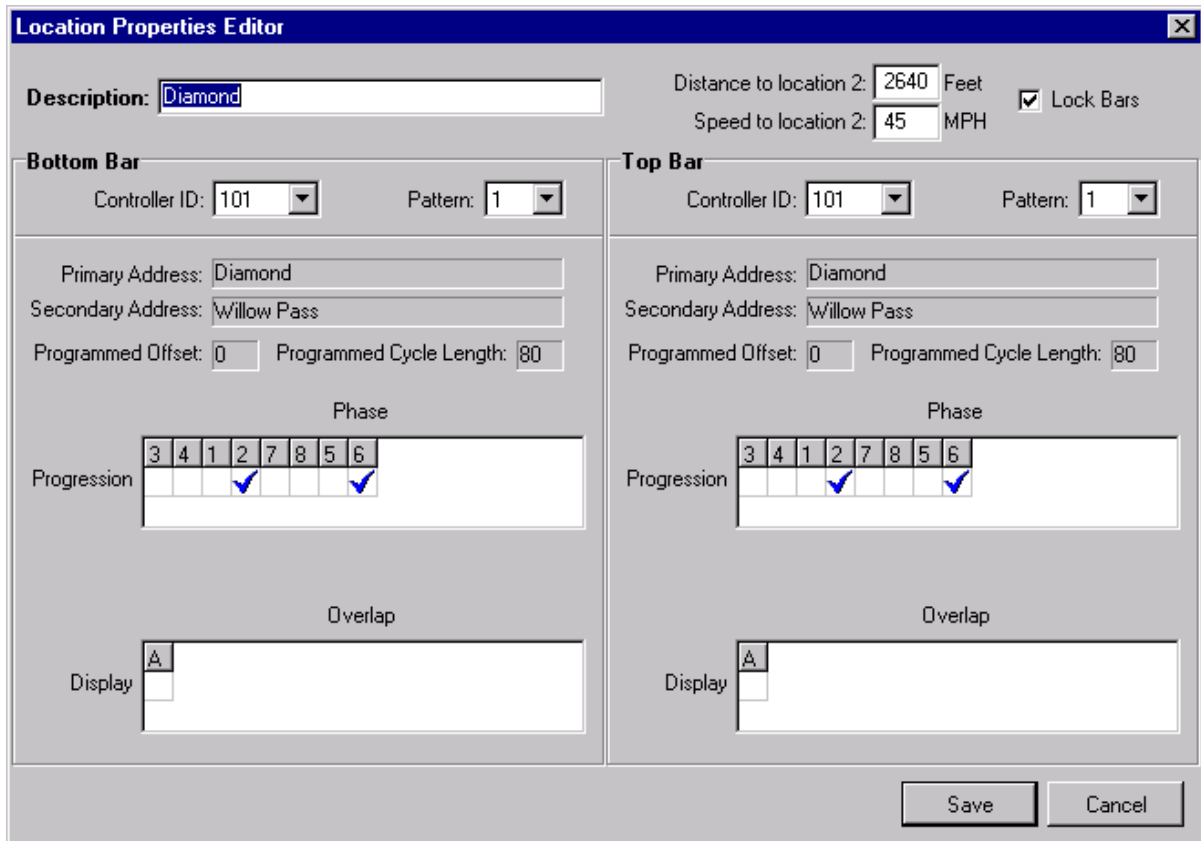

The 'Location Properties Editor' window is divided into two main sections: 'Bottom Bar' and 'Top Bar'. Both sections have identical controls.

**Bottom Bar:**

- Description:** Text field containing 'Diamond'.
- Distance to location 2:** Text field containing '2640' with a unit dropdown set to 'Feet'.
- Speed to location 2:** Text field containing '45' with a unit dropdown set to 'MPH'.
- Lock Bars:** A checked checkbox.
- Controller ID:** Dropdown menu set to '101'.
- Pattern:** Dropdown menu set to '1'.
- Primary Address:** Text field containing 'Diamond'.
- Secondary Address:** Text field containing 'Willow Pass'.
- Programmed Offset:** Text field containing '0'.
- Programmed Cycle Length:** Text field containing '80'.
- Phase Progression:** A sequence of boxes containing the numbers 3, 4, 1, 2, 7, 8, 5, 6. Below these, a 'Progression' row has checkboxes, with the ones under '2' and '6' checked.
- Overlap:** A text field containing 'A'.
- Display:** A small square checkbox.

**Top Bar:** Identical to the Bottom Bar.

At the bottom right of the window are 'Save' and 'Cancel' buttons.

*Figure 10-3: Location Properties Editor*

The following describes the various parameters in the Location Properties Editor:

**Description**

Name of location

**Distance to location 2**

Distance to the next signal

**Speed to location 2**

Estimated speed of traffic between signals

**Lock Bars**

Prevents movement between upper and lower bars when the offset is adjusted for that location

**Bottom Bar****Controller ID**

ID of controller for that location (list of ASC/2 controllers that have been configured)

**Pattern**

Pattern being run at that location (list of available patterns for that controller)


**Top Bar****Controller ID**

ID of controller for that location

**Pattern**

Pattern being run at that location

The **Open** command gives the user a list of existing routes. When selected, the dialog box shown in Figure 10-4 will appear:

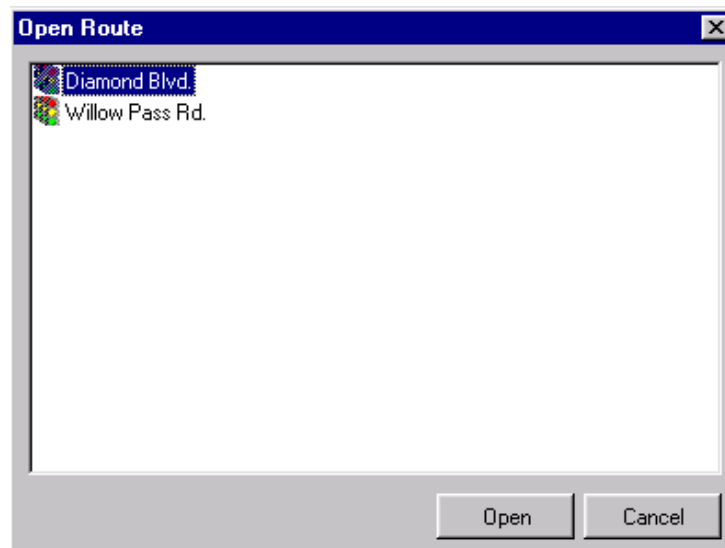

*Figure 10-4: Open Route*

Routes can be removed and renamed by right clicking on the route and selecting the appropriate menu item.



The **Save** command saves the currently-open route.

The **Save As** command saves the currently open route with a new name.

The **Close** command closes the currently open route.

The **Location** command allows access to three choices: **Add**, **Delete**, and **Properties**. The **Add** command adds a location (signal) to the currently open route. The **Delete** command deletes the highlighted location from the currently open route. The **Properties** command opens the Location Properties Editor for the highlighted location in the currently open route.

The **Exit** command closes the time/space diagram window.

## The View Menu

The view menu contains the following choices:

- ☐ 2-D
- ☐ OpenGL 2-D
- ☐ OpenGL 3-D
- ☐ Restore
- ☐ In
- ☐ Out
- ☐ Toolbar
- ☐ Locations
- ☐ Status Bar
- ☐ Mouse-Over Hints

These menu items can be selected by left clicking on the menu item title. A description of these menu items is contained in the following sections.

The **2-D** command displays the diagram in standard two-dimensional format.

The **OpenGL 2-D** command displays the diagram in enhanced two-dimensional format using the OpenGL API.

The **OpenGL 3-D** command displays the diagram in enhanced three-dimensional format using the OpenGL API.

The **Restore** command restores the offsets to programmed values if they have been changed manually by clicking and sliding the bars.

The **In** command zooms in, displaying the diagram in more detail.

The **Out** command zooms out, displaying the diagram in less detail.

The **Toolbar** command shows or hides toolbar.

The **Locations** command shows or hides the locations panel.

The **Status Bar** command shows or hides the bottom status bar.

The **Mouse-Over Hints** command shows or hides hints when the mouse is placed over an object.

## The Diagram Menu

The diagram menu contains the following choices:

- ☐ Time Space
- ☐ Time Location Top Bar
- ☐ Time Location Bottom Bar

These menu items can be selected by left clicking on the menu item title. A description of these menu items is contained in the following sections.

The **Time Space** command draws a normal time/space diagram.

The **Time Location Top Bar** command draws a time-location diagram for the down direction.

The **Time Location Bottom Bar** command draws a time-location diagram for the up direction.

---

*Note: A time-location diagram collapses the distance axis so all signal bars for one direction are adjacent to each other. A time-location diagram allows a large number of signals to be viewed on the screen at once.*

---

## The Mode Menu

The mode menu contains the following choices:

- ☐ Programmed
- ☐ Real Time

These menu items can be selected by left clicking on the menu item title. A description of these menu items is contained in the following sections.

The **Programmed** command displays the diagram based on coordination plan data.

The **Real Time** command displays the diagram based on real-time data being received from the signal, including early phase termination due to gap out.

## The Bands Menu

The bands menu contains the following choices:

- ☐ All Greens
- ☐ Continuation
- ☐ Progression
- ☐ Reduced Progression
- ☐ None

These menu items can be selected by left clicking on the menu item title. A description of these menu items is contained in the following sections.

The **All Greens** command draws an intersection-to-intersection band emanating from the full width of green time, regardless of the color of the reset signal.

The **Continuation** command draws an intersection-to-intersection band with width constrained to the portion for which both the departure and arrival signal is green.

---

*Note: Often no band can be drawn between two signals in this mode (width=zero).*

---

The **Progression** command draws a band between the first two intersections, the same as in continuation mode, but then constrains subsequent continuation bands to that portion which overlaps with the prior intersection-to-intersection band.

---

*Note: Bands may not be able to be drawn beyond some intersections (including the first intersection) in this mode.*

---

The **Reduced Progression** command draws a route band of constant width equal to the width of a band that can pass through greens at all signals. This width corresponds to the narrowest band in that direction in progression mode.

---

*Note: Often no band can be drawn in this mode (width=zero).*

---

The **None** command removes all bands from view.

## The Help Menu

The help menu contains the **About** command, which displays version information for the Time/Space Diagram.

## SECTION 11 - ALARMS AND PAGING

By monitoring the Event Channel for predefined conditions (triggers), the ITMS AlarmAct service generates alarm events and broadcasts them back to the Event Channel. **icons™** has the ability to recognize these alarms and send a page or heads up message to an individual, or group, announcing the event. **icons™** also has a manual paging feature, which allows pages to be sent independently of alarm events.


### SETUP AND CONFIGURATION

The alarming and paging operation requires that the ITMS AlarmAct service is properly initialized and running on the **icons™** server (See the **icons™** System Administration Manual). A valid paging number, modem and phone line is required for paging operation. For alarming or heads-up operation only, the default parameters in the AlarmAct Initialization file are adequate.

Prior to using the paging or alarming features, individuals and user groups need to be defined.

#### Individual Information

This area contains all of the contact information for the individuals to be notified of an alarm event. To identify the user(s) to be contacted, select the **Setup | Alarms and Paging | Individual Info** menu item. The Alarm Individuals configuration screen is displayed as shown in Figure 11-1.

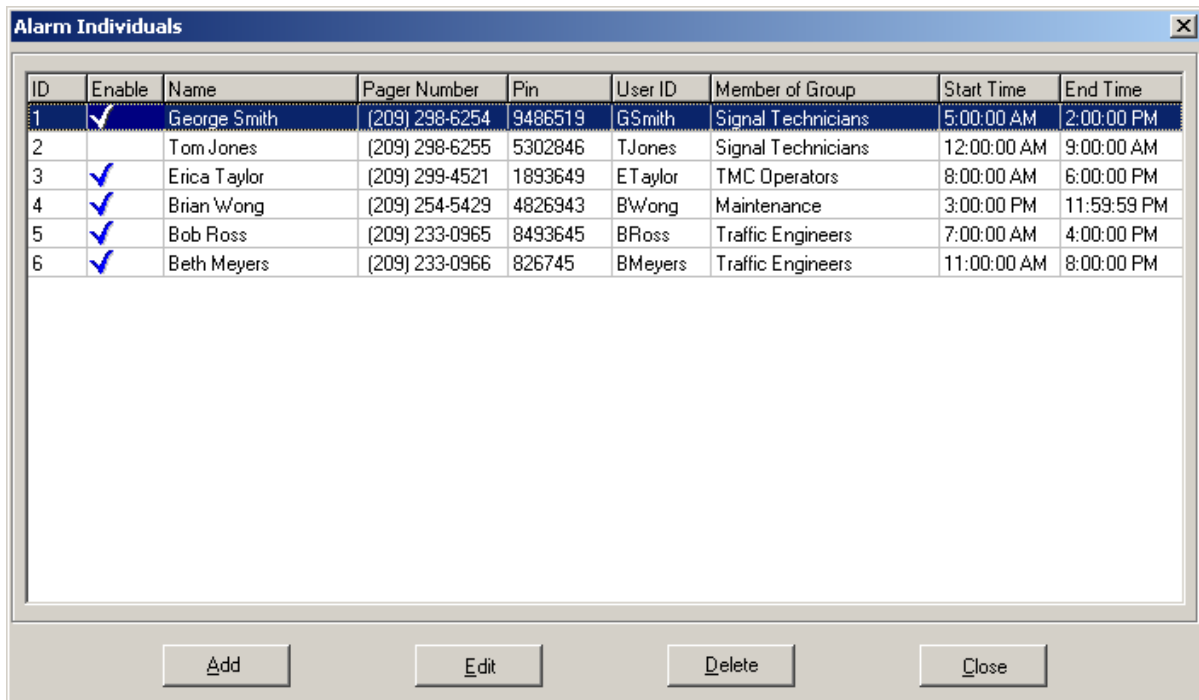

ID	Enable	Name	Pager Number	Pin	User ID	Member of Group	Start Time	End Time
1	<input checked="" type="checkbox"/>	George Smith	(209) 298-6254	9486519	GSmith	Signal Technicians	5:00:00 AM	2:00:00 PM
2	<input type="checkbox"/>	Tom Jones	(209) 298-6255	5302846	TJones	Signal Technicians	12:00:00 AM	9:00:00 AM
3	<input checked="" type="checkbox"/>	Erica Taylor	(209) 299-4521	1893649	ETaylor	TMC Operators	8:00:00 AM	6:00:00 PM
4	<input checked="" type="checkbox"/>	Brian Wong	(209) 254-5429	4826943	BWong	Maintenance	3:00:00 PM	11:59:59 PM
5	<input checked="" type="checkbox"/>	Bob Ross	(209) 233-0965	8493645	BRoss	Traffic Engineers	7:00:00 AM	4:00:00 PM
6	<input checked="" type="checkbox"/>	Beth Meyers	(209) 233-0966	826745	BMeyers	Traffic Engineers	11:00:00 AM	8:00:00 PM

Figure 11-1: Individual Configuration

Use the **Add**, **Edit** or **Delete** buttons to modify the current list of individuals. Selecting the **Add** or **Edit** button displays a dialog box as shown in Figure 11-2, and allows the user to modify individual information.

The screenshot shows a Windows-style dialog box titled "Edit Individual". It is divided into three main sections. The first section, "Individual Information", contains three fields: "Name" with the text "George Smith", "User ID" with a dropdown menu showing "GSmith", and "Group" with a dropdown menu showing "Signal Technicians". The second section, "Availability", contains two time fields: "Start Time" set to "5:00:00 AM" and "End Time" set to "2:00:00 PM", along with a checked checkbox labeled "Enabled". The third section, "Contact Information", contains two fields: "Pager Number" with the text "(209)298-6254" and "Pager Pin" with the text "9486519". At the bottom of the dialog are two buttons: "OK" with a green checkmark icon and "Cancel" with a red X icon.

Figure 11-2: Adding or Editing Individual Information

A separate profile is required for each individual. The following is a description of each data entry field in the display. All data fields must be completed:

**Name**

Name of individual to be contacted. This name has no relation to any other *icons*<sup>TM</sup> security profile information.

**User ID**

User ID of the individual. This is a drop-down list of existing *icons*<sup>TM</sup> User IDs (See Security Section). The User ID must be unique for each individual and may only be used once.

**Group**

Group that individual belongs to (leave blank if not a member of a group).

**Start Time**

Starting time that individual may be contacted.

**End Time**

Ending time that individual may be contacted.

**Enabled**

Activate notification for individual.

**Pager Number**

Number to dial for pager. A non-valid number may be entered for heads-up alarming operation only.

**Pager Pin**

Pin number for pager. A non-valid number may be entered for heads-up alarming operation only.

When completed, press **OK** to return to the The dialog box shown in Figure 11-2 will be displayed.

## Group Information

Groups are a convenient way of notifying multiple individuals using a single alarm entry and profile. If a group of individuals need to be notified in the case of an alarm event, these groups may be created and defined here. To identify alarm groups select the **Setup | Alarms and Paging | Group Info** menu item. The Alarm Groups configuration screen is displayed as shown in Figure 11-3.

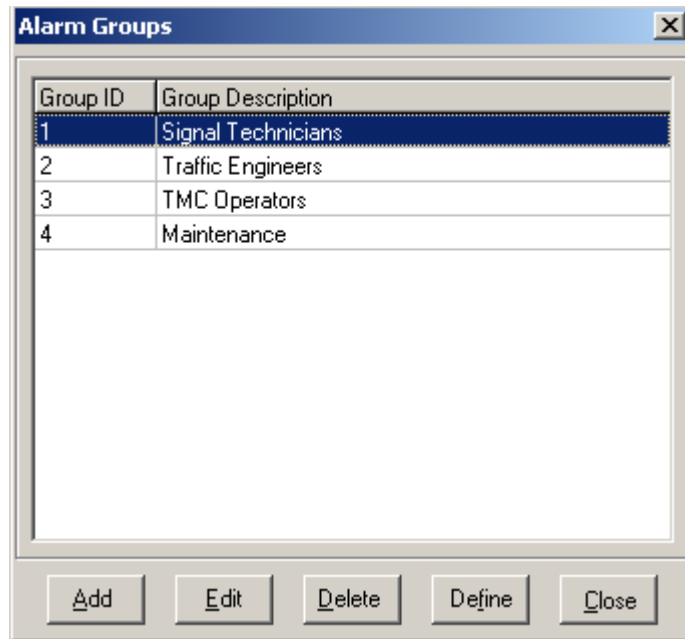


Figure 11-3: Alarm Groups

This screen displays all of the currently defined Groups. Selecting the **Add** or **Edit** button allows the user to modify this list and displays the dialog box as shown in Figure 11-4.

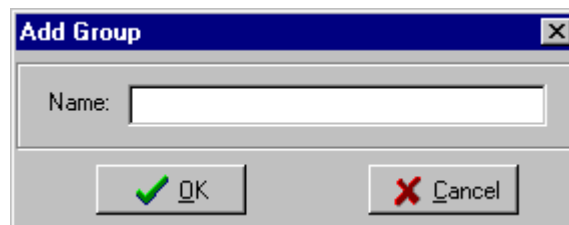


Figure 11-4: Newly Created Alarm Group

The Group ID is automatically generated. Enter a Name to describe the new group and press **OK**. This information will be displayed as the Group Description in the Alarm Groups screen.

Selecting the **Delete** button will permanently remove the highlighted group definition from the list. The **Close** button permanently saves the current configuration. If individuals have been previously created in *icons*<sup>TM</sup>, they can be added or removed from a group using the **Define** button, as shown in Figure 11-5.

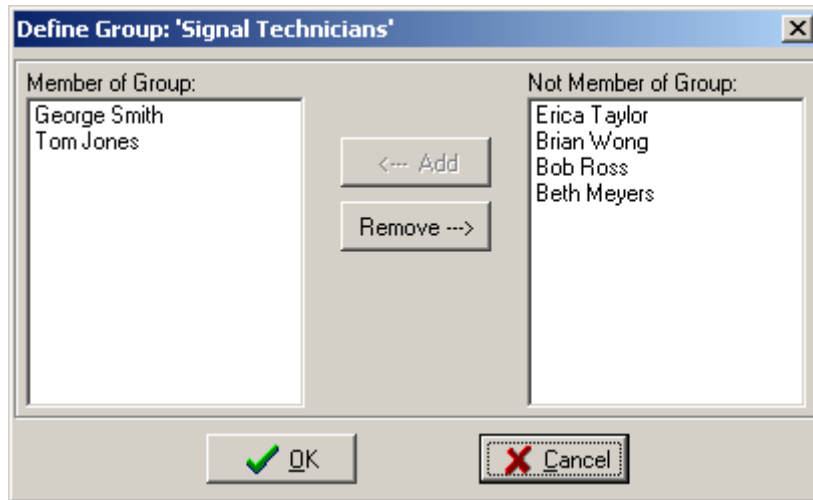


Figure 11-5: Define Group

Each person may only be a member of a single group. The screen is divided into two regions. The right region is a list of individuals already configured for individual alarming operation (see Individual Information above to edit this list). The left region shows the individuals that are a member of the group identified in the banner at the top of the screen. Highlight an individual in the right region and select the **<-- Add** button to add that person as part of the Group. Highlight a member of the Group in the left region and select the **Remove -->** button to remove the individual from the group.

## Alarmable Events

The Alarmable Events Configuration allows the user to define what system events are available to use with the service. To define the alarmable events, select the **Admin | System Configuration** menu item to open the System Configuration Editor (Section 4). Next select the **System Settings | Alarmable Events** menu item from the System Configuration Editor menu bar. The Alarmable Events screen will then appear, as shown in Figure 11-6.

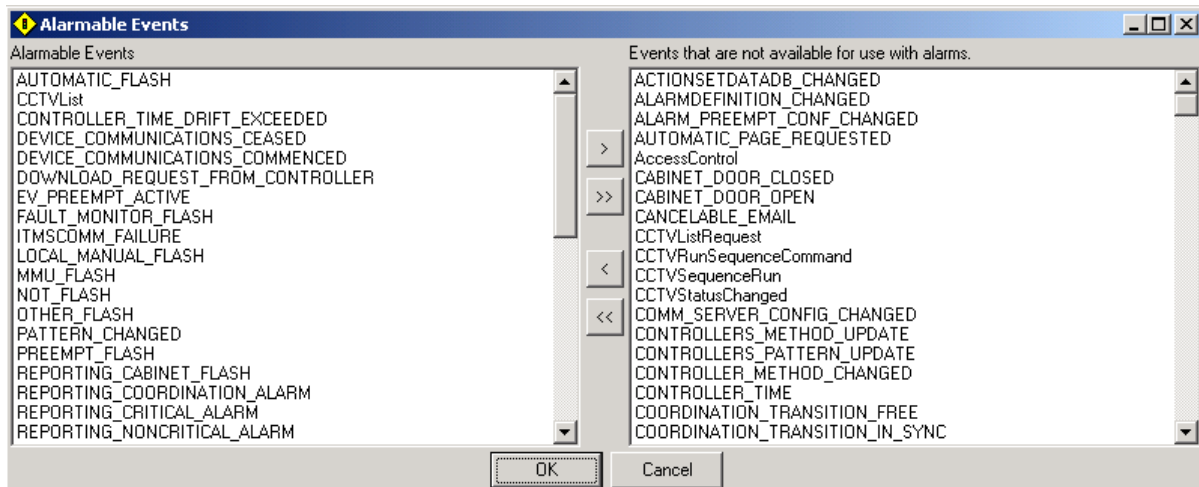


Figure 11-6: Alarmable Events

The left window pane shows all of the events that are available to be used as alarm events in the Alarms and Paging service (Ref Section 11). The > and < buttons moves the selected event to either the active or inactive alarmable event window. The >> and << buttons move the entire contents to either the active or inactive alarmable event window. Select **OK** to permanently save the current configuration and exit.

## Alarm Triggers

Alarm Triggers define the events or conditions that trigger an alarm, the individuals or groups to be notified, and the type of notification. To configure the Alarm Triggers select the **Setup | Alarms and Paging | Alarm Triggers** menu item. The Alarms configuration screen is displayed as shown in Figure 11-6.

Alarm Triggers are grouped into a single table, which includes all of the defined alarm actions. The screen is divided into two regions. The top region allows the user to set filters for viewing alarm actions by entity. The lower region displays all of the defined alarms.

Selecting the **Add** or **Edit** button allows the user to modify the alarm configuration list and displays the dialog box as shown in Figure 11-7. Selecting the **Delete** button will permanently remove the highlighted alarm action from the list. The **Close** button permanently saves the current configuration.

ID	Enable	SYS#	Entity	Description	Event	No.	Interval	Alarm	No.
1	✓	1	SIG#201	Main & 1st	CABINET_DOOR_OPEN	1	0	Pager	+ T
2	✓	1	SYS#1	Anytown	DEVICE_COMMUNICATIONS_CEAUSED	1	0	Heads Up	+ S
4	✓	1	ZON#1	Downtown	UPS_ON_BATTERY_ACTIVE	1	0	Pager	+ T
5	✓	1	SEC#1	State St.	REPORTING_CABINET_FLASH	1	0	Pager	+ h
6	✓	1	SIG#201	Main & 1st	REPORTING_COORDINATION_ALARM	1	0	Heads Up	+ T
7	✓	1	SEC#2	Main St.	REPORTING_CRITICAL_ALARM	1	0	Heads Up	Bo
8	✓	1	SIG#102	State & 2nd	REPORTING_NONCRITICAL_ALARM	1	0	Heads Up	Bri
9	✓	1	SYS#1	Anytown	STOPPED_REPORTING_PREEMPT	1	0	Heads Up	Ge
10	✓	1	SIG#101	State & 1st	DEVICE_COMMUNICATIONS_COMMENCED	1	0	Heads Up	Be
11	✓	1	ZON#1	Downtown	STOPPED_REPORTING_PREEMPT	1	0	Heads Up	Eri

Figure 11-6: Alarms Configuration



If a single event is to notify multiple groups or individuals, a separate alarm event must be created for each individual or group. This is also the case if individuals from different groups need to be notified.

*Figure 11-7: Add or Edit an Alarm Event*

The following is a description of each data entry field in the display. All data fields must be completed:

#### **Entity ID**

This is the entity to be monitored. All defined system objects that may be monitored (SYS, ZON, SEC, SIG) are shown in this drop-down box.

#### **Entity Description**

Displays the Primary Name for the selected entity, as defined in the System Configuration Editor.

#### **System Number**

Number of parent system (SYS#) for this entity, as defined in the System Configuration Editor.

#### **Event**

The Event that will trigger an alarm, selectable through the drop-down box. This list is configurable through the Alarmable Events configuration settings – See Alarmable Events above.

#### **Trigger after ☐ occurrence(s) within ☐ minutes**

Number of occurrences of the trigger event within a time span that will trigger an alarm. These parameters may be used to filter false triggers.

#### **Notify**

The individual or group (signified by a + before the name) to notify when a trigger event occurs. This is a drop-down box of configured individuals and groups.

**Type**

Type of notification to issue in when a trigger event occurs (page or heads up message).

**Enable**

Checking this box enables or activates this alarm. Clearing this box temporarily removes this alarm without needing to delete it altogether.

When completed, press **OK** to save this entry and return to the Alarms screen.

## MANUAL GROUP PAGE

The **Page Group** command allows a group of individuals to be paged on demand and independently of a trigger event. Use the **Alert | Page Group** menu item to activate the Page Group dialog box shown in Figure 11-8. The dialog box lists all currently defined and configured groups in the top region and provides a message area in the lower region to enter a text message. The user can enter a text message that when sent will be received by the group based on the pager properties identified in the setup for that group.

Highlight the desired group, and type a message in the lower Message field. Press the **Send** button to issue the page or the **Close** button to return to the *icons*<sup>TM</sup> desktop. To view information about the individual group members, press the **Properties** button. This will take the user to the Page Group Properties screen shown in Figure 11-9. This is similar to the Individuals Configuration information in Figure 11-1 except that this is a read-only screen.


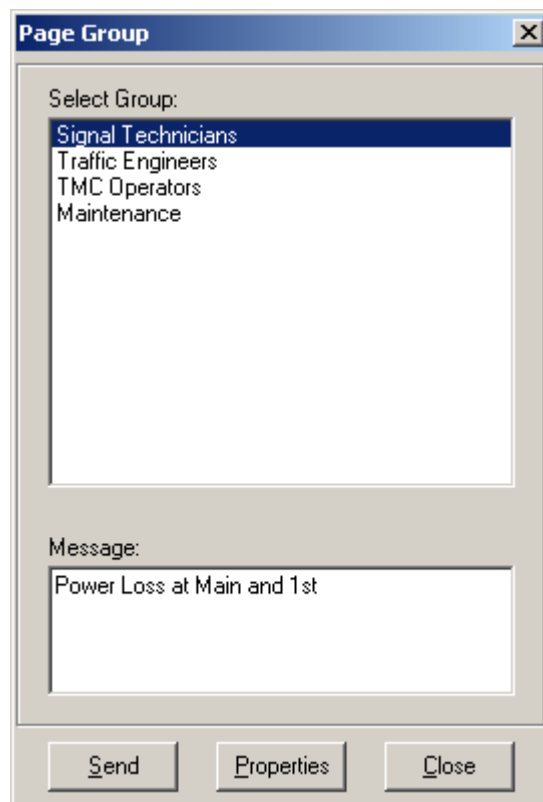


Figure 11-8: Page Group

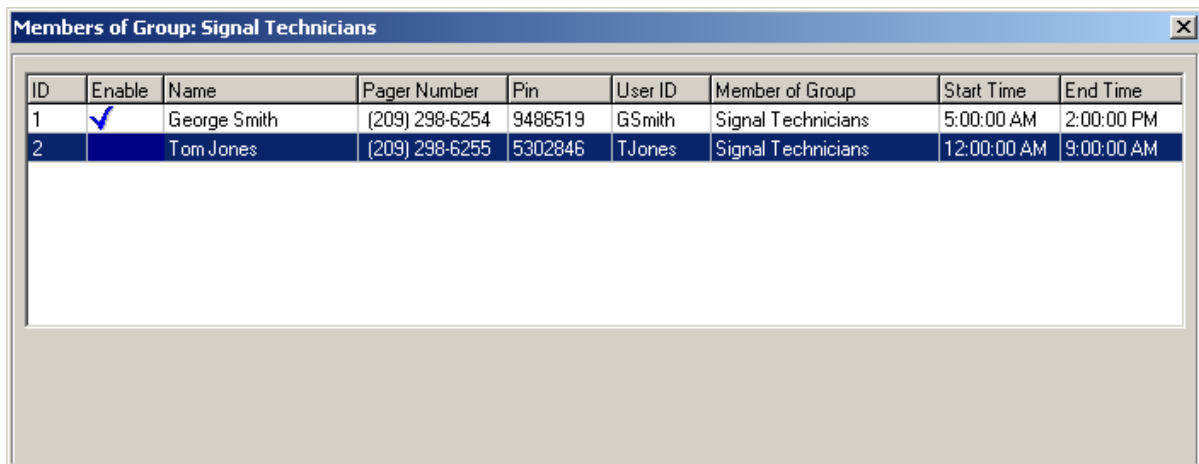


ID	Enable	Name	Pager Number	Pin	User ID	Member of Group	Start Time	End Time
1	<input checked="" type="checkbox"/>	George Smith	(209) 298-6254	9486519	GSmith	Signal Technicians	5:00:00 AM	2:00:00 PM
2	<input type="checkbox"/>	Tom Jones	(209) 298-6255	5302846	TJones	Signal Technicians	12:00:00 AM	9:00:00 AM

Figure 11-9: Page Group Properties

## MANUAL PAGE INDIVIDUAL

The **Page Individual** command allows an individual to be paged on demand and independently of a trigger event. Use the **Alert | Page Individual** menu item to activate the Page Individual dialog box shown in Figure 11-10. The dialog box lists all currently defined and configured individuals in the top region and provides a message area in the lower region to enter a text message. The user can enter a text message that when sent will be received by the individual based on the pager properties identified in the setup for that individual.

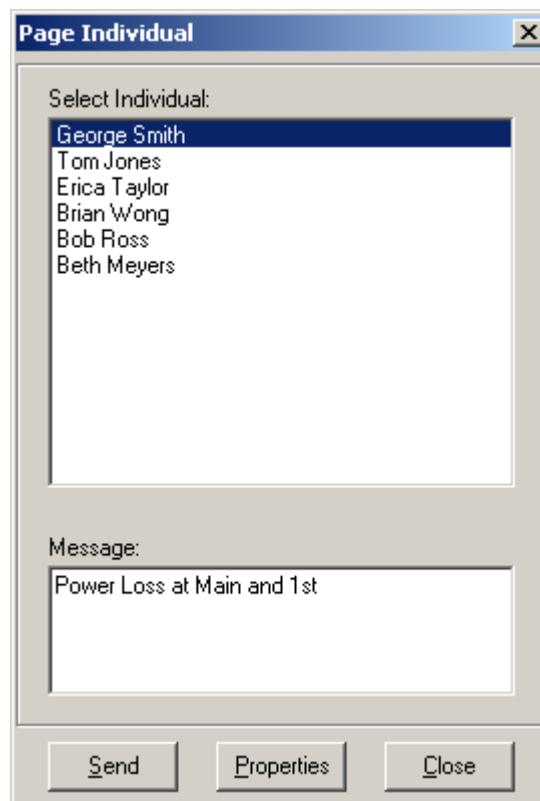

**Page Individual**

Select Individual:

- George Smith
- Tom Jones
- Erica Taylor
- Brian Wong
- Bob Ross
- Beth Meyers


Message:

Power Loss at Main and 1st

Send Properties Close

*Figure 11-10: Page Individual*


Highlight the desired individual, and type a message in the lower Message field. Press the **Send** button to issue the page or the **Close** button to return to the *icons*<sup>TM</sup> desktop. To view information about the individual, press the **Properties** button. This will take the user to the Individual Properties screen shown in Figure 11-11. This is similar to the Individuals Configuration information in Figure 11-1 except that this is a read-only screen.

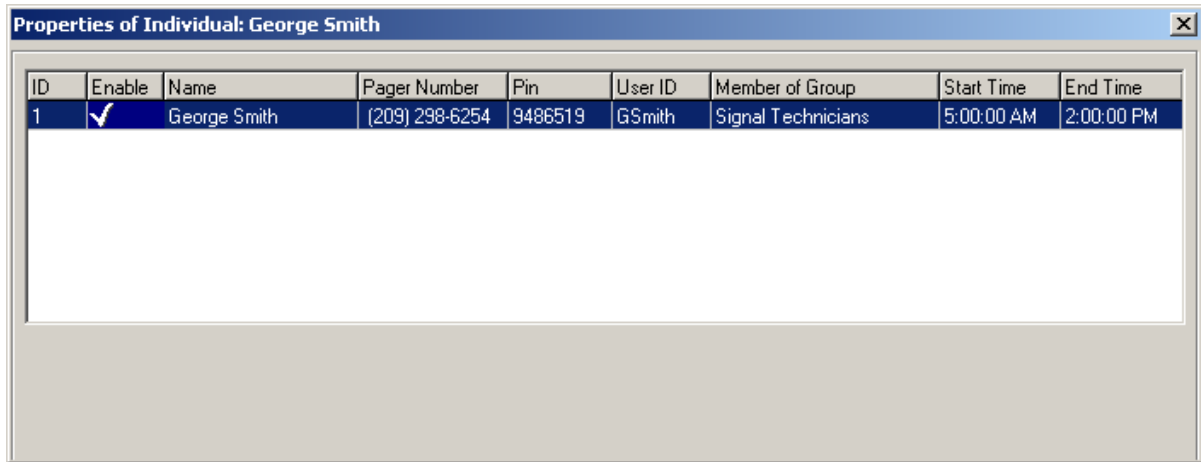*Figure 11-11: Page Individual*

## TRIGGERED EVENTS

### Heads-Up Alarm Notification

When an alarm event occurs, a heads up message is displayed on the *icons*<sup>TM</sup> desktop. The message only appears when and if a user logs in. Events that may have occurred while a user was signed off will appear when the user logs back on. This is shown in Figure 11-12.

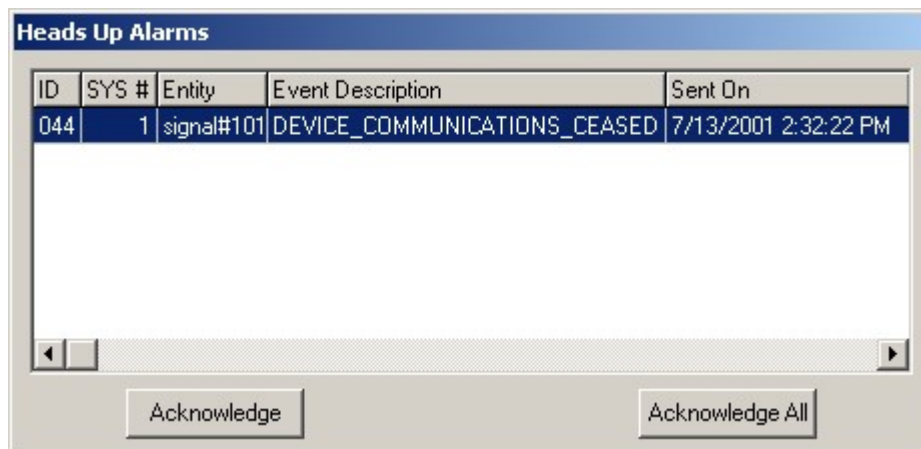*Figure 11-12: Heads Up Message*

Once the alarm event has been received, pressing the **Acknowledge** button will remove it from the window and, if it's the only one being displayed, close the window. Pressing the **Acknowledge All** button will remove all alarm events from the window and close the window.

## Alarm Log

**icons™** also logs the type and nature of each trigger event in addition to displaying the message as a heads up notification on the user desktop. The Alarm Log gives a history of alarms that have been triggered and when they have been acknowledged. It contains a list of information such as the date and time a particular event occurred, type of event, device, individual that it was sent to, and acknowledged. The Alarm Log can be viewed by selecting the **Monitor | Alarm Log** menu item. The Alarm Log is shown in Figure 11-13.

The Alarm Log window displays a table of events with the following columns: Type, Event, Device, Date/Time Sent, Date/Time Ack'd, and Sent To. Below the table are filter options for Date/Time Sent, Show Event Types, Users Sent To, and Alarm Type. At the bottom, there are statistics for Page and Heads Up counts, and an Average Time to Ack (min). Buttons for Refresh and Close are located at the bottom right.

Type	Event	Device	Date/Time Sent	Date/Time Ack'd	Sent To
Heads Up	DEVICE_COMMUNICATIONS_CEASED	signal#101	05/03/02 5:55 p	Unacknowledged	George Smith
Heads Up	DEVICE_COMMUNICATIONS_COMM...	signal#101	05/03/02 5:55 p	Unacknowledged	Beth Meyers
Heads Up	DEVICE_COMMUNICATIONS_CEASED	signal#101	05/03/02 5:26 p	05/03/02 5:39 p	George Smith
Heads Up	DEVICE_COMMUNICATIONS_CEASED	signal#101	05/03/02 5:36 p	05/03/02 5:39 p	George Smith
Heads Up	DEVICE_COMMUNICATIONS_CEASED	signal#201	05/03/02 5:40 p	05/03/02 5:40 p	George Smith
Heads Up	DEVICE_COMMUNICATIONS_CEASED	signal#201	05/03/02 5:51 p	05/03/02 5:51 p	George Smith
Pager	CABINET_DOOR_OPEN	signal#201	05/03/02 5:45 p	N/A	Erica Taylor
Pager	CABINET_DOOR_OPEN	signal#201	05/03/02 5:45 p	N/A	Erica Taylor
Pager	CABINET_DOOR_OPEN	signal#201	05/03/02 5:45 p	N/A	Erica Taylor
Pager	CABINET_DOOR_OPEN	signal#201	05/03/02 5:46 p	N/A	Erica Taylor
Pager	CABINET_DOOR_OPEN	signal#201	05/03/02 5:52 p	N/A	Erica Taylor

**Filter**

Date/Time Sent: ☐ Show From: 5/ 3/2002 12:00:00 AM ☐ Show To: 5/ 3/2002 11:59:00 PM

Show Event Types: All Events

Users Sent To: All Users

Alarm Type: ☒ All ☐ Heads Up ☐ Page

**Statistics (Using Current Filters)**

User: All Users

Page Count: 5

Heads Up Count: 6

Average Time to Ack (min): 4.1

Refresh Close

Figure 11-13: Alarm Log

The Alarm Log is divided into three regions. The top region displays all of the alarms based on filters defined in the middle region. The lower region provides some statistics on the alarm operation based on the filters defined in the middle region. The **Refresh** will refresh the log entries. If a trigger event occurs while the alarm log is open, it will be displayed once the **Refresh** button is pressed. The **Close** button will return the user to the **icons™** desktop.

The following is a description of the alarm log parameters:

### Filter

**Date/Time Sent**

Shows only the alarms that were triggered between the *From* and *To* values

**Show Event Types**

Allows filtering of alarms based on trigger events. This is a drop-down list of available trigger events.

**Users Sent To**

Allows filtering of alarms based on recipient of notification

**Alarm Type**

Allows filtering of alarms based on notification type

***Statistics (Using Current Filters)***

**User**

Name of recipient being filtered

**Page Count**

Number of pages sent

**Heads Up Count**

Number of heads up messages sent

**Average Time to Ack (min)**

Average number of minutes to acknowledge notification

## SECTION 12 - CONTROLLER DATA MANAGEMENT

The *icons*<sup>TM</sup> system has several tools for managing traffic controller configuration parameters. These parameters are maintained both centrally on the *icons*<sup>TM</sup> database as well as within the traffic controller. Synchronization of these two repositories to ensure data consistency is important to the proper operation of the system. Traffic controllers manage real-time signal control using configuration and timing parameters defined in its local database. The *icons*<sup>TM</sup> system uses this same information to accurately report on and analyze controller operations.

### REMOTE UPLOAD (ASC2 – NTCIP ONLY)

The Remote Upload operation allows a controller database to be downloaded from the *icons*<sup>TM</sup> server to the field, or allows the controller database to be uploaded to the server, on demand from the controller. The request is made from the controller to perform either operation. This is a complementary function to the Upload/Download operation in the *icons*<sup>TM</sup> Database Editor.

The Remote Upload operation requires that the ITMS Remote Upload/Download service is operating on the *icons*<sup>TM</sup> server (See the *icons*<sup>TM</sup> System Administration Manual).

### AUTO UPLOAD (ASC2 – NTCIP ONLY)

The Auto Upload utility is a separate program on the *icons*<sup>TM</sup> server (Start | Programs | ITMS Client | Auto Upload Utility). This program allows ASC2 controllers defined in the *icons*<sup>TM</sup> database to be uploaded from the field as a batch operation (See the *icons*<sup>TM</sup> System Administration Manual). This utility is helpful to upload and synchronize the central *icons*<sup>TM</sup> database with multiple controllers, such as during new installations or deployments of large groups of new controllers.

### UNATTENDED DATA COMPARISON (ASC2 ONLY)

The unattended data comparison operation compares the controller database with the central *icons*<sup>TM</sup> database and reports differences between the two data sets. This is a useful tool to automatically and periodically check for data consistency. The user can view differences and then use other upload/download tools to synchronize the two data sets.

The unattended data comparison is a scheduled event using the CMP action in the time of day (TOD) Schedule mode (Section 5). At the scheduled time a comparison is made between the *icons*<sup>TM</sup> and controller database for the selected entity. The results of the data comparison may be displayed using the **Monitor | Controller Database Comparison Results** menu selection as shown in Figure 12-1.

The unattended data comparison operation requires that the ITMS Remote Upload/Download service is operating on the *icons*<sup>TM</sup> server (See the *icons*<sup>TM</sup> System Administration Manual).

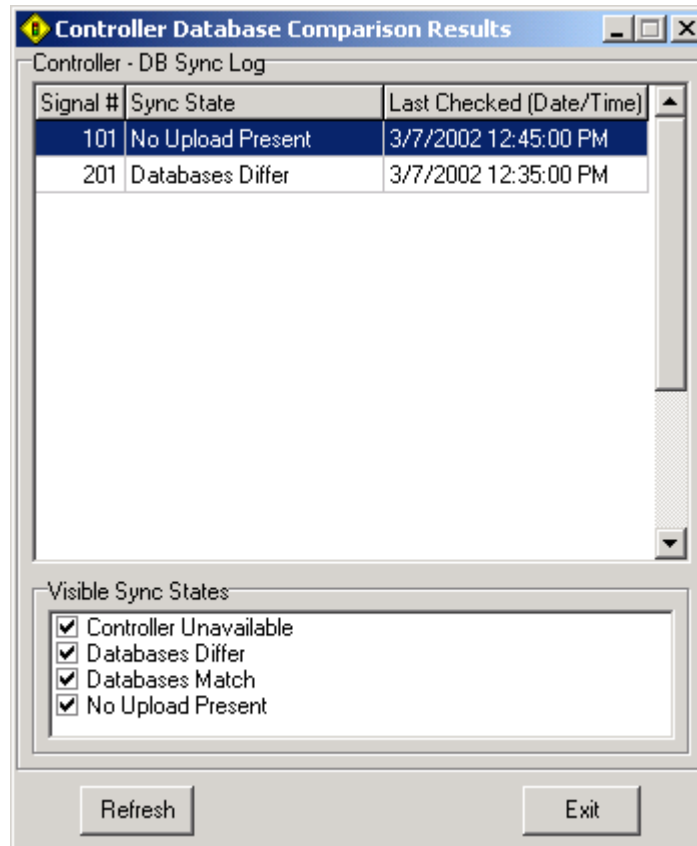


Figure 12-1: Controller Database Comparison Results

## CONTROLLER DATABASE EDITOR

The Controller Database Editor is designed to operate as either a standalone application or as an integrated component of the *icons*<sup>TM</sup> user interface. This section only covers the integrated operation within the *icons*<sup>TM</sup> workspace.

The Editor is an on-line tool for managing the configuration and operating parameters for traffic controllers. The editor allows the user to modify controller parameters, upload/download controller parameters, and compare the central database and field controller parameters. The system supports the following traffic controllers:

- Model 2070 with NextPhase
- Econolite ASC2 (AB3418 and NTCIP)
- Eagle EPAC (optional)
- McCain Vector (optional)

Although the editor operation and framework is consistent across controller types, the format and layout of the parameter screens is dependent upon the controller type. The user can easily follow choices of parameter tables from the available database screens. These screens are presented in Appendices A through C for different types of controllers. The user should refer to controller software documentation for an explanation of specific parameters and data types.



*Note: The ASC2 DB Editor is limited to standard ring/phase configurations Ring 1 phase 1-4, 9, 10 and Ring 2 phase 5-8, 11,12.*

The database editor can be started either from the **Params | DBEditor** main menu selection from the **icons™** workspace, or from the **Params** button under the Information tab in the intersection dialog box (Section 5). Once the Database Editor is started the user will be presented with the editor workspace as shown in Figure 12-2.

### The Database Editor Workspace

When the Database Editor is started the user is presented with the screen shown in Figure 12-2. The screen is divided into the following regions:

- ❑ Menu Bar - permits the operator to access various menu options
- ❑ Button Bar - provides “one-click” shortcuts to commonly performed editor tasks
- ❑ Status Bar - displays the highlight menu item and the communication connection mode
- ❑ Controller Display – a list selection in the left panel that displays all controllers currently loaded into the editor
- ❑ Parameter Display – a tabular selection of parameter pages in the right panel that displays all configuration and operating parameters for a selected controller. This is the region where parameters may be edited.

When the editor is initially started the left panel controller display and right panel parameter display areas are empty indicating that no controllers are currently loaded.

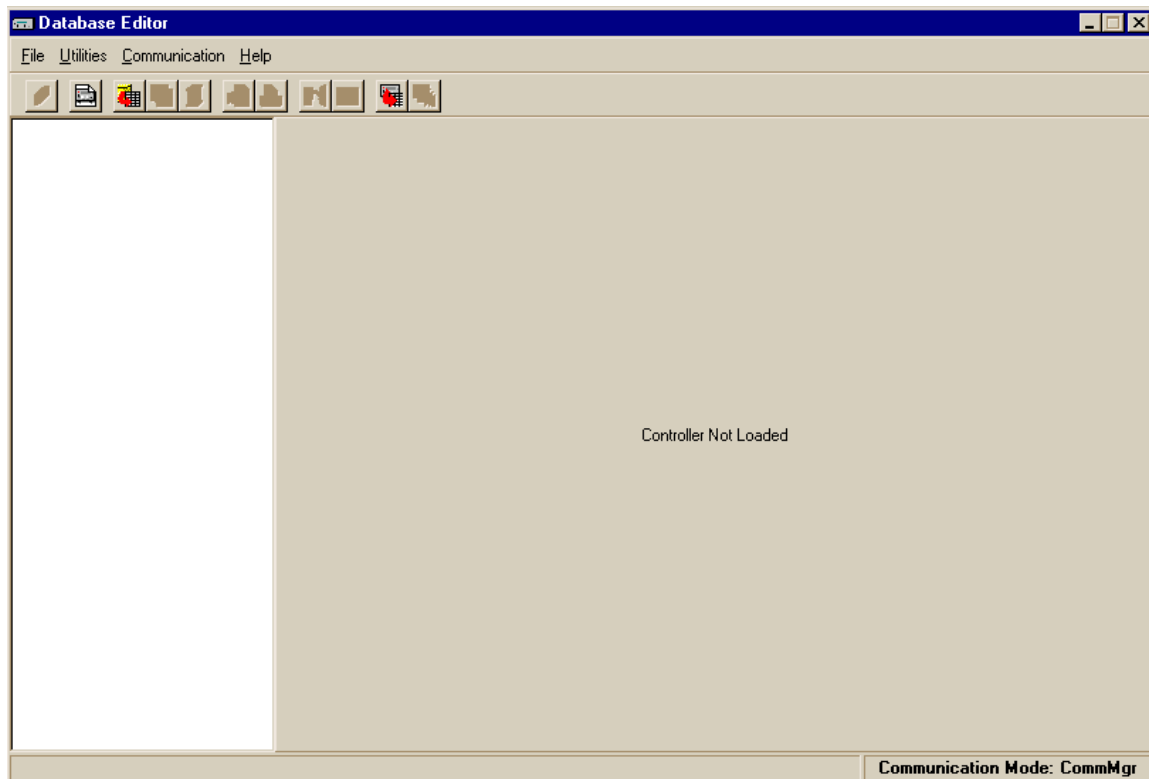


Figure 12-2: Controller Database Workspace

## Menu Bar

The Database Editor Menu Bar contains the following menu items:

- ☐ File
- ☐ Utilities
- ☐ Communication
- ☐ Help

A drop down menu for any of these menu items can be selected by left clicking its menu title. A detailed discussion of the contents of each of these menu items is contained in the following section.


## The File Menu

The file menu contains the following choices:

- ☐ Load Controller from Database (Ctrl+L)
- ☐ Store Controller in Database (Ctrl+S)
- ☐ Close Controller
- ☐ New Controller (Ctrl +N)
- ☐ Delete Controller
- ☐ Print Preview
- ☐ Print (Ctrl+P)
- ☐ Exit

Menu items are selected by left clicking the menu title or alternatively by using the keyboard shortcut keys. Upon initial startup of the editor or when no controllers are currently loaded only the Load Controller from Database, New Controller, and Exit menu items are selectable. A controller must first be loaded into the editor before any of the other operations can be performed.


The **Load Controller from Database** command is used to load the parameters for a controller already defined in the database. Defining a new controller can be performed using the New Controller menu item or through the configuration editor within *icons*<sup>TM</sup> (section 3). Selecting this menu item displays the Select Controller screen shown in Figure 12-3. This screen lists all the controllers currently defined in the database. The two buttons along the top bar allows the user to select between a List and Details view.

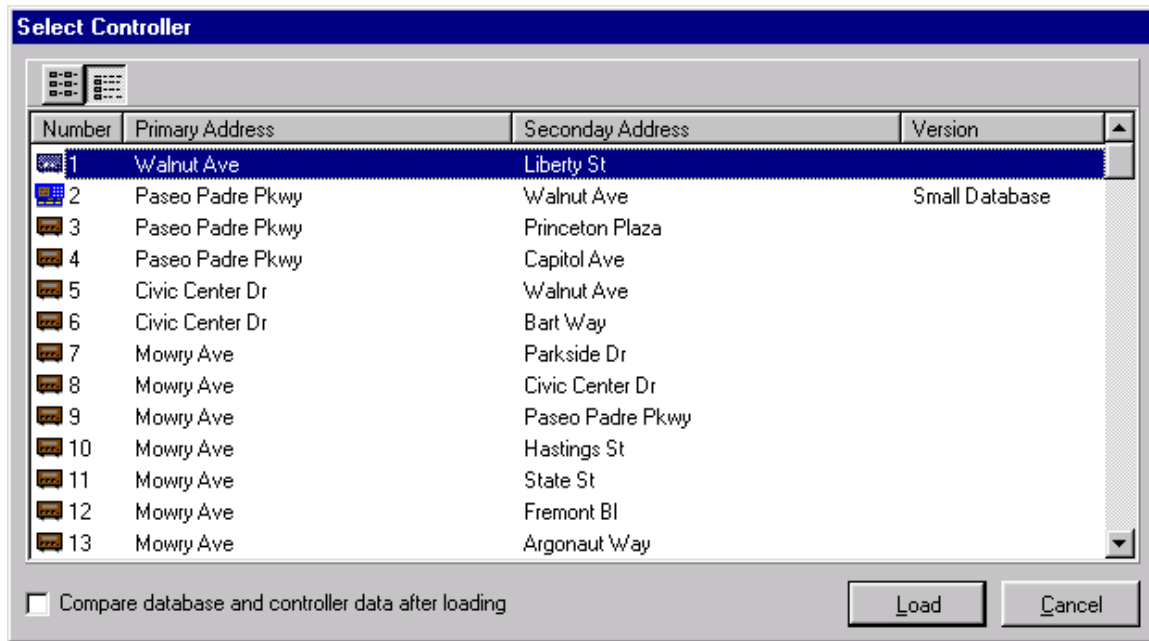

*Figure 12-3: Select Controller Screen*

The controller list may be alphabetically or numerically sorted by any column simply by left clicking the column header. Alternatively, a context menu with sort and list commands may be displayed by right clicking on the row of any controller. A controller is loaded into the editor by double clicking the left mouse button anywhere on the row of the desired controller, or alternatively by clicking once then selecting the **Load** button. The **Cancel** cancels the operation and returns the user back to the editor main workspace.

The Load Controller from Database loads the data into the editor workspace for viewing and editing, and loads a copy into a restore temporary repository in the editor. The restore area is used during other editor operations. The operation is illustrated in Figure 12-4:

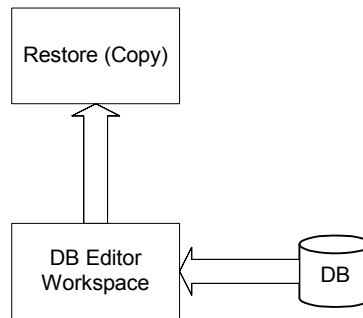

*Figure 12-4: DB Load*

The **Store Controller in Database** command is used to store the parameters for a selected controller back to the database. All changes made in the editor for the selected controller will be stored, overwriting any existing database parameters. A confirmation dialog box is used to confirm the action.

The Store Controller to Database saves the data back to the database while also storing a local copy back to the restore area in the editor. This keeps the restore copy current with the database. The restore area is used during other editor operations. The operation is illustrated in Figure 12-5:

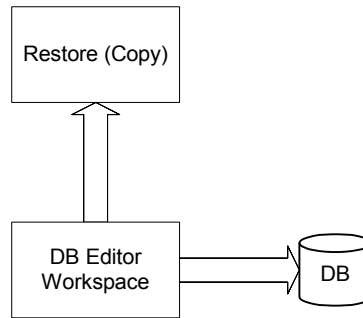


Figure 12-5: DB Store

The **Close Controller** command will close the selected controller from the list of available controllers in the editor. If any changes have been made a dialog box will be displayed that allows the user to save or discard any changes prior to closing the controller.

The **New Controller** command allows the user to define a new controller within the editor when operating in standalone mode. This command is not when used with *icons™*.

The **Delete Controller** command allows the user to permanently remove a controller from the editor database when operating in standalone mode. This command is not when used with *icons™*.

The **Print Preview** command allows the operator to preview all database parameter forms for the selected controller prior to printing. Selecting this menu item displays the Print Preview screen shown in Figure 12-6. The screen has a top button bar and a status bar. The button bar includes icons buttons for performing all the functions in the preview screen. Each button includes a Tool Tips description of the supported operation. The first three buttons allows the operator to adjust the size of the displayed report forms. The **Zoom to Fit** button reduces the report form to the size of a printable page. The **100%** zoom button expands the report form to occupy the entire print preview display area. The **Zoom to Width** button expands the report form to full width. The next four buttons allows the operator to advance through the report form. The **First Page** arrow button moves the report back to the first page. The **Previous Page** arrow button moves the report back to the page previous to the current. The **Next Page** arrow button moves the report forward to the next page. The **Last Page** arrow button moves to the report to the last page. The **Printer Setup** button allows the user to setup various printing parameters. The **Print** button prints the current report. *Note: A printer needs to be defined through Windows before these buttons will function.* The **Save Report** button allows the operator to save this report to file for later retrieval. The **Load Report** button allows the operator to retrieve a previously saved report. The status bar indicates the current page being previewed and also shows the printing progress.

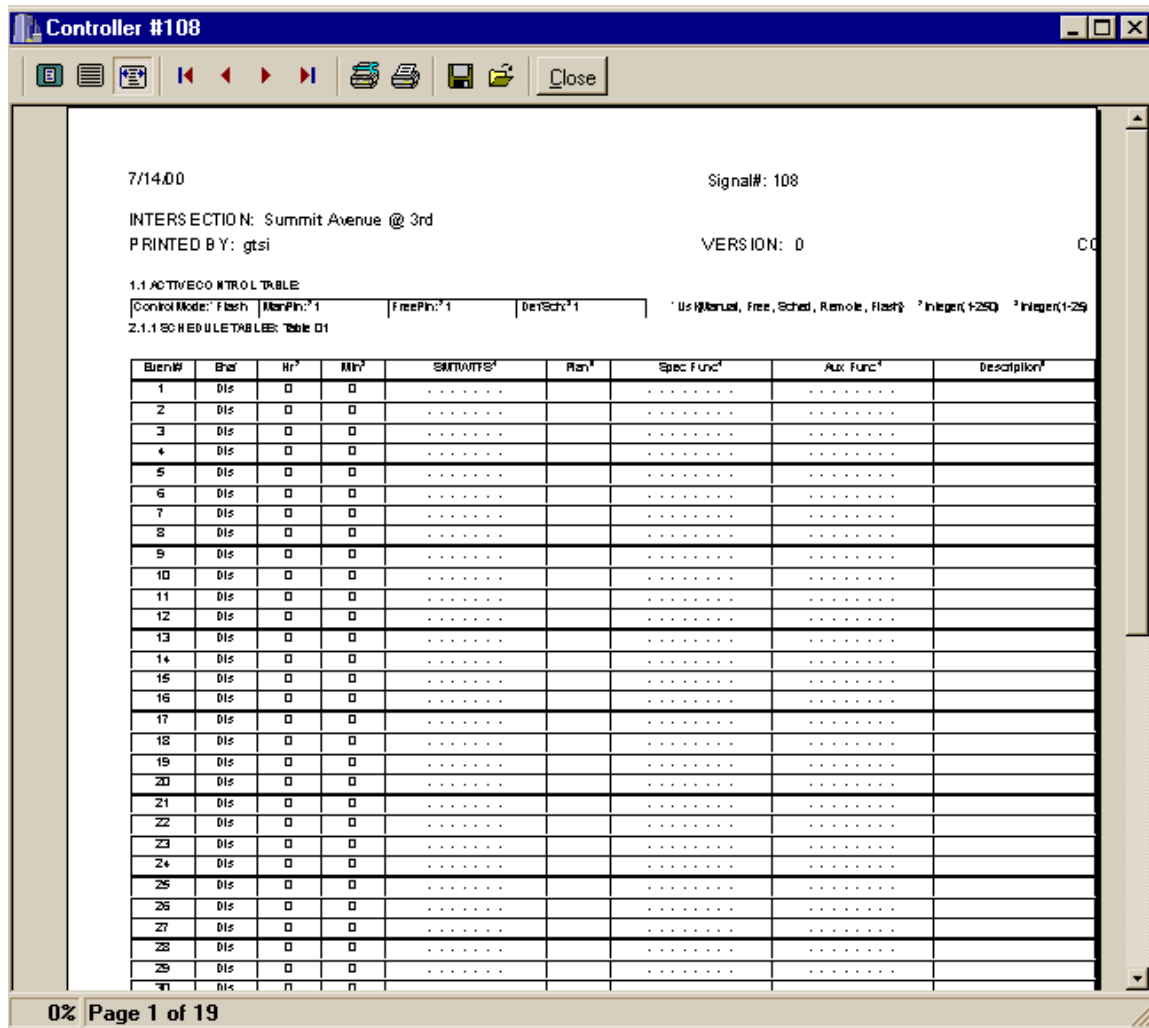


Figure 12-6: Print Screen

The **Print** command allows the operator to directly print the report. The **Exit** command is used to shut down Database Editor.

### The Utilities Menu

The Utilities menu contains the following choices:

- ☐ Compare Controller
- ☐ Restore Database Data (Ctrl+Z)
- ☐ Quick Compare

Menu items are selected by left clicking the menu title or alternatively by using the keyboard shortcut keys. Upon initial startup of the editor or when no controllers are currently loaded none of these items are selectable. A controller must first be loaded into the editor before any of these operations can be performed.

The **Compare Controller** command toggles on/off the compare feature in the editor. The Compare feature highlights parameter differences in yellow between the controller data and the restore copy of the database data. An upload from controller operation must precede the compare operation to check

differences for the selected controller. The controller data must be loaded and visible in the editor workspace for this operation to be able to highlight the differences. For example, if an upload from controller operation is performed and then a load from database is performed, the database version of the data is what is loaded in the editor workspace. Since the restore copy and database are identical, the comparison operation will not indicate any differences. See Figure 12-7.

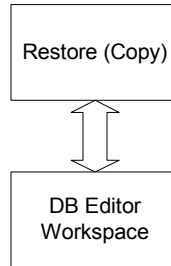


Figure 12-7: DB Compare

The **Restore Database Data** command restores a copy of the controller data from the central database as shown in Figure 12-8. The editor maintains a copy of the controller database in a temporary repository anytime the controller is loaded or stored from/to the database. That copy replaces any data in the editor workspace as a result of the restore operation. Any modifications made to the data in the editor workspace prior to this operation will be lost.

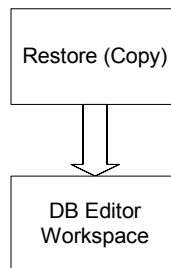


Figure 12-8: DB Restore

The **Quick Compare** command performs a comparison between the data loaded in the field controller and the restore copy of the database data. The operation is performed by comparing CRC values between controller and the restore copy of the database. At the end of the compare operation the operator is notified through dialog message if the databases are the same or different. Because only CRC values are compared, the operator is only notified if differences exist. The quick compare operation is not able to indicate specific parameter differences.

If differences exist the operator can then perform a complete upload to examine specific parameter differences using the Compare Controller command.

---

*Note: Quick Compare is only supported for the ASC2 (AB3418 and NTCIP) controller types.*

---

## The Communications Menu

The Communications menu contains the following choices:

- ☐ Upload From Controller (Ctrl+U)
- ☐ Download To Controller (Ctrl+D)

Menu items are selected by left clicking the menu title or alternatively by using the keyboard shortcut keys. Upon initial startup of the editor or when no controllers are currently loaded only the Upload From Controller menu item is selectable. A controller must first be loaded into the editor before the Download To Controller operation can be performed.

The **Upload From Controller** command uploads the data from the selected controller in the field to the editor. During the upload process a dialog box is displayed showing the progress of the operation. The operator may cancel the operation at any time. The editor will only accept data if the entire operation is successful. Once the upload operation is complete the data is displayed in the editor workspace. This operation will load the controller from the database first if the controller is not currently loaded in the editor.

The upload is a single-step process for most controllers where all data from the controller is uploaded at the time the operator confirms the operation. For *NextPhase* controllers the upload operation is a two-step process whereby a comparison between controller data and database data is performed first to determine data table differences. A dialog box is presented as shown in Figure 12-9 that indicates the table differences. The operator can then select the tables of interest to upload. Where only a few parameters may have changed this two-step process limits the amount of data transfer.

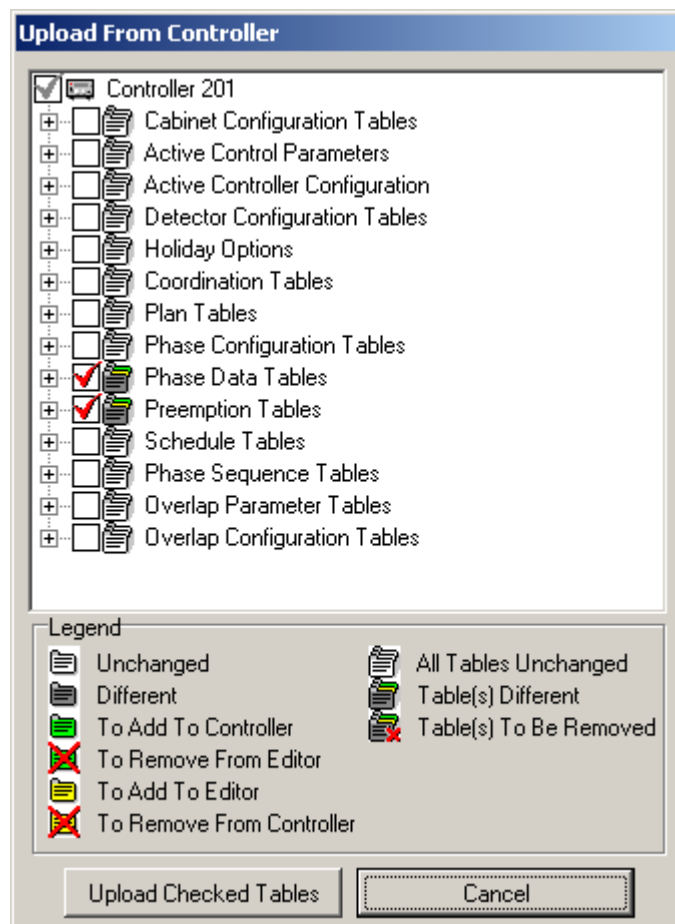


Figure 12-9: *NextPhase* Upload Table Selection Screen

The **Download To Controller** command downloads the data for the selected controller in the editor to the field. During the download process a dialog box is displayed showing the progress of the operation. The operator may cancel the operation at any time. All changes made in the editor for the selected controller will be stored in the controller, overwriting any existing parameters. The controller will only accept data if the entire operation is successful. Once the download operation is complete the operator may continue within the editor workspace.

The download is a single-step process for most controllers where all data from the controller is downloaded at the time the operator confirms the operation. For *NextPhase* controllers the download operation is a two-step process whereby a comparison between controller data and database data is performed first to determine data table differences. A dialog box is presented as shown in Figure 12-10 that indicates the table differences. The operator can then select the tables of interest to download. Where only a few parameters may have changed this two-step process limits the amount of data transfer.

*Note: The **NextPhase** controller must be in standby mode to download certain configuration parameter data.*

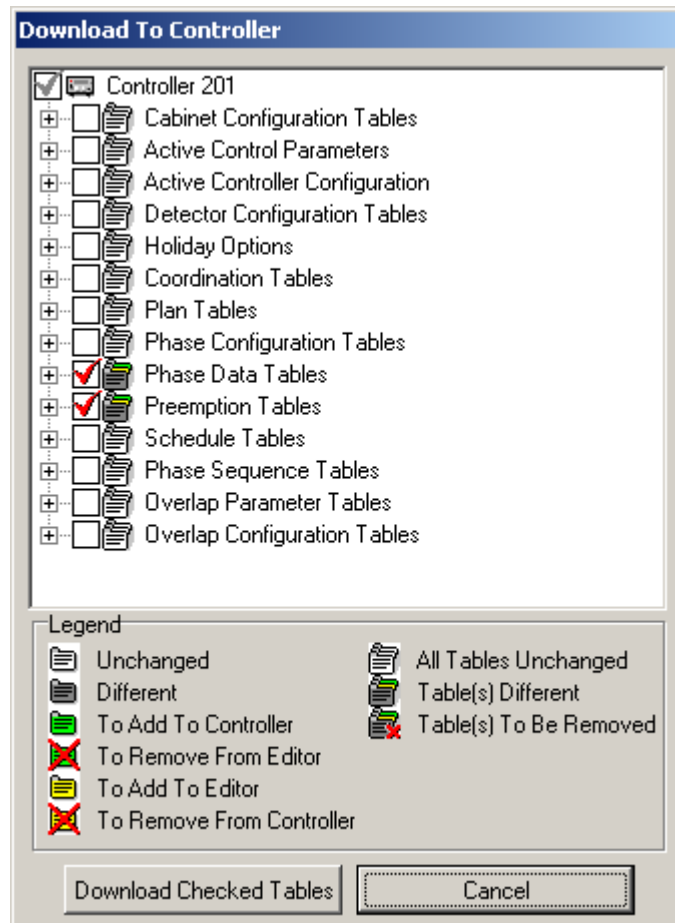


Figure 12-10: *NextPhase* Download Table Selection Screen

## The Help Menu

The Help menu contains a single **About** selection. The About selection contains version information about the Database Editor.



## The Button Bar

The button bar located directly below the menu bar is used to provide one-click access to commonly used system functions that are also available through the main menu. Each button contains a Tool Tips description of the supported operation. Resting the mouse pointer over the button displays the “flyover” title and also displays the title in the status bar.

## The Status Bar

The status bar is used to display informational messages to the operator. The left side of the bar displays the title of the buttons and menu items when selected by the mouse pointer. The right side of the bar displays the Communication Mode use by the editor.

## The Controller Display

The Controller Display area provides a list of controllers currently loaded into the editor. The operator needs to select a controller in the list view from the left-hand side to display and edit the parameters in the right-hand side Parameter Display area. If only one controller is loaded, by default that controller will be automatically selected. If multiple controllers are loaded, the user can switch between controller screen layouts by highlighting the controller in the list view on the left-hand side of the screen.

When more than one controller is listed then the operator can drag and drop one controller to another to copy data parameters from one to the other. Only controllers of the same type can be copied between each other.

## The Parameter Display

The Parameter Display shows the various parameter displays as tabbed selection for the selected controller. Parameters may be edited directly within the display. Certain protected areas contain non-editable parameters. These parameters typically define cabinet level or communications dependencies that would create problems if modified. The layout of the parameter display is controller type dependent. The database screens for various controllers are provided in the appendix.

Only one controller database may be viewed at a time by selecting the desired controller from the controller display region. The current tabbed section display is maintained as the user alternatively selects between controllers. This feature allows the user to easily compare parameters between multiple controllers of the same type.

## NEW CONTROLLER DATA MANAGEMENT

This section describes procedures for defining and initializing new controllers prior to field deployment. The editor provides powerful copy and past functions along with an efficient editing environment to simplify initial loading of controller parameters.

The following steps should be followed:

1. Create Initial Controller Template
2. Define new controllers using Template
3. Initialize parameters
4. Store in Database
5. Download to controller

## EXISTING CONTROLLER DATA MANAGEMENT

This section describes procedures for modifying, updating, and maintaining existing controller database parameters. The editor provides powerful copy and paste functions along with an efficient editing environment to simplify initial loading of controller parameters. The following points should be considered to ensure accurate controller data management.

- ❑ The central *icons*<sup>TM</sup> database should be considered the master copy of all controller parameter data in the system. If changes are made at central using the *icons*<sup>TM</sup> integrated database editor then those changes should be simultaneously saved to the database and downloaded to the controller to maintain data consistency.
- ❑ If changes are made in the field either directly through the controller interface or using a standalone database editor connected directly to the controller, then those changes are not in the *icons*<sup>TM</sup> central database. The controller parameters need to be subsequently uploaded in order for the central database to be once again in synchronization with the local controller parameters.

## APPENDIX A

### Model 2070 *NextPhase* Controller Database Screens

---

*Note: Some screen parameters may be version specific. Check the **NextPhase** user manual for a complete description of controller parameters.*

---

**Database Editor**

File Utilities Communication Help

Controller 2999

Control Parameters Configuration

**Information**

Description:

Designed By:  Updated By: gtsi 10/24/2001 14:15:17

**Control Parameters**

Control Mode:

Manual Plan:

Free Plan:

Default Schedule:

Active Control Parameters

Communication Mode: CommMgr

Figure A-1: Active Control Parameters Screen

**Database Editor**

File Utilities Communication Help

Controller 2999

Control Parameters Configuration

**Selection**

Table	Description	Design By	Date	Update By	Date
01	Table 01	gtsi	10/24/2001 14:1...	gtsi	10/24/2001 14:1...

Description:

**Schedule Settings**

	En	Hour	Min	S	M	T	W	T	F	S	Mode	Pln	Special							Auxiliary							
													1	2	3	4	5	6	7	8	1	2	3	4	5	6	
1	00	00									Sched	0															
2	00	00									Sched	0															
3	00	00									Sched	0															
4	00	00									Sched	0															
5	00	00									Sched	0															
6	00	00									Sched	0															
7	00	00									Sched	0															
8	00	00									Sched	0															
9	00	00									Sched	0															

Schedules/Holidays/Plans/Phase Sequence/Overlap/Phase Data/External Plan/

Click on cell to toggle

Communication Mode: CommMgr

Figure A-2: Schedule Settings Screen

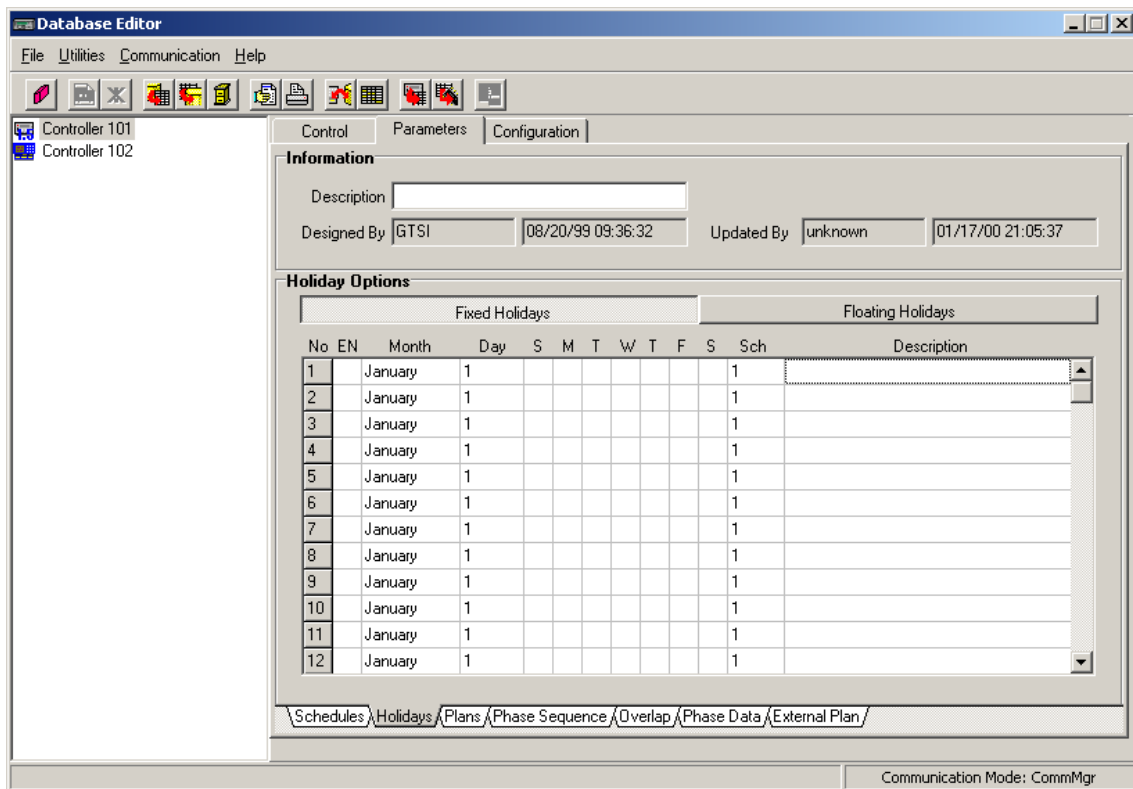


Figure A-3: Fixed Holidays Screen

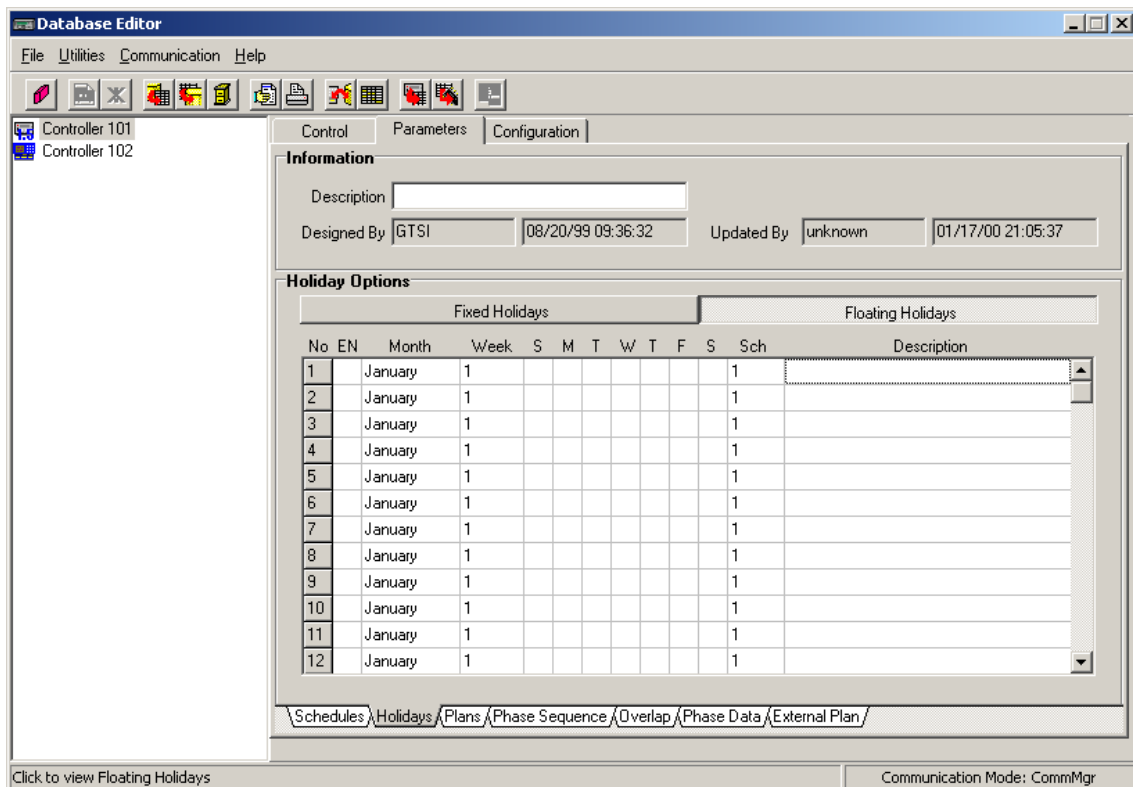


Figure A-4: Floating Holidays Screen

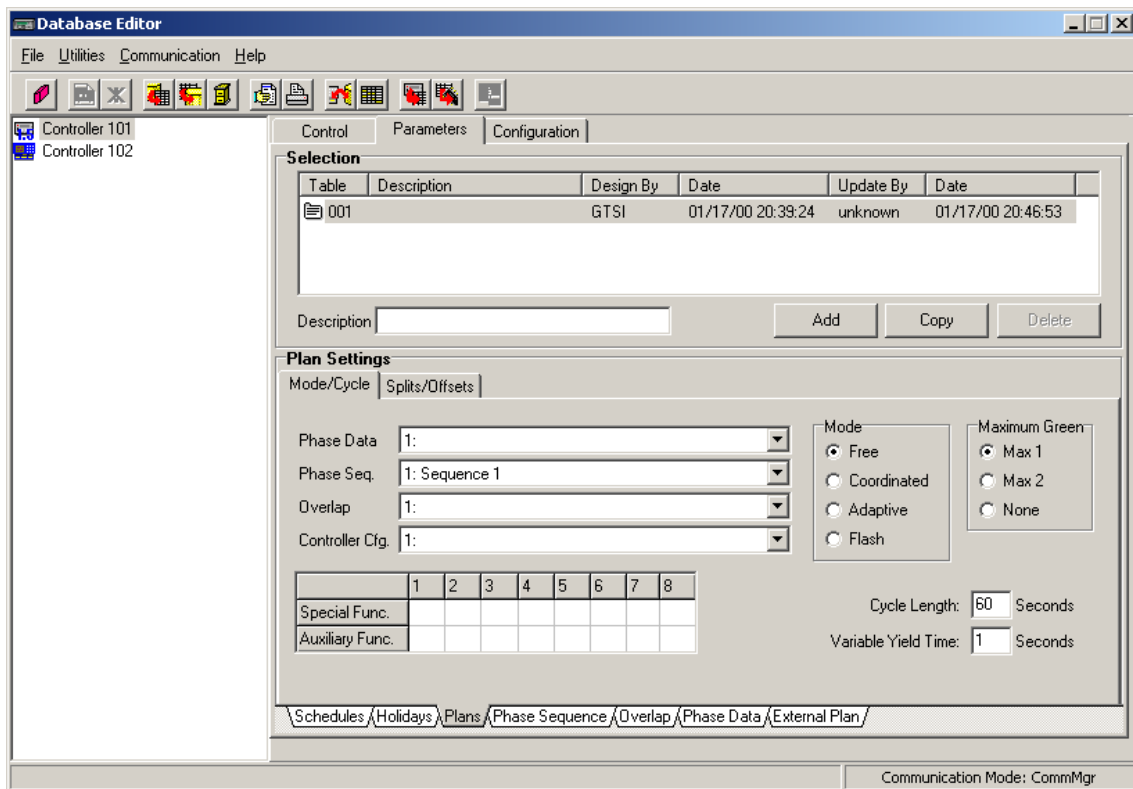


Figure A-5: Mode/Cycle Plan Settings Screen

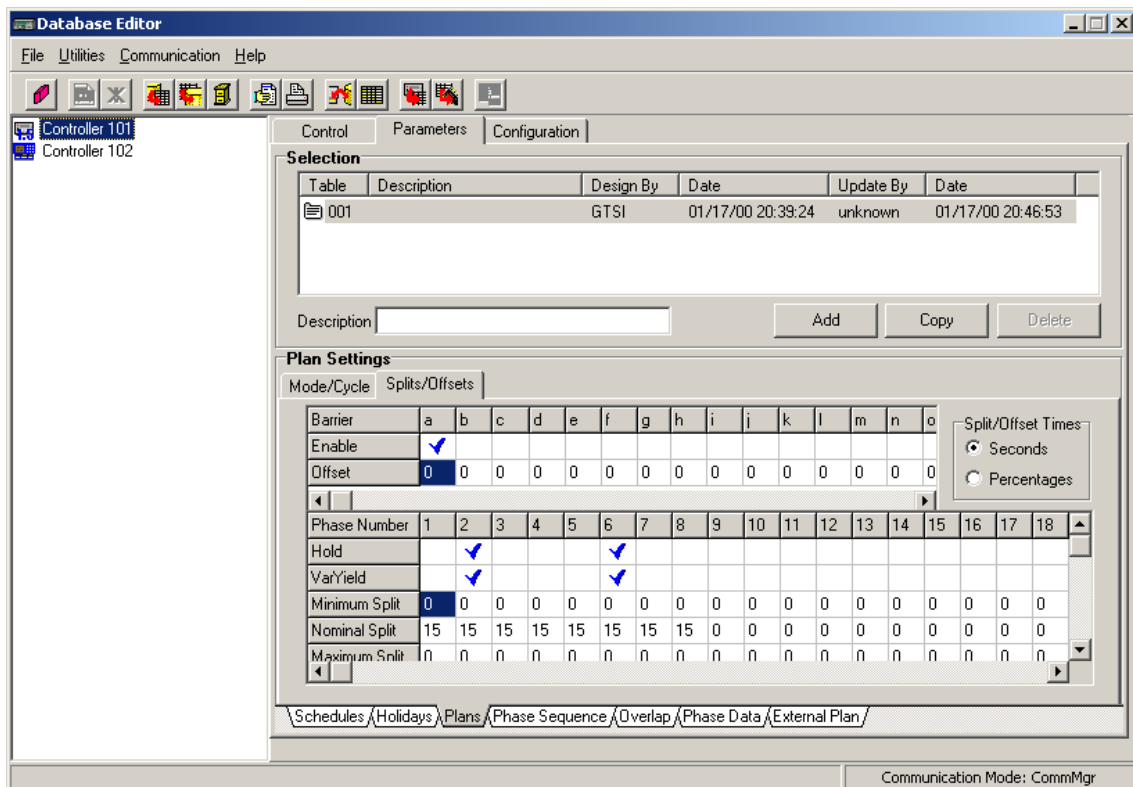


Figure A-6: Splits/Offsets Plan Settings Screen

**Database Editor**

File Utilities Communication Help

Controller 101  
Controller 102

Control Parameters Configuration

**Selection**

Table	Description	Design By	Date	Update By	Date
001	Sequence 1	GTSI	08/20/99 09:36:34	unknown	01/17/00 21:05:59

Description: Sequence 1 [Add] [Copy] [Delete]

**Phase Sequence Settings**

Phase Number

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
Priority	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Phase Number

	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
Priority	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Schedules Holidays Plans Phase Sequence Overlap Phase Data External Plan

Enter value between 0 and 40

Communication Mode: CommMgr

Figure A-7: Phase Sequence Settings Screen

**Database Editor**

File Utilities Communication Help

Controller 101  
Controller 102

Control Parameters Configuration

**Selection**

Table	Description	Design By	Date	Update By	Date
001		GTSI	01/17/00 18:35:32	unknown	01/17/00 21:06:39

Description: [Add] [Copy] [Delete]

**Overlap Settings**

Flags Parameters

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T
Recall Primary	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
Recall Sec																				
Ped Recall																				
Ped Recycle																				
Auto Extend																				

Schedules Holidays Plans Phase Sequence Overlap Phase Data External Plan

Communication Mode: CommMgr

Figure A-8: Overlap Flags Settings Screen

**Database Editor**  
File Utilities Communication Help

Controller 101  
Controller 102

Control Parameters Configuration

**Selection**

Table	Description	Design By	Date	Update By	Date
001		GTSI	01/17/00 18:35:32	unknown	01/17/00 21:06:39

Description  Add Copy Delete

**Overlap Settings**  
Flags Parameters

	A	B	C	D	E	F	G	H	I	J	K	L
Min Green	0	0	0	0	0	0	0	0	0	0	0	0
Max Green	0	0	0	0	0	0	0	0	0	0	0	0
Green Clearance	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
Yellow Clearance	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0
Red Clearance	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
Walk	0	0	0	0	0	0	0	0	0	0	0	0
Ped Clearance	0	0	0	0	0	0	0	0	0	0	0	0
Reservice	0	0	0	0	0	0	0	0	0	0	0	0

Schedules Holidays Plans Phase Sequence Overlap Phase Data External Plan

Enter value between 0 and 99.9 Communication Mode: CommMgr

Figure A-9: Overlap Parameters Settings Screen

**Database Editor**  
File Utilities Communication Help

Controller 101  
Controller 102

Control Parameters Configuration

**Selection**

Table	Description	Design By	Date	Update By	Date
001		GTSI	01/17/00 20:39:24	gtsi	09/21/2001 16:2...

Description  Add Copy Delete

**Phase Data Settings**  
Phase Flags Phase Timing

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
Omit Phase																		
Omit Pedestrian Service																		
Minimum Recall																		
Maximum Recall																		
Soft Recall																		
Conditional Service																		
Pedestrian Recall																		
Dual Entry																		

Schedules Holidays Plans Phase Sequence Overlap Phase Data External Plan

Click on cell to toggle Communication Mode: CommMgr

Figure A-10: Phase Flags Screen



**Database Editor**

File Utilities Communication Help

Controller 101  
Controller 102

Control Parameters Configuration

**Selection**

Table	Description	Design By	Date	Update By	Date
001		GTSI	01/17/00 20:39:24	gtsi	09/21/2001 16:2...

Description  Add Copy Delete

**Phase Data Settings**

Phase Flags Phase Timing

Phase Number

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
Minimum Green	10	10	10	10	10	10	10	10	10	0	0	0	0	0	0	0	0
Passage	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
Maximum Green 1	10	10	10	10	10	10	10	10	0	0	0	0	0	0	0	0	0
Maximum Green 2	20	20	20	20	20	20	20	20	0	0	0	0	0	0	0	0	0
Cond Serv Max Green	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Yellow Change	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
Red Clearance	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
Walk	0	8	0	8	0	8	0	8	0	0	0	0	0	0	0	0	0

Schedules Holidays Plans Phase Sequence Overlap Phase Data External Plan

Enter timing between 0 and 655 Communication Mode: CommMgr

Figure A-11: Phase Timing Screen

**Database Editor**

File Utilities Communication Help

Controller 2999

Control Parameters Configuration

**External Plan Setting**

Pln Sel

	En	1	2	3	4	5	6	7	8	Mode	Pln	Description
1										ExtPln	0	
2										ExtPln	0	
3										ExtPln	0	
4										ExtPln	0	
5										ExtPln	0	
6										ExtPln	0	
7										ExtPln	0	
8										ExtPln	0	
9										ExtPln	0	
10										ExtPln	0	
11										ExtPln	0	
12										ExtPln	0	
13										ExtPln	0	
14										ExtPln	0	
15										ExtPln	0	

Schedules Holidays Plans Phase Sequence Overlap Phase Data External Plan

Enter description Communication Mode: CommMgr

Figure A-12: External Plan Screen

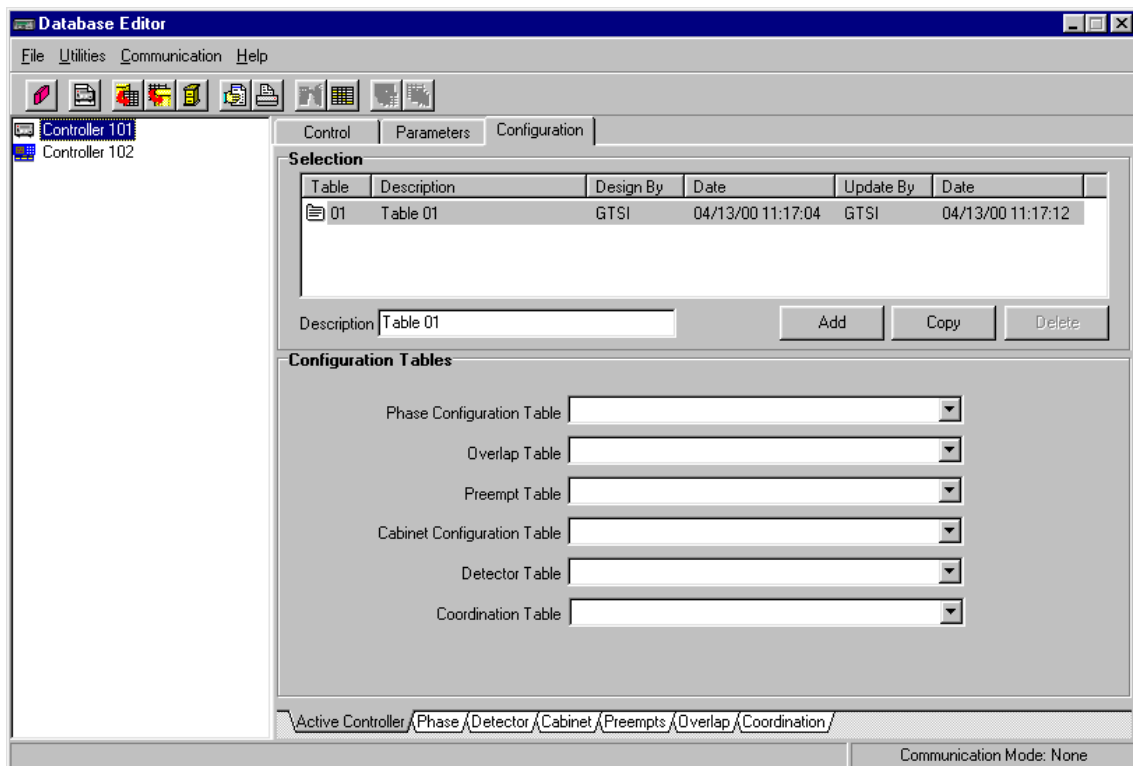


Figure A-13: Active Controller Configuration Screen

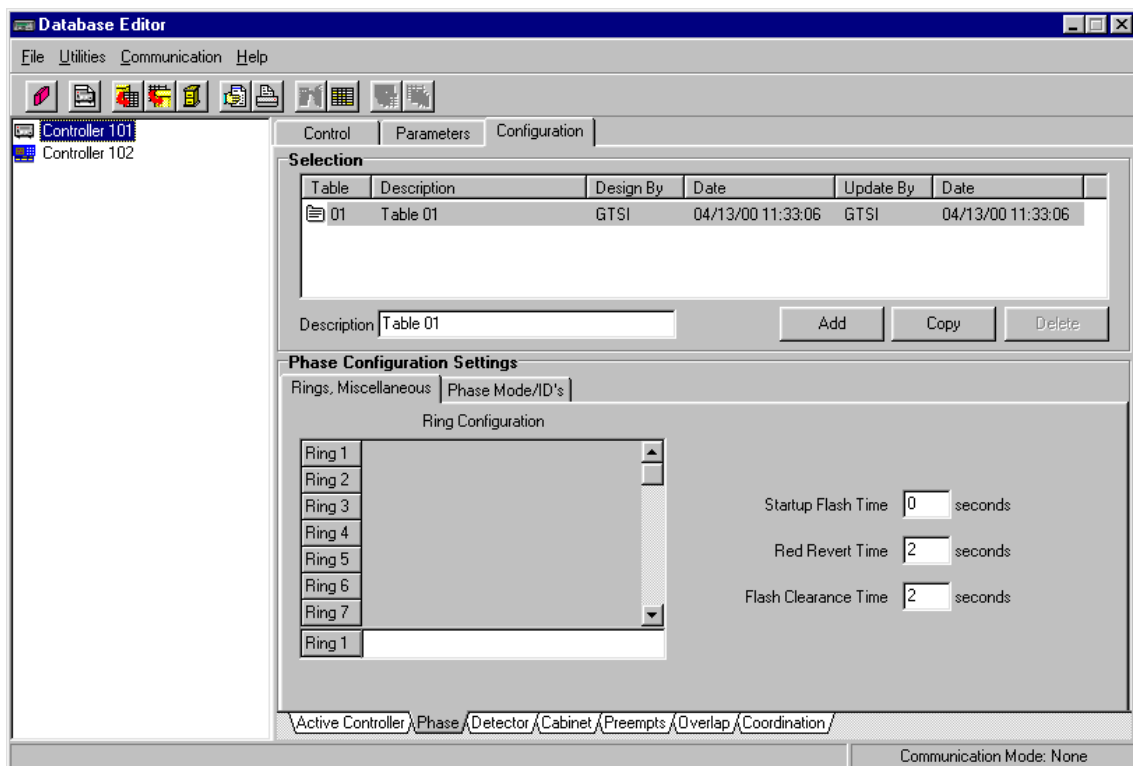


Figure A-14: Offsets, Rings, Miscellaneous Phase Configuration Screen

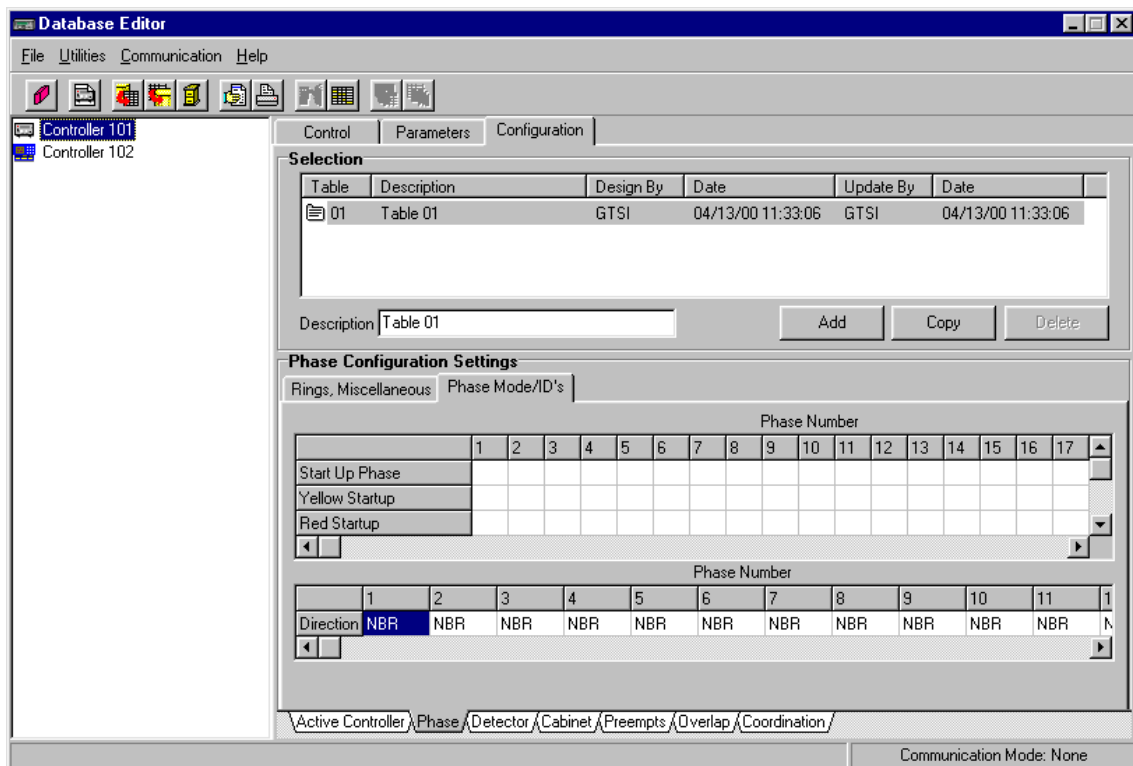


Figure A-15: Phase Mode/ID's Phase Configuration Screen

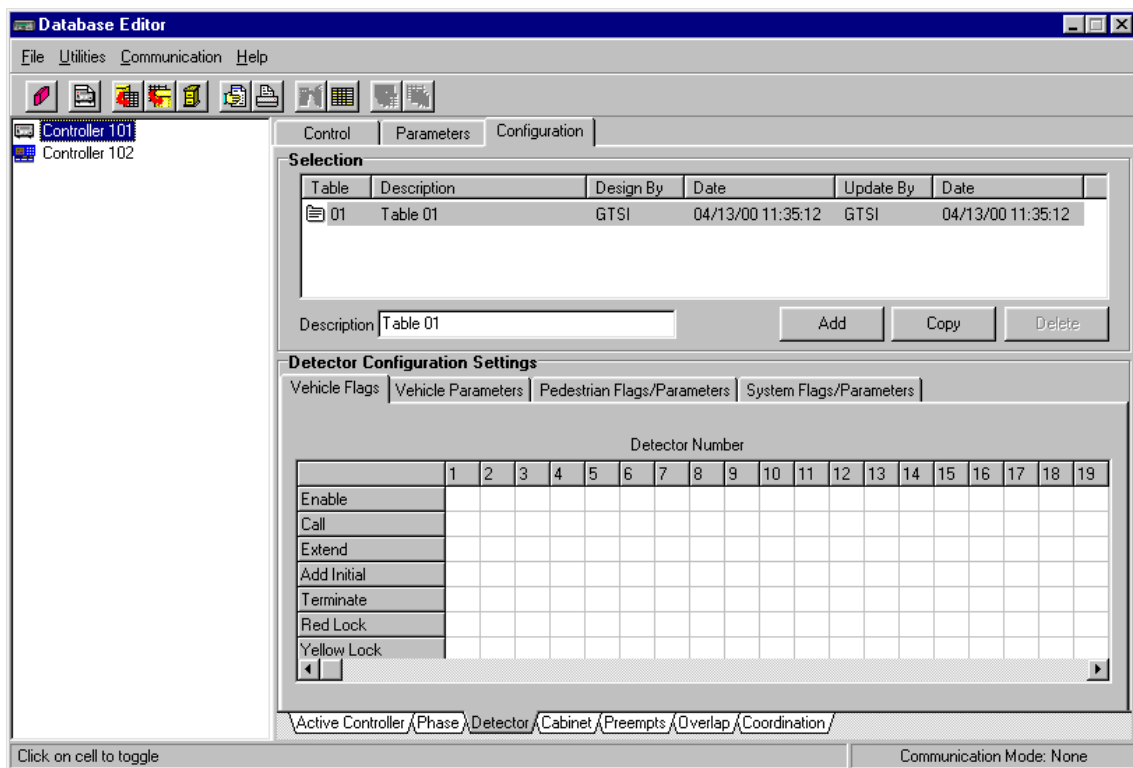


Figure A-16: Vehicle Detector Flags Configuration Screen

**Database Editor**

File Utilities Communication Help

Controller 101  
Controller 102

Control Parameters Configuration

**Selection**

Table	Description	Design By	Date	Update By	Date
01	Table 01	GTSI	04/13/00 11:35:12	GTSI	04/13/00 11:35:12

Description: Table 01 Add Copy Delete

**Detector Configuration Settings**

Vehicle Flags Vehicle Parameters Pedestrian Flags/Parameters System Flags/Parameters

Detector Number

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Call Phase	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Switch Phase	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Overlap	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Delay	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
Extend	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0

\Active Controller \Phase \Detector \Cabinet \Preempts \Overlap \Coordination \

Communication Mode: None

Figure A-17: Vehicle Detector Parameters Configuration Screen

**Database Editor**

File Utilities Communication Help

Controller 101  
Controller 102

Control Parameters Configuration

**Selection**

Table	Description	Design By	Date	Update By	Date
01	Table 01	GTSI	04/13/00 11:35:12	GTSI	04/13/00 11:35:12

Description: Table 01 Add Copy Delete

**Detector Configuration Settings**

Vehicle Flags Vehicle Parameters Pedestrian Flags/Parameters System Flags/Parameters

Detector Number

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
Enable																				
Call Phase	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	
Overlap	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	

\Active Controller \Phase \Detector \Cabinet \Preempts \Overlap \Coordination \

Communication Mode: None

Figure A-18: Pedestrian Detector Flags/Parameters Configuration Screen

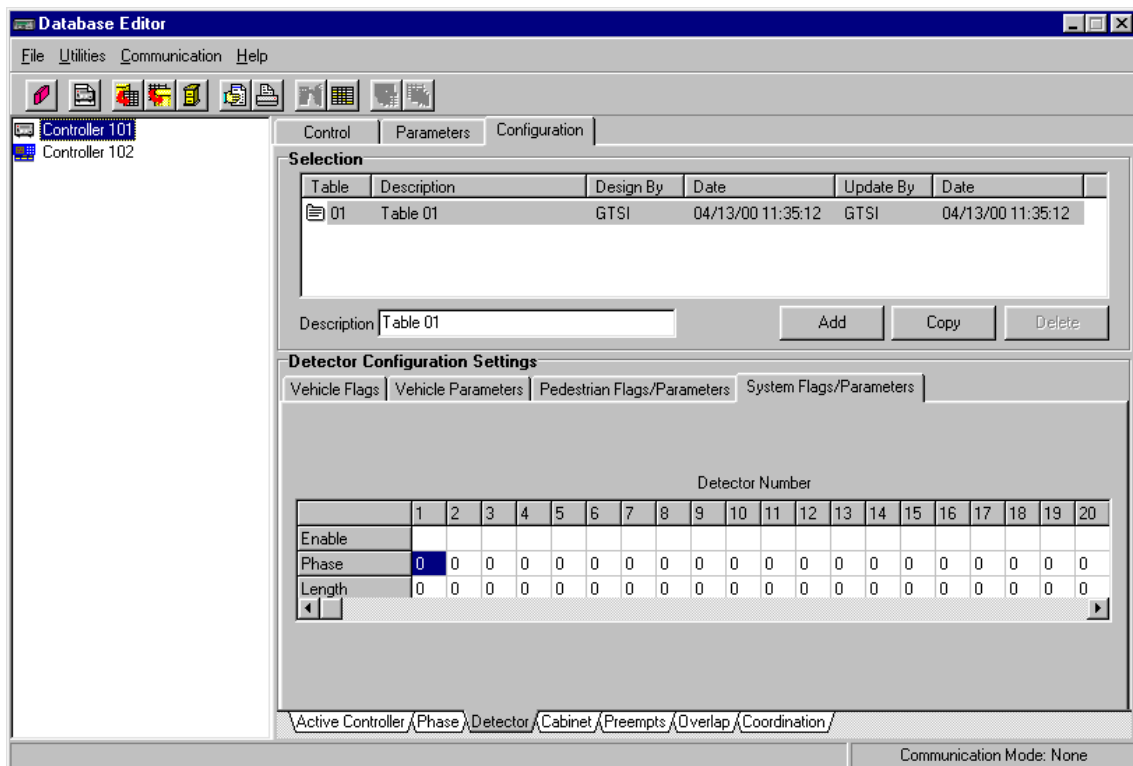


Figure A-19: System Detector Flags/Parameters Configuration Screen

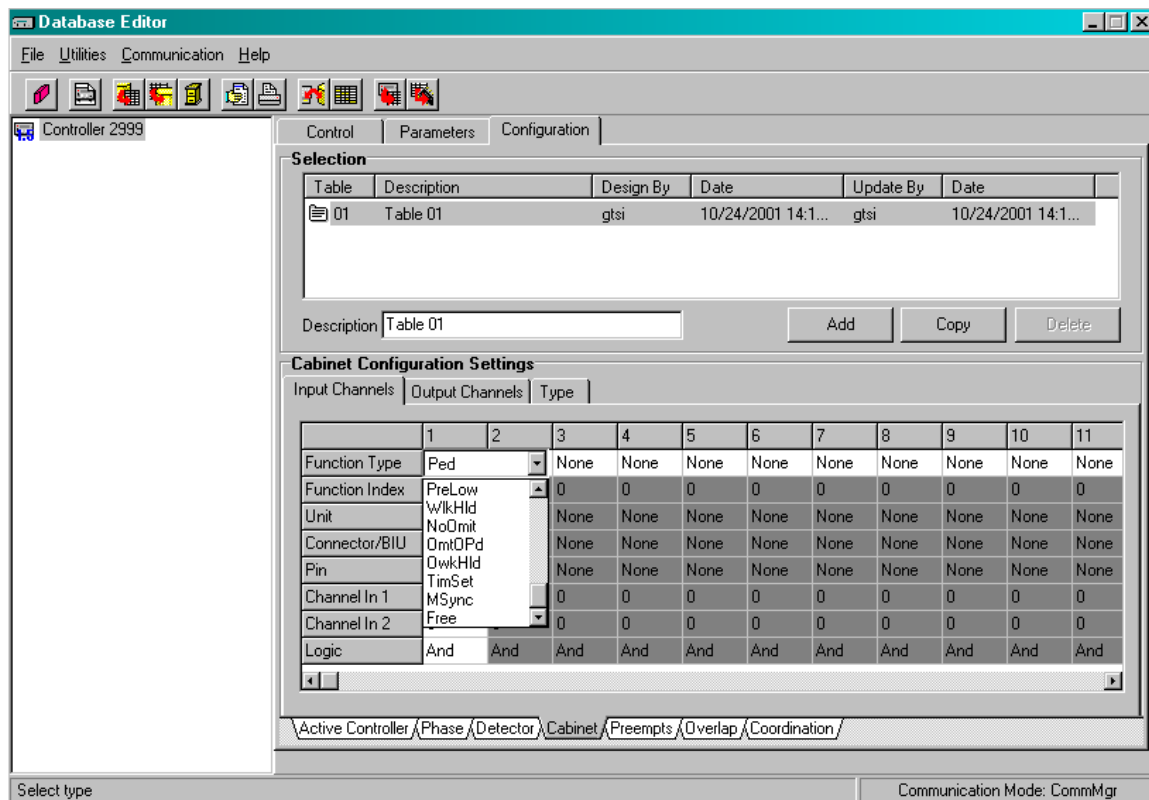


Figure A-20: Cabinet Input Channel Assignment (Function Type) Screen

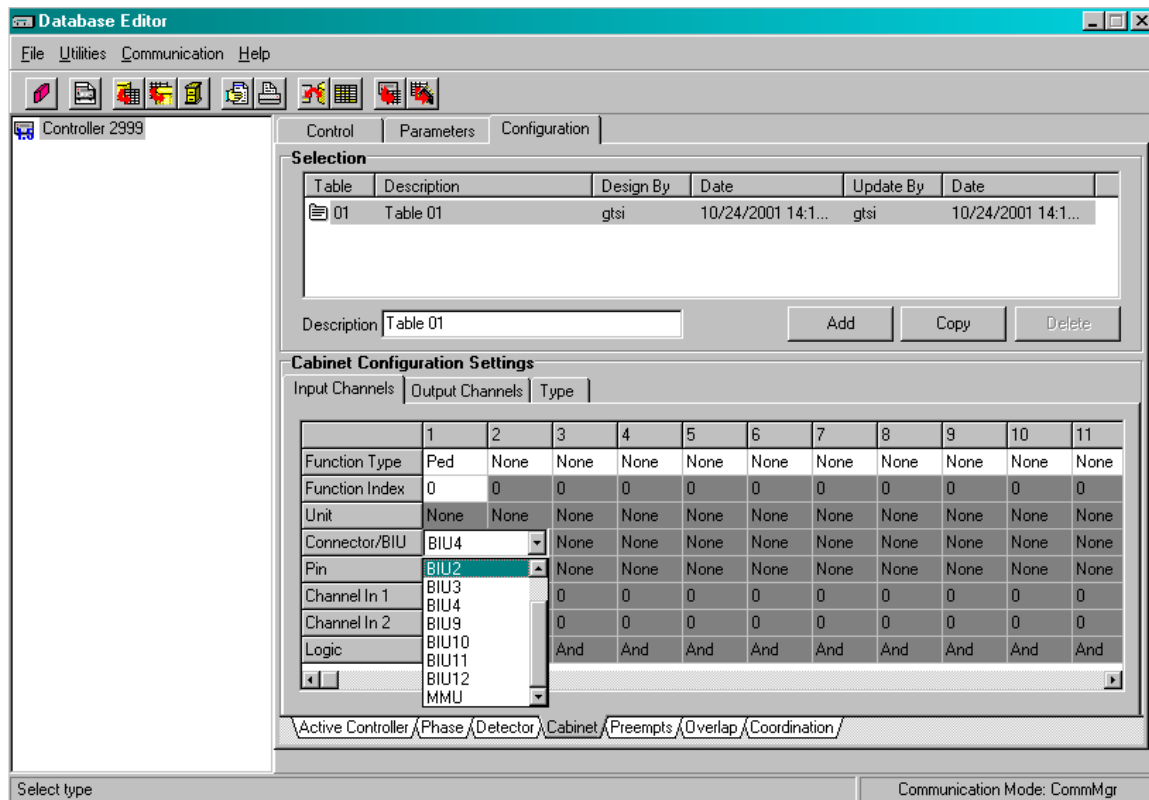


Figure A-21: Cabinet Input Channel Assignment (Connector/BIU) Screen

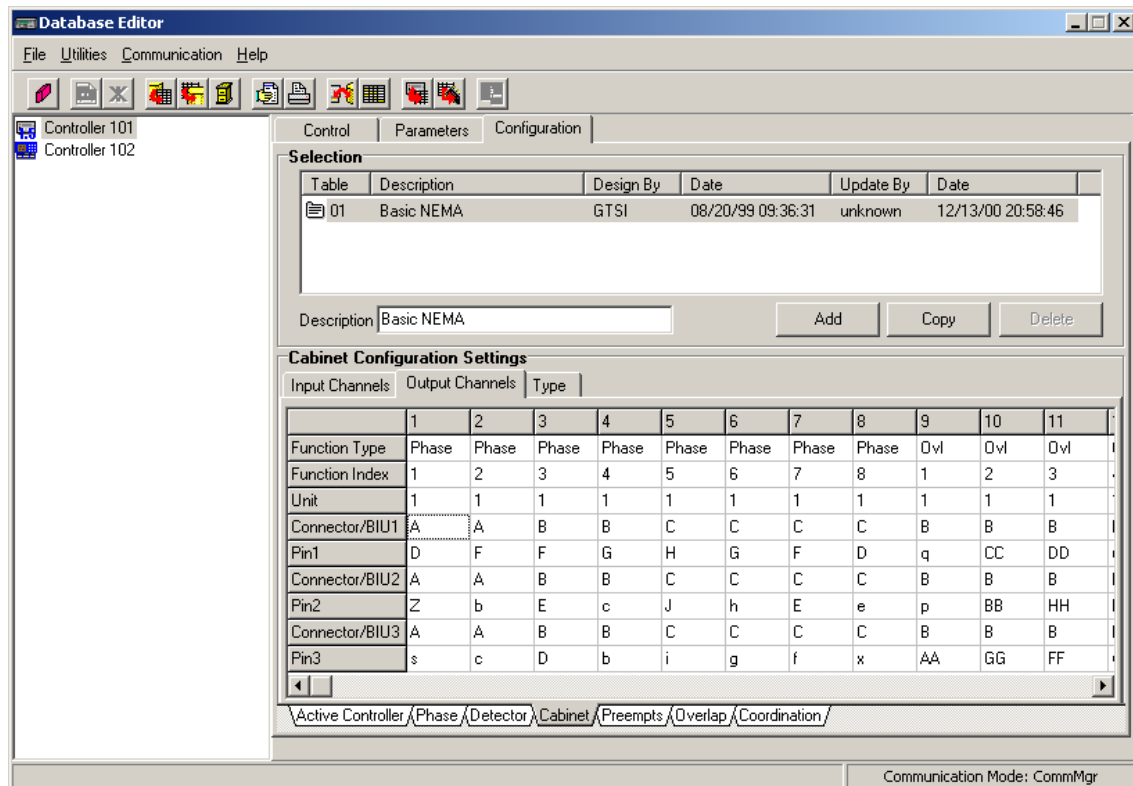


Figure A-22: Cabinet Output Channel Assignment Screen

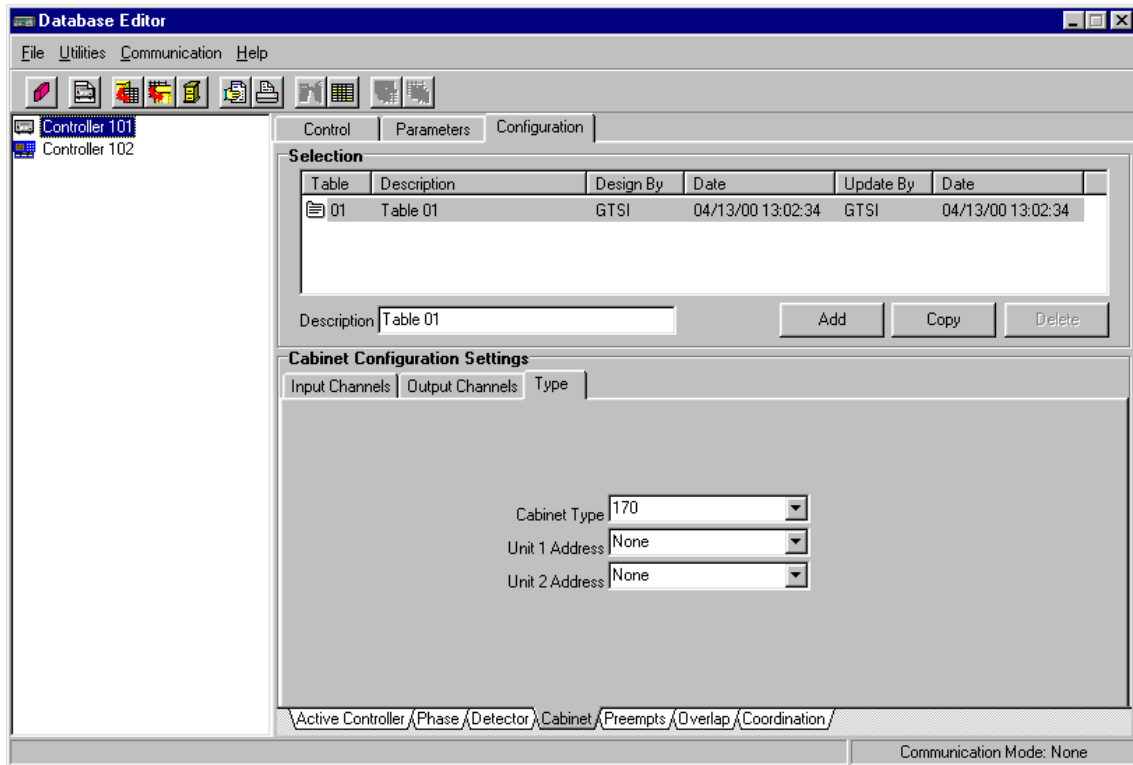


Figure A-23: Cabinet Type Configuration Screen

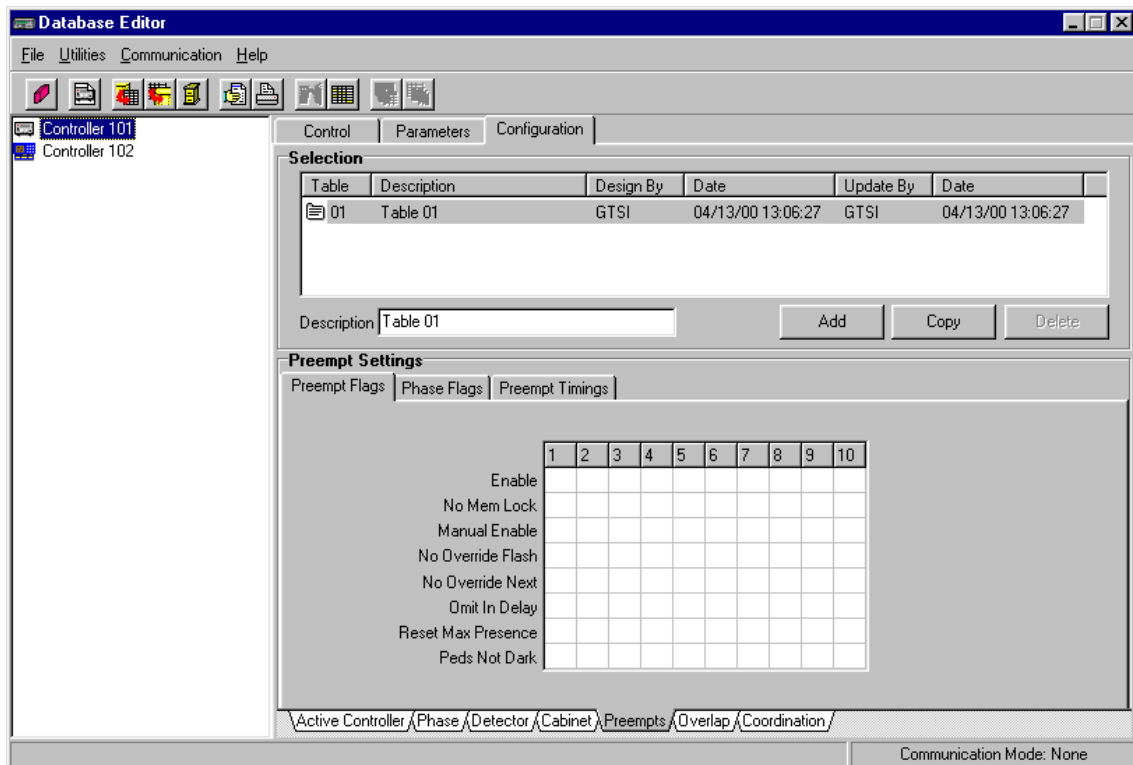


Figure A-24: Preempt Flags Settings Screen

**Database Editor**

File Utilities Communication Help

Controller 101  
Controller 102

Control Parameters Configuration

**Selection**

Table	Description	Design By	Date	Update By	Date
01	Table 01	GTSI	04/13/00 13:06:27	GTSI	04/13/00 13:06:27

Description: Table 01 [Add] [Copy] [Delete]

**Preempt Settings**

Preempt Flags Phase Flags Preempt Timings

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
Entry 1 Phase																				
Entry 2 Phase																				
Dwell Phase																				
Initial Dwell Phase																				
Dwell Ped																				
Recall Phase																				
Exit Phase																				

1 2 3 4 5 6 7 8 9 10 / Preempt

\Active Controller\Phase\Detector\Cabinet\Preempts\Overlap\Coordination/

Communication Mode: None

Figure A-25: Preempt Phase Flags Settings Screen

**Database Editor**

File Utilities Communication Help

Controller 101  
Controller 102

Control Parameters Configuration

**Selection**

Table	Description	Design By	Date	Update By	Date
01	Table 01	GTSI	04/13/00 13:06:27	GTSI	04/13/00 13:06:27

Description: Table 01 [Add] [Copy] [Delete]

**Preempt Settings**

Preempt Flags Phase Flags Preempt Timings

	1	2	3	4	5	6	7	8	9	10
Min Presence	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
Delay	0	0	0	0	0	0	0	0	0	0
Start Min Green	0	0	0	0	0	0	0	0	0	0
Start Walk	0	0	0	0	0	0	0	0	0	0
Start Ped Clear	0	0	0	0	0	0	0	0	0	0
Entry 1 Green	0	0	0	0	0	0	0	0	0	0
Entry 2 Green	0	0	0	0	0	0	0	0	0	0
Min Dwell	0	0	0	0	0	0	0	0	0	0
Dwell Extension	0	0	0	0	0	0	0	0	0	0
Free After	0	0	0	0	0	0	0	0	0	0

\Active Controller\Phase\Detector\Cabinet\Preempts\Overlap\Coordination/

Enter value between 0 and 655

Communication Mode: None

Figure A-26: Preempt Timings Setting Screen



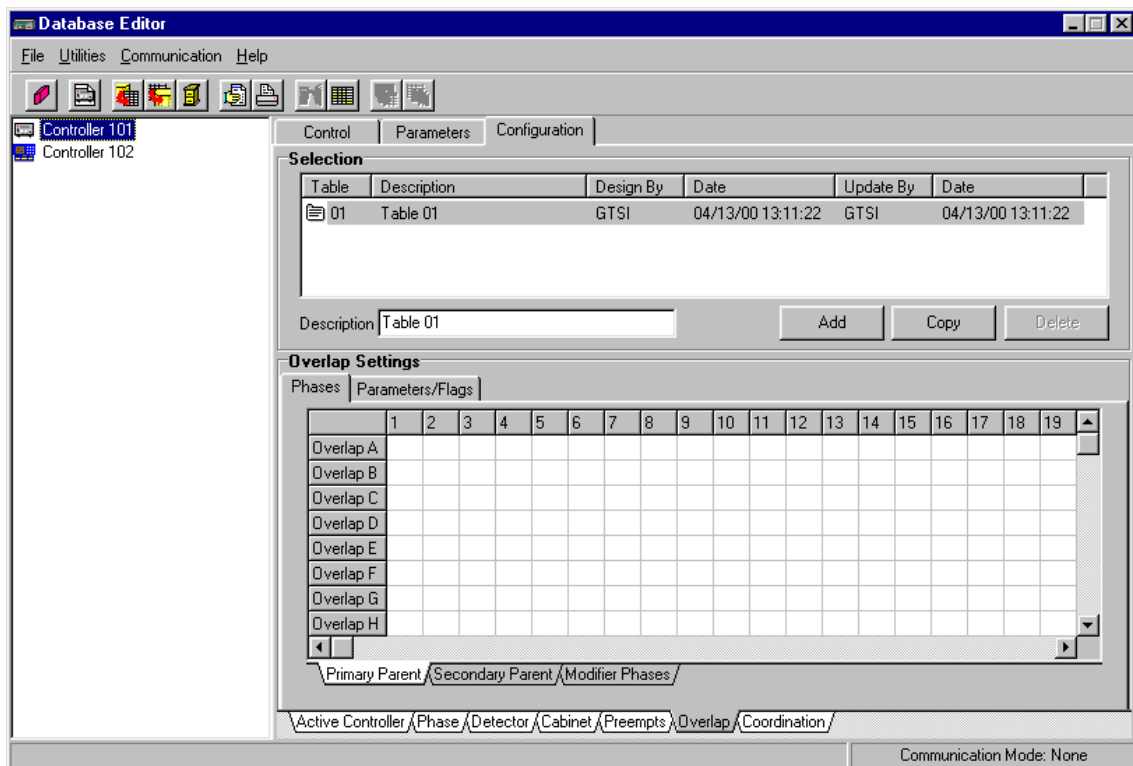


Figure A-27: Overlap Primary Parent Phases Screen

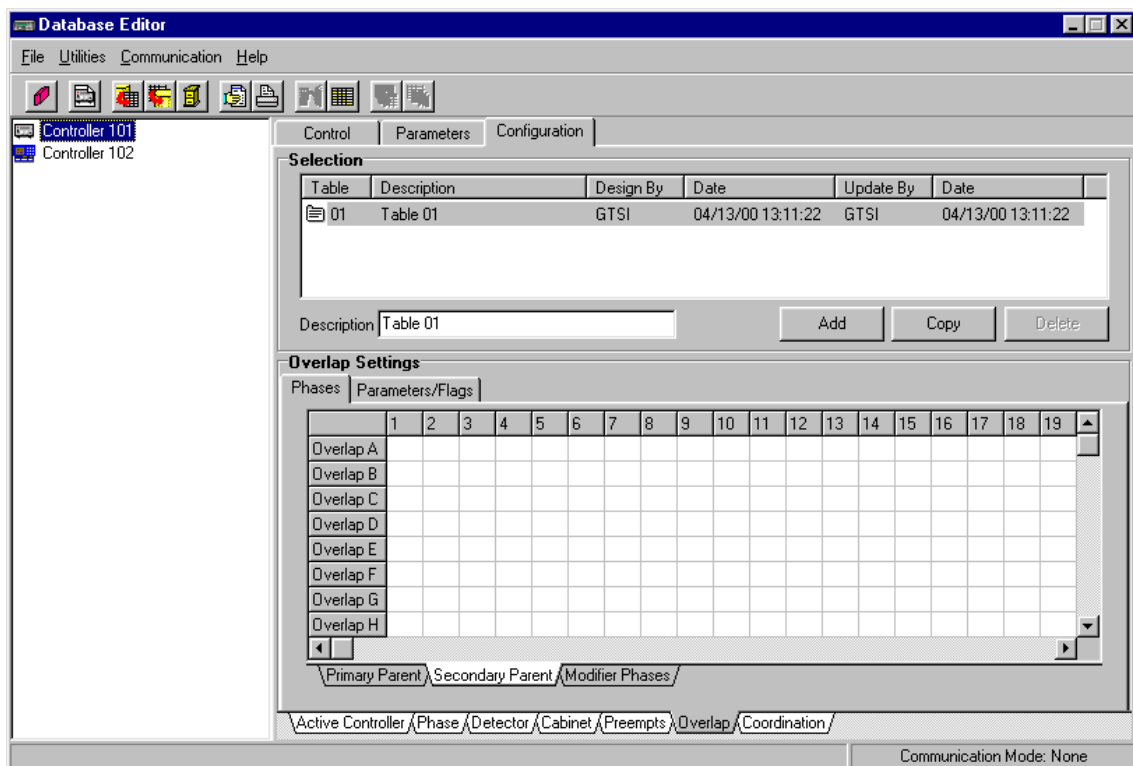


Figure A-28: Overlap Secondary Parent Phases Screen

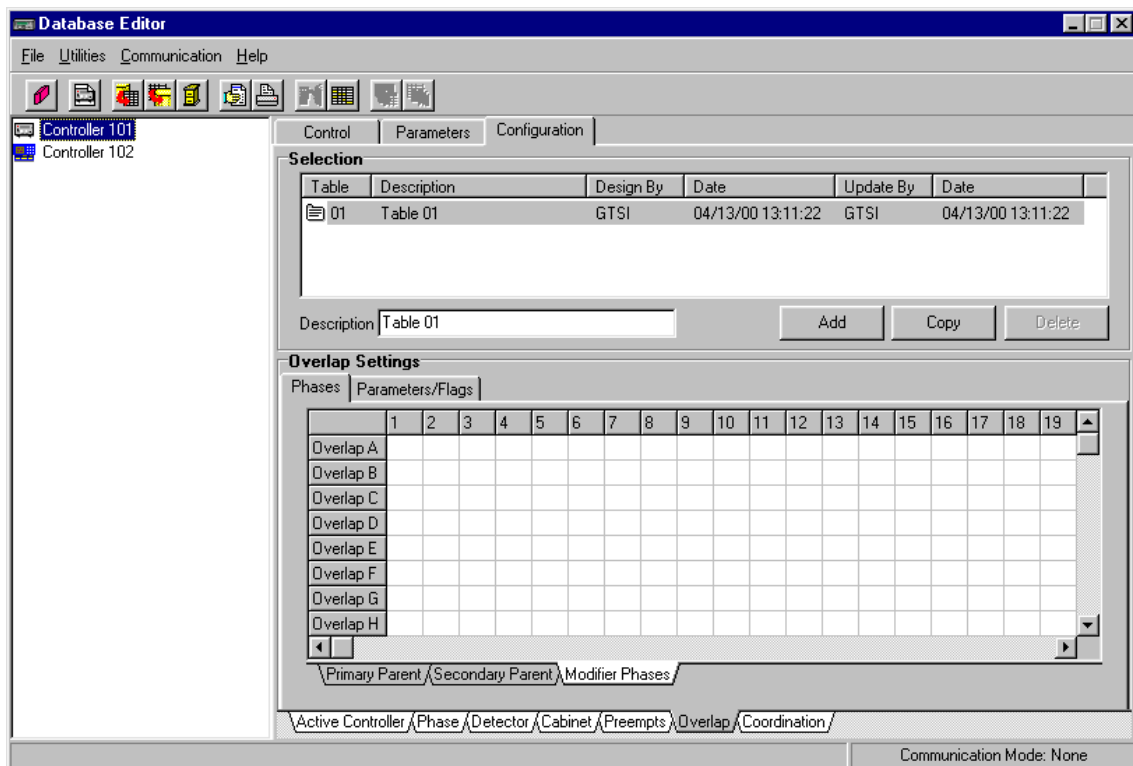


Figure A-29: Overlap Modifier Phases Screen

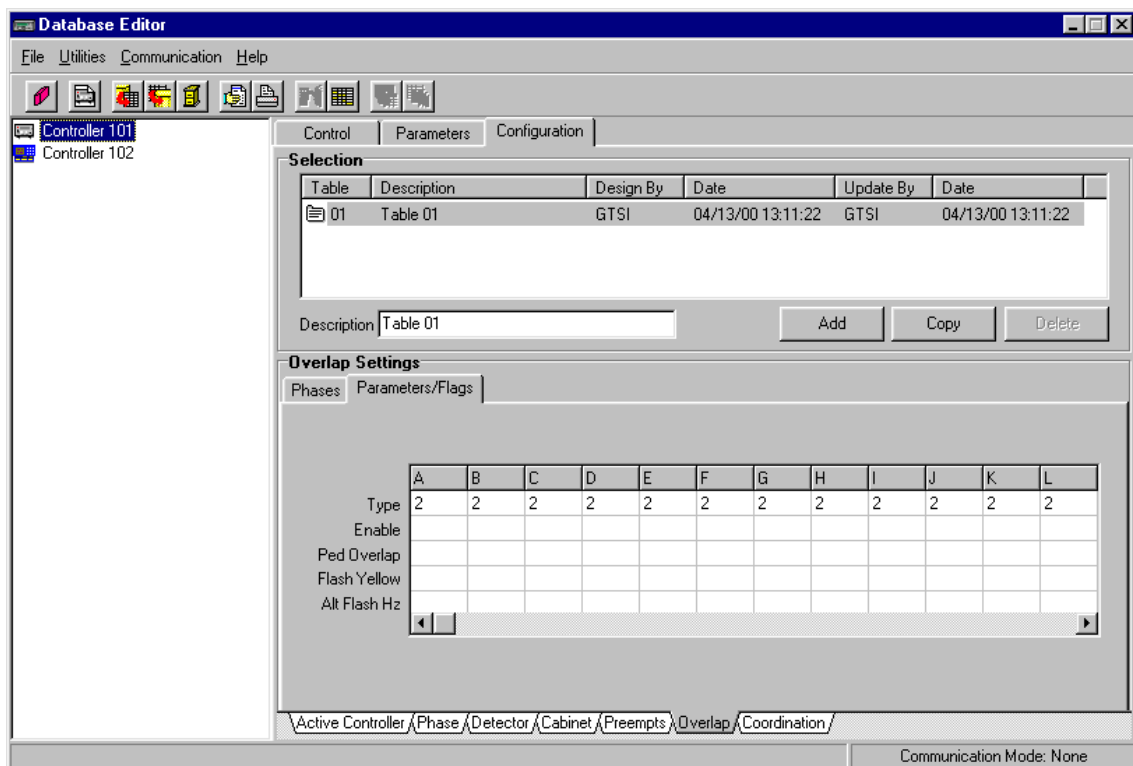


Figure A-30: Overlap Parameters/Flags Screen

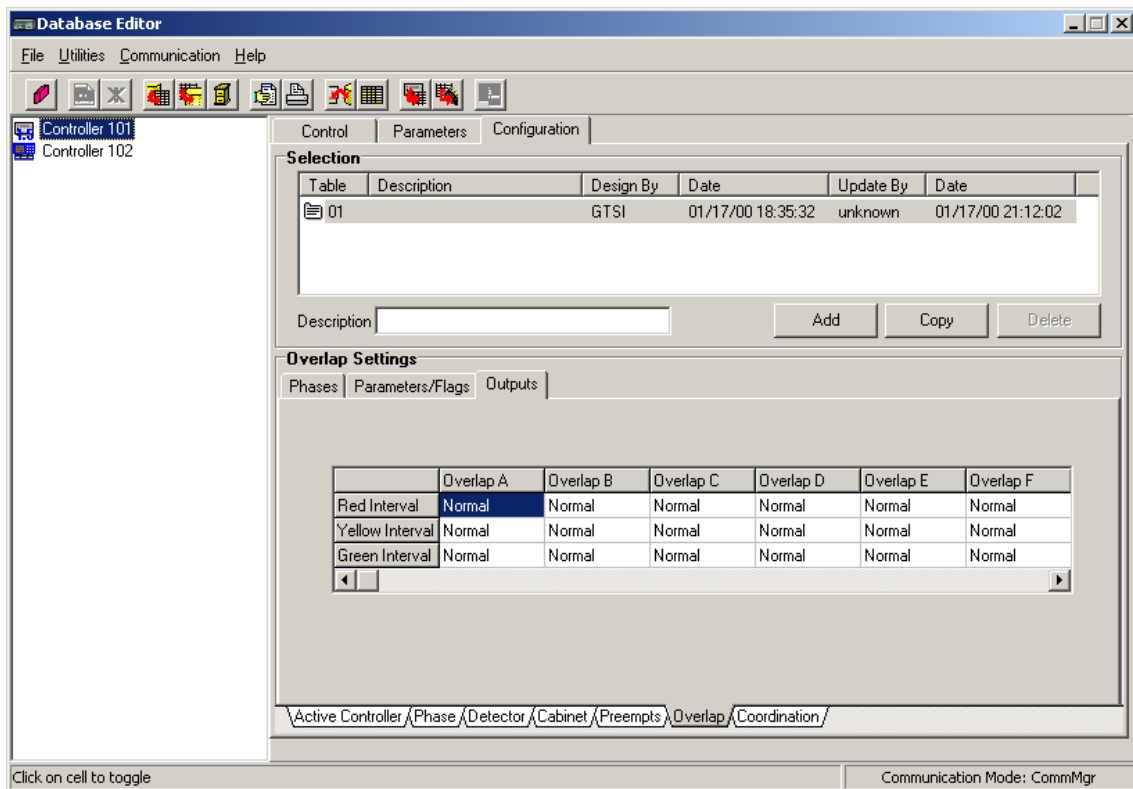


Figure A-31: Overlap Outputs Screen

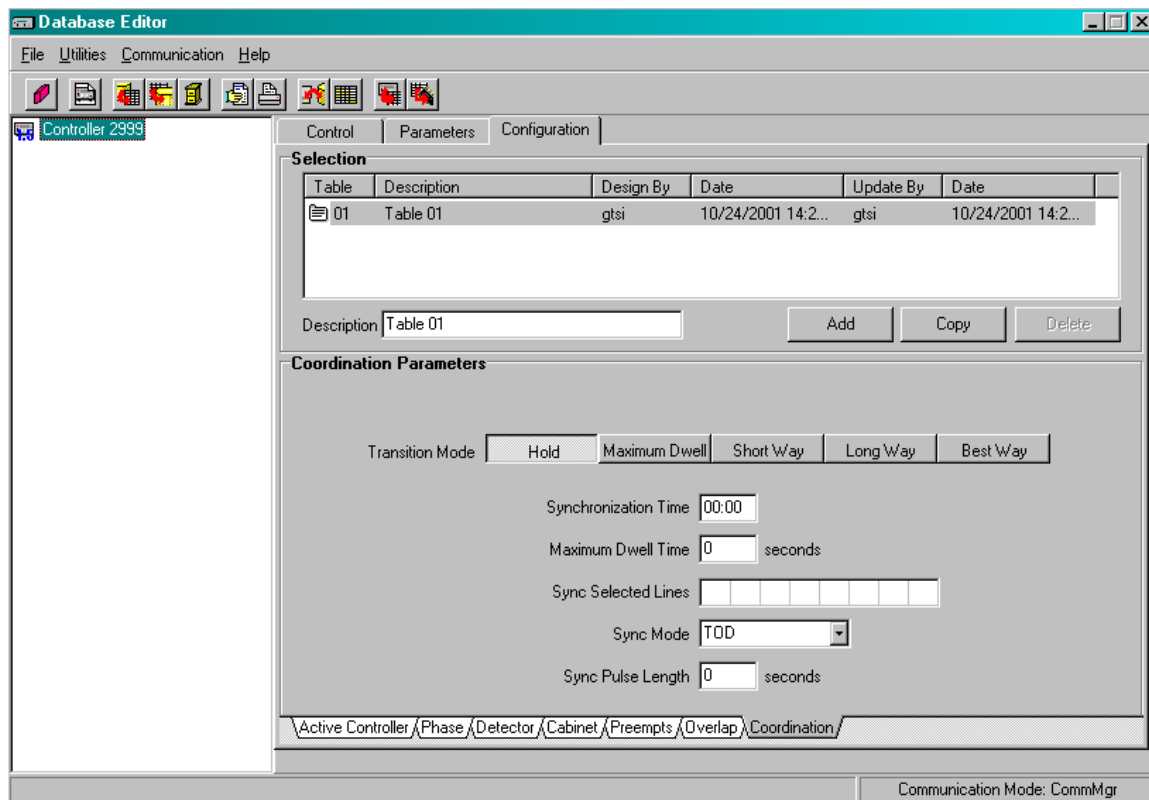


Figure A-32: Coordination Parameters Settings Screen

## APPENDIX B

### Econolite ASC/2 Controller Database Screens

---

*Note: Some screen parameters may be version specific. Check the ASC/2 user manual for a complete description of controller parameters.*

---

**Database Editor**

File Utilities Communication Help

Controller 110

Configuration | Controller | Coordination | Preemptors | Program Assign | Program Steps | Detectors

**Controller Sequence Priority**

	1	2	3	4	5	6	7	8	9	10	11	12
Ring 1 Phases	1	2	3	4	9	10	0	0	0	0	0	0
Ring 2 Phases	5	6	7	8	11	12	0	0	0	0	0	0

**Access Codes**

Supervisor Code 0

Data Change Code 1234

**Phases In Use**

	1	2	3	4	5	6	7	8	9	10	11	12
In Use	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Excl Ped												

**Direction Descriptions**

Phase 1	Phase 2	Phase 3	Phase 4
SBLT	NBTH	WBLT	EBTH
Phase 5	Phase 6	Phase 7	Phase 8
NBLT	SBTH	EBLT	WBTH
Phase 9	Phase 10	Phase 11	Phase 12
Overlap A	Overlap B	Overlap C	Overlap D

**MMU Compatibility Program**

	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2
1															
2															
3															
4															
5															
6															
7															
8															
9															
10															
11															
12															
13															
14															
15															

**Load Switch Assignments**

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Phase/Overlap	0	0	0	0	0	0	0	0	0	0	R	0	H	0	0	0
Ped Phase																

Sequence Data, MMU Data and Options | Telemetry Data and Alarm Enabling

Communication Mode: Local

Figure B-1: Sequence Data, MMU Data and Options Screen

**Database Editor**

File Utilities Communication Help

Controller 110

Configuration | Controller | Coordination | Preemptors | Program Assign | Program Steps | Detectors

**Timing Data By Phase**

	1	2	3	4	5	6	7	8	9	10	11	12
Ring 1 Phases	1	2	3	4					9	10		
Ring 2 Phases					5	6	7	8			11	12
Direction Descriptions	SBLT	NBTH	WBLT	EBTH	NBLT	SBTH	EBLT	WBTH				
Minimum Green Time	3	15	3	7	3	15	3	7	0	0	0	0
Bike Minimum Green Time	0	0	0	0	0	0	0	0	0	0	0	0
Cond.Serv.Min.GreenTime	0	0	0	0	0	0	0	0	0	0	0	0
Pedestrian WALK Time	0	7	0	7	0	7	0	7	0	0	0	0
Pedestrian Clearance Time	0	12	0	18	0	12	0	18	0	0	0	0
Vehicle Extension Time	2.5	5.0	2.5	3.0	2.5	5.0	2.5	3.0	0.0	0.0	0.0	0.0
Alt.VehicleExtensionTime	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
Max Green Extension Time	0	0	0	0	0	0	0	0	0	0	0	0
Max Green Time 1	35	80	25	45	35	80	25	45	0	0	0	0
Max Green Time 2	35	80	25	45	35	80	25	45	0	0	0	0
Max Green Time 3	35	80	25	45	35	80	25	45	0	0	0	0
Det Fail Max Green Time	0	0	0	0	0	0	0	0	0	0	0	0
Yellow Clearance Time	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.0	3.0	3.0	3.0
Red Clearance Time	1.0	2.0	2.0	1.5	1.0	2.0	1.0	1.5	0.0	0.0	0.0	0.0

Timing | Overlaps | Start/Flash | Options | Clock/Calendar Setup and Other Info

Communication Mode: Local

Figure B-2: Phase Timing Screen



**Database Editor**

File Utilities Communication Help

Controller 110

Configuration Controller Coordination Preemptors Program Assign Program Steps Detectors

**Vehicle Phase as Overlap**  
Consists of Vehicle Phases

	1	2	3	4	5	6	7	8	9	10	11	12
1												
2												
3												
4												
5												
6												
7												
8												
9												
10												
11												
12												

**Pedestrian Phase as Overlap**  
Consists of Pedestrian Phases

	1	2	3	4	5	6	7	8	9	10	11	12
1												
2												
3												
4												
5												
6												
7												
8												
9												
10												
11												
12												

**Ped. Carryover**

Start Phase	Carryover Phase
1	0
2	0
3	0
4	0
5	0
6	0
7	0
8	0
9	0
10	0
11	0
12	0

**Overlap Data**

Overlap:  Standard Protected Permitted Enable Lead Enable Lag Spare

	1	2	3	4	5	6	7	8	9	10	11	12
1												
2												
3												
4												
5												
6												
7												
8												
9												
10												
11												
12												

**Overlap Timers**

Advance Green	0.0
Lag/Lead Green	0.0
Lag/Lead Yellow	0.0
Lag/Lead Red	0.0

Timing Overlaps Start/Flash Options Clock/Calendar Setup and Other Info

Communication Mode: Local

Figure B-3: Overlap Setting Screen

**Database Editor**

File Utilities Communication Help

Controller 110

Configuration Controller Coordination Preemptors Program Assign Program Steps Detectors

**Power Start Options**

	1	2	3	4	5	6	7	8	9	10	11	12
Power Start												
External Start												
Into Remote Flash												
Exit Remote Flash												
Remote Flash Yel												
Flash Together												

**Remote Flash Options**

- ☐ Out of Flash Yellow
- ☐ Out of Flash Red
- ☐ Minimum Recall
- ☐ Alternate Flash
- ☐ Flash Thru Load Switch
- ☐ Cycle Thru Phases
- ☐ Yellow Flash Main Street

**Initialization Interval**

	Green	Yellow	Red	Yel Ovlp
Power Start				
External Start				

**Dimming Options**

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Green/Walk																
Yellow/Pedestrian Clearance																
Red/Don't Walk																

Timing Overlaps Start/Flash Options Clock/Calendar Setup and Other Info

Communication Mode: Local

Figure B-4: Start, Flash, and Dim Setting Screen

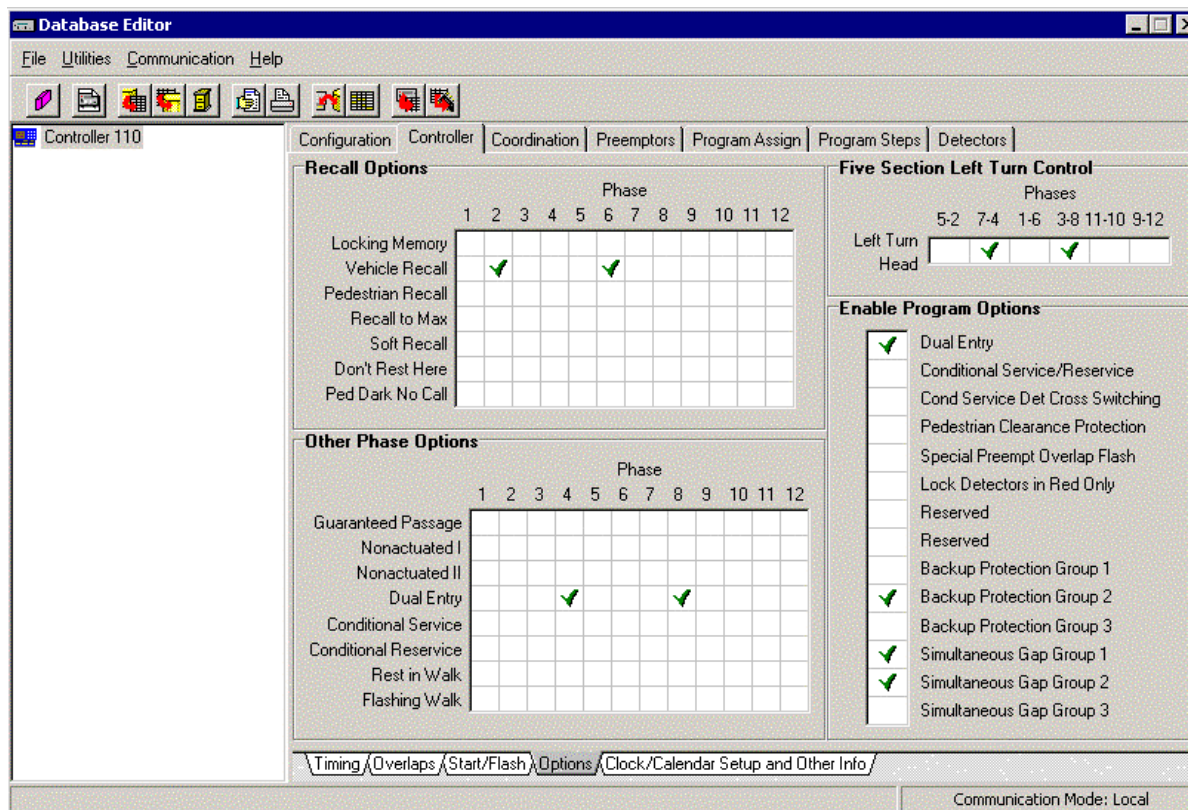


Figure B-5: Controller Options Screen

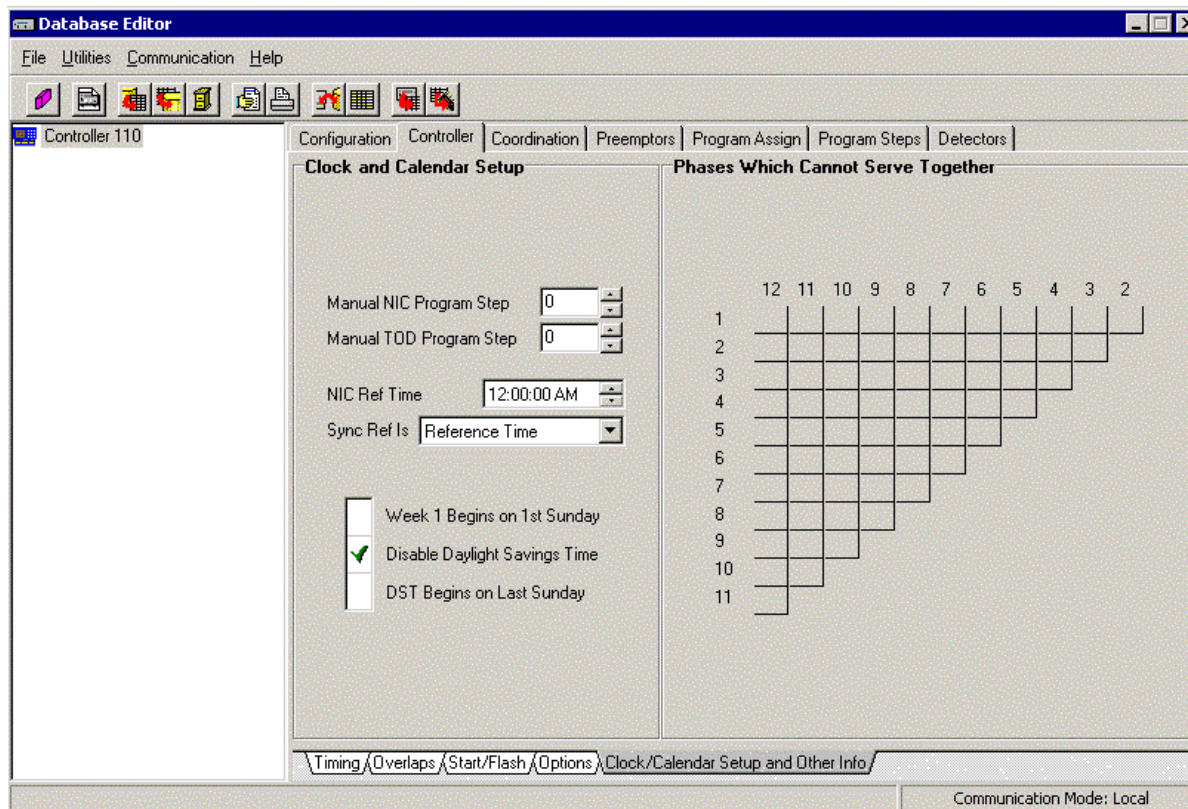


Figure B-6: Clock/Calendar Setup and Phase Info Screen



**Database Editor**

File Utilities Communication Help

Controller 110

Configuration | Controller | Coordination | Preemptors | Program Assign | Program Steps | Detectors

**Manual Pattern Setting**

☐ Enable Pattern Number 0

**Split Demand**

	Demand 1	Demand 2
Demand Call Time	0	0
Demand Cycle Count	0	0

Demand 1 Phases: 1 2 3 4 5 6 7 8 9 10 11 12

Demand 2 Phases: 1 2 3 4 5 6 7 8 9 10 11 12

**Auto Permissive Minimum Green**

1	2	3	4	5	6
0	0	0	0	0	0

7	8	9	10	11	12
0	0	0	0	0	0

**Free Alternate Sequence**

A	B	C	D	E	F

**Options**

Interconnect Format: Standard

Interconnect Source: Telemetry

Resync Count: 0

Transition: Smooth

- ☐ Actuated Coordinated Phase
- ☐ Actuated Walk Rest
- ☒ Inhibit Maximum Timing
- ☐ Maximum 2 Select
- ☐ Multisync
- ☐ Floating Force Off

Options / Patterns

Communication Mode: Local

Figure B-7: Coordination Options Screen

**Database Editor**

File Utilities Communication Help

Controller 110

Configuration | Controller | Coordination | Preemptors | Program Assign | Program Steps | Detectors

Pattern Number 1 Dwell Period 0

**Cycle, Offset, Split Setup**

Cycle Length 140 Cycle Number 1

Offset 84 Offset Number 1

Offset Units Split Number 1

Seconds

**Phase Splits**

1	2	3	4	5	6
18	65	12	45	0	0
20	63	12	45	0	0

Split Units: Seconds

7	8	9	10	11	12

Split Extension: 1 2

Split Demand Pattern: 0 0

**Vehicle Permissive Period Options**

Vehicle Permissive Period 1 0

Vehicle Permissive Period 2 0

Vehicle Permissive 2 Displacement 0

**Phase Options**

	1	2	3	4	5	6	7	8	9	10	11	12
Coord Phases												
Vehicle Recall												
Veh Max Recall												
Pedestrian Recall												
Vehicle Omit												

☐ Allow Phase Reserve

**Alternate Sequence**

A	B	C	D	E	F

Options / Patterns

Communication Mode: Local

Figure B-8: Coordination Patterns Screen



**Database Editor**

File Utilities Communication Help

Controller 110

Configuration | Controller | Coordination | **Preemptors** | Program Assign | Program Steps | Detectors

**General Options**

	Bus Preemptors			
	1	2	3	4
Preemptor Active	✓	✓		
Detector Lock	✓	✓		
Maximum Time	45	45	0	0
Reservice Time	60	60	0	0
Delay Time	2	2	0	0
Inhibit Time	0	0	0	0
Entrance Green	0	0	0	0
Entrance Pedestrian Clearance	0	0	0	0
Entrance Yellow	0.0	0.0	0.0	0.0
Entrance Red	0.0	0.0	0.0	0.0
Minimum Hold Time	0	0	0	0

**Hold Phase Assignments**

	Phases											
	1	2	3	4	5	6	7	8	9	10	11	12
Preemptor 1		✓				✓						
Preemptor 2				✓				✓				
Preemptor 3												
Preemptor 4												

Priority Preemptors | **Bus Preemptors**

Communication Mode: Local

Figure B-9: Bus Preemptors Screen

**Database Editor**

File Utilities Communication Help

Controller 110

Configuration | Controller | Coordination | Preemptors | **Program Assign** | Program Steps | Detectors

**Weekly Programs**

	Weekly Program									
	1	2	3	4	5	6	7	8	9	10
Sunday	3	3	3	3	3	3	3	3	3	3
Monday	1	1	1	1	1	1	1	1	1	1
Tuesday	1	1	1	1	1	1	1	1	1	1
Wednesday	1	1	1	1	1	1	1	1	1	1
Thursday	1	1	1	1	1	1	1	1	1	1
Friday	1	1	1	1	1	1	1	1	1	1
Saturday	2	2	2	2	2	2	2	2	2	2

**Yearly Programs**

	Week of Year																	
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1

	Week of Year																	
	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36
1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1

	Week of Year																
	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53
1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1

Weekly and Yearly Programs | **Holiday Programs**

Communication Mode: Local

Figure B-10: Weekly and Yearly Programs Screen

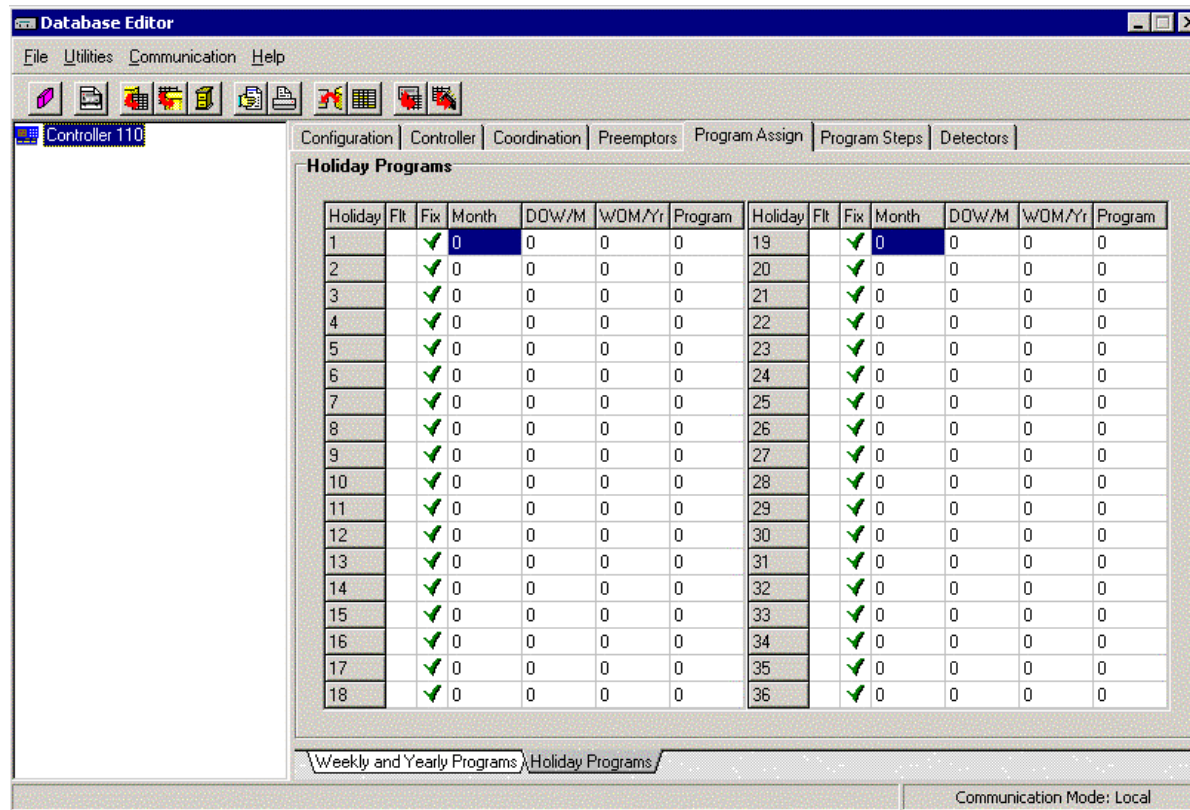


Figure B-11: Holiday Program Steps Screen

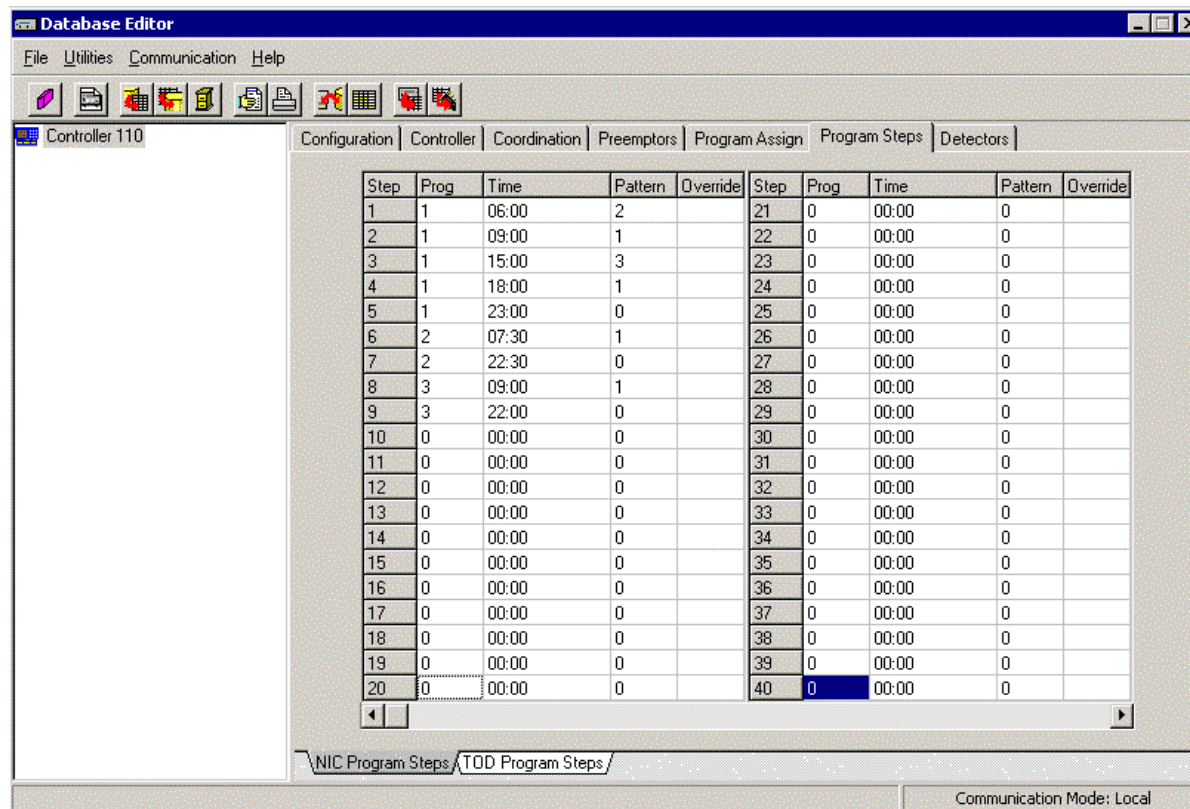


Figure B-12: NIC Program Steps Screen



**Database Editor**

File Utilities Communication Help

Controller 110

Configuration | Controller | Coordination | Preemptors | Program Assign | Program Steps | Detectors

TOD Program Step  Day Program Number  Step Begins

**General Options**

☐ Dimming Enable      ☐ Flash  
☐ Red Rest      ☐ Alt Vehicle Extension  
☐ Detector Log Enabled       Detector Diagnostic Plan  
☐ Spare 4      ☐ Spare 5  
                                  ☐ Spare 3

**Phase Specific Options**

	Phases											
	1	2	3	4	5	6	7	8	9	10	11	12
Max 2 Enable												
Max 3 Enable												
Vehicle Recall												
Vehicle Max Recall												
Predestrian Recall												
Conditional Service Inhibit												
Phase Omit												
Special Functions												

**Alternate Sequence**

	A	B	C	D	E	F

NIC Program Steps | TOD Program Steps

Communication Mode: Local

Figure B-13: TOD Program Steps Screen

**Database Editor**

File Utilities Communication Help

Controller 110

Configuration | Controller | Coordination | Preemptors | Program Assign | Program Steps | Detectors

N U E R  
 M T P R  
 B Y P R  
 E P R  
 R E

Phase Assignment

	1	2	3	4	5	6	7	8	9	10	11	12		1	2	3	4	5	6	7	8	9	10	11	12
1	0	✓											0.0	0											
2	0		✓										0.0	0											
3	0			✓									0.0	0											
4	0				✓								0.0	0											
5	0					✓							0.0	0											
6	0						✓						0.0	0											
7	0							✓					0.0	0											
8	0								✓				0.0	0											
9	0									✓			0.0	0											
10	0										✓		0.0	0											
11	0											✓	0.0	0											
12	0												0.0	0											
13	0												0.0	0											
14	0												0.0	0											

**Detector Types:**

0 = Normal	3 = Stop Bar	6 = Calling
1 = Extend/Delay	4 = Stop Bar With Extend Timer	7 = Bike
2 = Extend Call/Delay Call	5 = Stop Bar With Extend Timer Reset	8 = Dilemma Zone

Detector Parameters | Diagnostics Assignment | Other Setup

Communication Mode: Local

Figure B-14: Detectors Parameters Screen

**Database Editor**

File Utilities Communication Help

Controller 110

Configuration | Controller | Coordination | Preemptors | Program Assign | Program Steps | Detectors

NUMBER	1 S C A L I N G		2 S C A L I N G		3 S C A L I N G		4 S C A L I N G		5 S C A L I N G		6 S C A L I N G		7 S C A L I N G		8 S C A L I N G		A F C T I O N
	D I A G	A G	D I A G	A G	D I A G	A G	D I A G	A G	D I A G	A G	D I A G	A G	D I A G	A G	D I A G	A G	
1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0
2	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0
3	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0
4	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0
5	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0
6	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0
7	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0
8	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0
9	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0
10	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0
11	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0
12	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0
13	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0

**Fail Actions Are:**  
 0 = No Action      1 = Minimum Recall      2 = Maximum Recall      3 = Programmed

Detector Parameters | **Diagnostics Assignment** | Other Setup

Communication Mode: Local

Figure B-15: Detectors Assignment Screen

**Database Editor**

File Utilities Communication Help

Controller 110

Configuration | Controller | Coordination | Preemptors | Program Assign | Program Steps | Detectors

**Detector Diagnostics Setup**

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19
No Activity	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Max Presence	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Erratic Counts	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

**Speed Detectors**

☒ Inches ☐ Centimeters

One Detector Speed

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Local Detector Number	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Vehicle Length	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Length of Loop	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Two Detector Speed

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Local Detector Number	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Speed Trap Length	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Enable Log ☐

**Pedestrian and System Detector Local Assignment**

Interval

Local Pedestrian Detector Assignment												Local System Detector Assignment															
1	2	3	4	5	6	7	8	9	10	11	12	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Note: System master designations crossed to local system detector numbers:  
 SDA1=1&9 SDA2=2&10 SDB1=3&11 SDB2=4&12 SDC1=5&13 SDC2=6&14 SDD1=7&15 SDD2=8&16

Detector Parameters | **Diagnostics Assignment** | Other Setup

Communication Mode: Local

Figure B-16: Other Detectors Setup Screen

## REFERENCE

This section provides a quick reference for the *icons*<sup>TM</sup> Menu Bar items. A drop down menu list for any of these menu items can be selected by left clicking its menu title. A brief description for each menu item is provided below along with the reference section in this manual where the function is used and further explained. Depending upon the system configuration and level of security access granted the current user, some of these menu items may not be selectable.

### THE FILE MENU

<b>Sign Off:</b>	Sign off currently signed on user. Section 2.
<b>Sign On:</b>	Sign on new user. Section 2.
<b>Open Preference Set:</b>	Open a previously defined preference set to restore the associated <i>icons</i> <sup>TM</sup> workspace settings. Section 2 – Saving Icons Workspace.
<b>Save Preference Set:</b>	Save the current <i>icons</i> <sup>TM</sup> workspace settings to under the current preference set. This preference set can be recalled later to restore these settings. Section 2 – Saving Icons Workspace.
<b>Save Preference Set As:</b>	Save the current <i>icons</i> <sup>TM</sup> workspace settings to under the current preference set. This preference set can be recalled later to restore these settings. Section 2 – Saving Icons Workspace.
<b>Recorder:</b>	Start Recording, Stop Recording, and Test Macro operations associated with assigning actions to Button Bar objects. Section 2 – Icons Workspace.
<b>Exit:</b>	Exit the <i>icons</i> <sup>TM</sup> iGUI application. Section 2.

### THE VIEW MENU

<b>Button Bar:</b>	Show/Hide the Button Bar. Section 2.
<b>Selection Bar:</b>	Show/Hide the Selection Bar. Section 2.
<b>Logo Icons:</b>	Show/Hide the Logo Icon. Section 2.
<b>Fixed Aspect:</b>	Modify the aspect ratio of the map display. Section 2.
<b>Auto Layers:</b>	Controls which layers are visible at various map zoom levels. Section 2.
<b>Map Scrolling:</b>	Show/Hide the map scrolling bars. Section 2.
<b>Home View:</b>	Returns the map zoom level and location to the default home view. Section 2.
<b>Window Layout:</b>	Save and load the current <i>icons</i> <sup>TM</sup> workspace settings for the current user. Section 2.
<b>Layers:</b>	Show/Hide the various map layers. Section 2.
<b>Zoom:</b>	Zoom map to fixed zoom levels. Section 2.
<b>Box Zoom Mode:</b>	Toggles on/off the box zoom mode. Section 2.
<b>Link:</b>	Select one of four parameters (V, O, KO, S) to view on the link graphic. Section 8.



## THE OBJECTS MENU

This menu item allows the user to view objects at various hierarchical levels. Selecting one of the entity types below displays a selection screen with only those entity types and child members. Section 2 – System Objects.

**System**  
**Zone**  
**Section**  
**Master**  
**Link**  
**Signal**  
**Detector**  
**CCTV**  
**DMS**  
**Deselect All**

## THE MONITOR MENU

<b>System Maps:</b>	This menu item is only displayed if Area Maps are defined and allows the user to select between main and area maps to display. Section 2 – System Maps.
<b>Devices:</b>	Displays the dialog box for the selected devices. Section 2 – System Objects.
<b>System Status:</b>	Activates the System Status screen showing the current status of all field devices. Section 6 – System Status.
<b>Communications Status:</b>	Activates the Communications Status screen showing the current communications status to all field devices. Section 6 – Communications Status.
<b>Event Log:</b>	Activates the Event Log screen showing historical logged information for all field devices. Section 6 – Event Log.
<b>VOS Display:</b>	Activates the System Detector VOS display showing historical accumulated volume, occupancy, and speed data. Section 7.
<b>Alarm Log:</b>	Activates the Alarm Log displaying a record of all alarm activities. Section 11.
<b>Controller DB Comparison:</b>	Activates the Controller Database Comparison Results log displaying the results of the operation. Section 12.

## THE PARAMS MENU

This menu item allows the user to access the controller database screens to load controller timing/configuration settings from the database, edit controller parameters, and upload/download current controller settings. Section 12.

## THE CONTROL MENU

<b>Manual Assignment:</b>	Activates the Manual Assignment dialog box that allows the user to define a limited duration action to be applied at a specific date and time. Section 5 – Manual Override.
<b>Active Configuration:</b>	Displays a status screen showing all currently active controller actions. Section 5 – Active Configuration.

## THE ALERT MENU

<b>Page Group:</b>	Activates a dialog box to manually page a group. Section 11 – Manual Group Page.
<b>Page Individual:</b>	Activates a dialog box to manually page an individual. Section 11 – Manual Individual Page.

## THE SETUP MENU

<b>Traffic Responsive:</b>	Setup and configure Traffic Responsive traffic control operation. Section 5 – Traffic Responsive.
<b>TOD Schedule:</b>	Setup and configure Time-of-day (TOD) Scheduled traffic control operation. Section 5 – TOD Schedule.
<b>Holiday Assignment:</b>	Setup and configure Holiday Assignments used with the TOD Schedule control mode. Section 5 – Holiday Assignment.
<b>Action Set Editor:</b>	Setup and configure action sets. Section 5 – Action Sets.
<b>Alarms and Paging:</b>	Define and configure individuals, groups, and Alarm Triggers. Section 11 – Alarms and Paging.

## THE ANALYSIS MENU

<b>Split Monitor:</b>	Activates the Split Monitor analysis tool. Section 9 – Split Monitor.
<b>Time/Space Diagram:</b>	Activates the Time/Space Diagram analysis tool. Section 9 – Time Space Diagram.

## THE ADMINISTRATION MENU

<b>Security:</b>	Define and configure users, user groups, and jurisdictions. Section 3 – Security.
<b>Configuration:</b>	Activates the System Configuration tool. Section 4 – System Configuration.

## THE WINDOW MENU

This menu item is only visible if individual device dialog windows are open on the *icons™* desktop. The user can manage the organization of the desktop by arranging or hiding currently opened windows. Section 2 – Customizing the Icons Workspace.

## THE REPORTS MENU

<b>Alarm:</b>	Activates the Alarm Reports form to show alarm history. Section 6 – Alarm Report.
<b>Stuck Preempt Events:</b>	Activates the Stuck Preempt Events Report form to show current or historical information on suspected stuck preempt detectors. Section 6 – Stuck Preempt Report.

## THE HELP MENU

This menu item provides help information and version information on the *icons*<sup>TM</sup> system. Section 2 – The Help Menu.



**SIEMENS**

**GTS** Gardner  
Transportation  
Systems

A large, stylized blue swoosh graphic that curves around the GTS logo, starting from the bottom left and ending at the top right, with a lighter blue inner curve.

**Siemens Energy & Automation**  
Gardner Transportation Systems Business Unit